



v85NX

85cm Ku-Ka Convertible Maritime VSAT Antenna System

Installation & Operation User Guide

Serial number of the product

This serial number will be required for all troubleshooting or service inquiries.

Intellian

© 2018 Intellian Technologies, Inc. All rights reserved. Intellian and the Intellian logo are trademarks of Intellian Technologies, Inc., registered in the U.S. and other countries. The v85NX is a trademark of Intellian Technologies, Inc. Intellian may have patents, patent applications, trademarks, copyrights, or other intellectual property rights covering subject matter in this document. Except as expressly provided in any written license agreement from Intellian, the furnishing of this document does not give you any license to these patents, trademarks, copyrights, or other intellectual property. All other logos, trademarks, and registered trademarks are the property of their respective owners. Information in this document is subject to change without notice. Every effort has been made to ensure that the information in this guide is accurate. Intellian is not responsible for printing or clerical errors.

Disclaimer

The information in this user guide is subject to change without prior notice through a product life cycle. A printed version of the guide is periodically updated and may contain inaccuracies or omissions compared to the recent product information. The most up-to-date information can be readily accessible on our website at <http://www.Intelliantech.com>.

Precautions

 
Warnings, Cautions, and Notes

WARNING, CAUTION, and NOTE statements are used throughout this manual to emphasize important and critical information. You must read these statements to help ensure safety and to prevent product damage. The statements are defined below.

 WARNING	<p>WARNING</p> <p>WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.</p>
 CAUTION	<p>CAUTION</p> <p>CAUTION indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury. It may also be used to alert against unsafe practices.</p>
 NOTE	<p>NOTE</p> <p>A NOTE statement is used to notify people of installation, operation, programming, or maintenance information that is important, but not hazard-related.</p>

General Precautions

Before you use the antenna, make sure that you have read and understood all safety requirements.

 THIS WAY UP	<ul style="list-style-type: none"> Place the boxes/crates on the floor with noting the direction of the arrow.
 FRAGILE	<ul style="list-style-type: none"> Since the Radome is fragile, handle it with care. Do not apply excessive pressure or shock. These may cause surface cracking or other damage.
 DO NOT STACK	<ul style="list-style-type: none"> Do not stack boxes/crates as there is a risk boxes/crates may fall.
 KEEP DRY	<ul style="list-style-type: none"> Always make sure the antenna is stored on a dried floor. The antenna can withstand ordinary rain. However, its water resistance cannot be guaranteed if submerged. Keep the antenna in a cool, dry place with sufficient ventilation. Do not store it outside with a tarp, tent, etc.

Certifications

FCC Declaration of Conformity

Intellian Technologies, manufactures of stabilized maritime VSAT antenna systems for satellite communication at sea, supplies stabilized maritime VSAT antenna systems to the satellite communication service providers for their ESV (Earth Station on Vessels) networks.

FCC §25.222 defines the provisions for blanket licensing of ESV antennas operation in the Ku-band. It defines the antennas radiation, and each article regulates the followings;

- §25.222 (a)(1)(i)(A): Regulation for Azimuth Direction & Co Polarization
- §25.222 (a)(2)(i)(B): Regulation for Other Direction & Co Polarization
- §25.222 (a)(1)(i)(C): Regulation for Cross Polarization

Intellian Technologies, Inc. declares that v85 complies with the threshold level as defined in §25.222(a)(1)(i)(A);, and declares that v85 is in accordance with all defined regulations from §25.222(a)(1)(i)(B) to §25.222(a)(1)(i)(C) at the below stated input power spectral density, with an N value of 1.

Product description	Intellian v85NX, 85cm Ku-band maritime VSAT antenna system
EIRP spectral density limit	-18.08 dBW/ 4KHz

Intellian Technologies, Inc. declares that the above antenna will maintain a pointing error of less than or equal to 0.2 degree under specified ship motion conditions in accordance with the requirements of §25.222 (a)(1)(ii).

Intellian Technologies, Inc. declares that the above antennas will automatically cease the transmission with a mute command to the modem within 100 milliseconds if the target satellite and the axis of the main lobe of the ESV antenna exceeds 0.5 degree and will not resume until such angle is less than or equal to 0.2 degree in accordance with the requirements of §25.222 (a)(1)(iii)

Radiation pattern data is available upon request to verify the conformance.

Authority: Steve Cha
VP of Engineering/ R&D



Signature: _____

Date: August 02, 2018

Intellian Technologies, Inc.
US Headquarters
11 Studebaker
Irvine, CA 92618 USA
Tel: +1 949 727 4498

Intellian Technologies, Inc.
EMEA & APAC Headquarters
5F IDIS Tower, 344, Pangyo-ro (Sampyeong-dong),
Bundang-gu, Seongnam-si, Gyeonggi-do 13493 Korea
Tel: +82 2 511 2244

RED Declaration of Conformity (DoC)

We, Intellian Technologies, Inc. located at 18-7, Jinwisandan-ro, Jinwi-myeon, Pyeongtaek-si, Gyeonggi-do 17709, Korea declare under our sole responsibility that the product(s) described in the below to which this declaration relates is in conformity with the *essential requirements* and *other relevant requirements* of the Radio Equipment Directive (2014/53/EU).

Product Information:

Product Name(s):	Intellian v130G, 1.25m Ku-band Maritime VSAT Antenna System Intellian v100, 1m Ku-band Maritime VSAT Antenna System Intellian v80G, 83cm Ku-band Maritime VSAT Antenna System Intellian v85NX, 85cm Ku-band Maritime VSAT Antenna System Intellian v65, 65cm Ku-band Maritime VSAT Antenna System
-------------------------	---

To provide the presumption of conformity in accordance to Annex III(encompassing Annex II) of Directive 2014/53/EU; the following harmonized standards and normative documents are those to which the product's conformance is declared, and by specific reference to the essential requirements of Article 3 of the Directive 2014/53/EU.

2014/53/EU Article	Standard(s) Applied in Full	Result
SAFETY (Art 3.1.a)	EN 60950: A2	Pass
EMC (Art. 3.1.b)	EN 301 843-1	Pass
SPECRTUM (Art. 3.2)	EN 302 340	Pass

Supplementary Information:

Notified Body Involved: (Testing Organization)	DT&C Co., Ltd. 42, Yurim-ro, 154 beon-gil, Cheoin-gu, Yongin-si, Gyeonggi-do 17042, Korea
Technical/Compliance File Held by:	Intellian Technologies, Inc. 18-7, Jinwisandan-ro, Jinwi-myeon, Pyeongtaek-di, Gyeonggi-do 17709, Korea
Place and Date of issue:	Gyeonggi-do, Korea on 31 Jan. 2018

Authority: Steve Cha
/ CTO, R&D

Signature:  _____

Date: July 31, 2018

Intellian Technologies USA, Inc.
US Headquarters
11 Studebaker
Irvine, CA 92618 USA
Tel: +1 949 727 4498

Intellian Technologies, Inc.
EMEA & APAC Headquarters
348-5 Chungo-Ri, Jinwi-Myeon
Pyeongtaek-Si, Gyeonggi-Do, 451-862 Korea
Tel: +82 31 379 1000

Doc Number IT18-DC0731-01

Table of contents

Introduction

Intellian v85NX Introduction	10
Intellian v85NX Features	11
Antenna Unit	12
Antenna Control Unit (ACU)	12

Planning Installation

Installation Kit	13
Antenna Specification	14
Antenna Dimensions.....	14
Heading Alignment.....	15
Mast Designing (Installation Example).....	16
Option2. When Placing Cable Outside Mast.....	17
Antenna Mounting Hole Pattern.....	18
Preparing Installation	19
Selection of Installation Site.....	19
Minimize Satellite Blockage.....	19
Avoid RF Interference.....	20
RF Hazard Precautions.....	20
Preparing System Cables.....	21
Placing Cable on Mast.....	22

Installing Antenna

Antenna Installation	23
Unpacking Wooden Crate.....	23
Removing Antenna from Wooden Crate.....	25
Placing Antenna on Mast.....	26
Attaching Waterproof Foam.....	27
Mounting Radome.....	28
Connecting RF Cable (Customer Supplied).....	29
Switching On Power Box.....	30

Installing ACU

Selection of ACU Installation Site	31
ACU Dimensions	31
Mounting ACU	32
19" Rack Mount Type.....	32
System Configurations	33
Single Antenna System Configuration (Basic Antenna System).....	33

Dual Antenna System Configuration (Optional)	34
ACU Cable Connection	35
Name of ACU Rear Panel	35
Connecting to the Antenna	35
Connecting to Antenna (Optional: For Dual Antenna System)	36
Connecting to Modem	36
Connecting to Additional ACU (Optional: For Dual Antenna System)	37
Connecting to Switch Router	37
Connecting Ship's Gyrocompass	38
How to Connect NMEA 0183 Gyrocompass Cable	38
ACU Connector Pinouts Guide	39
Console Connector (Modem Interface)	39
RS232/RS422 Connector (Modem Interface)	39
RS232 Connector (PC Interface)	40
RS232/RS422 Connector (BUC Interface)	40
NMEA 2000 Connector	41
LAN 1~4 Ports	41
ACU to PC Communication Setup	42
TCP/IP Connection	42
Wi-Fi Connection	43

Operating Install Wizard

Turning On System	44
Accessing AptusNX	44
Starting Install Wizard	45

Operating ACU

Introduction	54
Antenna Control Unit (ACU)	54
ACU Front Panel	54
ACU Display Menu	55
Startup	56
Diagnosis	58
Antenna Information	59
Interface Information	60
USB Function	61

Using AptusNX

Introduction	66
How to access AptusNX for ACU	66
Main Page	67
Page Login	67
Top Menus	68

Account Menu	69
Account	69
Registration	70
System	71
User Manager	72
Dashboard	73
How to Add & Remove Panels (Dashboard Setting)	73
How to Arrange Dashboard Layout	74
How to Use Shortcut Settings	75
Install Wizard	75
System Tools	76
Firmware Upgrade	76
iARM Upgrade	78
iARM Save & Reboot	79
Satellite Library	80
Spectrum Graph	81
Graph	82
System Troubleshooting	83
Diagnosis	83
Antenna Log	85
Antenna Event Log	86
Support	86
System Setting	87
Ship Setting	87
Antenna Setting	89
Tracking Satellite Setting	92
Network Configuration	93
Modem/BUC Setting	95
SNMP Setting	98
Backup & Restore Setting	99
Mediator Setting (Optional: For Dual Antenna System)	100

Specification

Technical Specification	102
Environmental Specification	103

Warranty

Warranty Policy	104
------------------------	------------

Appendix A

Using Dual Antenna System (Optional)	105
---	------------

Introduction

Intellian v85NX Introduction

Intellian v85NX is a Ku-band 3-axis stabilized VSAT maritime antenna system. The v85NX provides advanced VSAT solutions for Ku-band satellite services that are also designed to be convertible to Ka-band network. v85NX is equipped with a new mounting architecture of RF module.

The antenna's 3-axis stabilized platform and advanced shock-resistant and vibration damping design of the Pedestal is fully optimized to withstand the demanding maritime conditions and to ensure reliable broadband communications.

The v85NX is even more operator-friendly in that it combines TX, RX and DC power into one cable, simplifying installation. With the new radome design, the dome-on external single cable connection means that installers do not need to remove the radome during installation either.

Equipped with Intellian's next generation Antenna Control Software, "AptusNX", the v85NX antenna can be easily accessed, monitored and controlled. This new simply configured tool can alert an operator to possible problems with its enhanced diagnostic capabilities and can also provide automatic alerts when preventative maintenance may be required.

The v85NX is supplied with both cross-pol and co-pol feeds and comes equipped with Intellian's patent pending Global PLL LNB by standard.

Intellian v85NX Features

Higher RF Performance

Intellian's highly efficient RF design delivers superior performance compared to other 80cm class systems, enabling higher data rates and global operation. The compact 85cm antenna's smaller footprint allows installation on smaller vessels yet still allows the system to operate on a 1-meter designed network. The v85NX is improved tracking precision and reliability in a compact and streamlined mechanical design. The v85NX system is supplied as standard with 8W BUC, or can be supplied with 16W and 25W variants.

Future Proof Communications

The v85NX can be simply upgraded from Ku- to Ka-band operation by changing the center mounted RF Assembly and Feed using an available conversion kit. Frequency tuned reflector and radome ensure maximum performance across both Ku- and Ka-bands.

Single Coaxial Cable

Combined Tx, Rx and DC power in a Single Cable solution, the v85NX enables faster and reduced costs of installation. Dynamic Motor Brakes, eliminating the requirement of shipping brackets, and Dome-On external RF cable connection on the base allow easier and quicker installation without removing the radome.

Embedded Dual Antenna Mediator function

Intellian's new ACU fully supports dual antenna operation without additional hardware such as a separate mediator, RF splitters and cables. Eliminate loss of signal due to blockage by using dual antenna systems.

Standardized Modular Components Across NX Series

Modular components are used throughout the NX range, such as dynamically braked motors with integrated encoders, Main Control Unit and skew assembly. Sharing common modules across Intellian's NX antenna series, the number of spare parts is reduced by more than 30%.

AptusNX Intelligent Diagnosis

Intellian's all new integrated M&C software, enables advanced alerts from the live data monitoring and analysis agent, the v85NX sends warning messages to the NOC in advance when it detects any abnormal operation. Intuitive web application interface is designed to provide a superior user experience. AptusNX enhances remote diagnosis, automates routine processes and includes an integrated spectrum analyzer. The AptusNX API enables integration directly within a NOC for total fleet-wide visibility.

Antenna Unit

The antenna unit includes an antenna pedestal inside a radome assembly unit. The pedestal consists of a satellite antenna main dish with RF components mounted on a stabilized pedestal. The radome protects the antenna pedestal assembly unit from the severe marine environment.



Figure: Radome & Antenna Unit

Antenna Control Unit (ACU)

Antenna Control Unit (ACU) provides power to the antenna and Block Up Converter (BUC). The digital Organic light-emitting diode (OLED) allows for easy operation of the ACU, even in the dark.

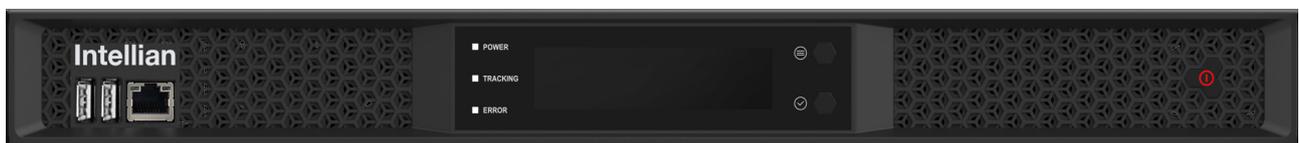


Figure: Front Panel of ACU



Figure: Rear Panel of ACU

Planning Installation

Installation Kit

Before beginning installation, make sure you have all the included components.

Description	Q'ty	Size	Remarks
Antenna Control Unit (ACU)	1	431x350x44.3mm	Antenna Control Unit (ACU)
Quick Installation Guide (QIG)	1		
RF Hazard Sticker	1		Radiation Safety Distance (15m) Label
Mounting Template	1		
ACU Side Bracket (Rack Type)	2		ACU to 19inch Rack
Flat Head Screw	10	M4x12L	Bolt Kit for Rack Type Mount Bracket
USB Cable (A-A)	1	1.8m	ACU (Front Panel) to PC
AC Power Cord (CEEE7/7)	1	1.5m	ACU Power (220V)
RG-6 RF Cable	2	1m	ACU to Modem
Modem Interface Cable (For iDirect Modem)	1	1.5m	ACU to Modem (iDirect Modem)
Ethernet Cable (RJ45/LAN)	2	1m	ACU to PC/Intellian M&C
Wi-Fi Dongle	1		
Hex Bolt	5	M12x80L	Bolt Kit for Antenna - Deck Assembly (1 spare set included)
Flat Washer	5	M12	
Spring Washer	5	M12	
Hex Head Wrench Bolt	5	M6x40L	Bolt Kit for Radome Assembly
Spring Washer and Flat Washer	5	M6	
Sems Bolt	2	M4x8L	
Radome Door Key	2		1 Door key & 1 Spare key
Waterproof Foam	1		X-shape Cable Hole Type

Antenna Specification

Antenna Dimensions

Confirm the height and diameter of the bottom surface of the antenna unit before installing it. The mounting surface and overall space occupied by the antenna must be sufficient for the height and diameter of the fully constructed radome on top of its base frame. The height and the diameter of the bottom surface of the antenna are as shown in the following drawing. It is strongly suggested that the installation is conducted using a crane.



Figure: Antenna Dimensions

Heading Alignment

The radome assembly should be positioned with the BOW marker aligned as close as possible to the center line of the ship.

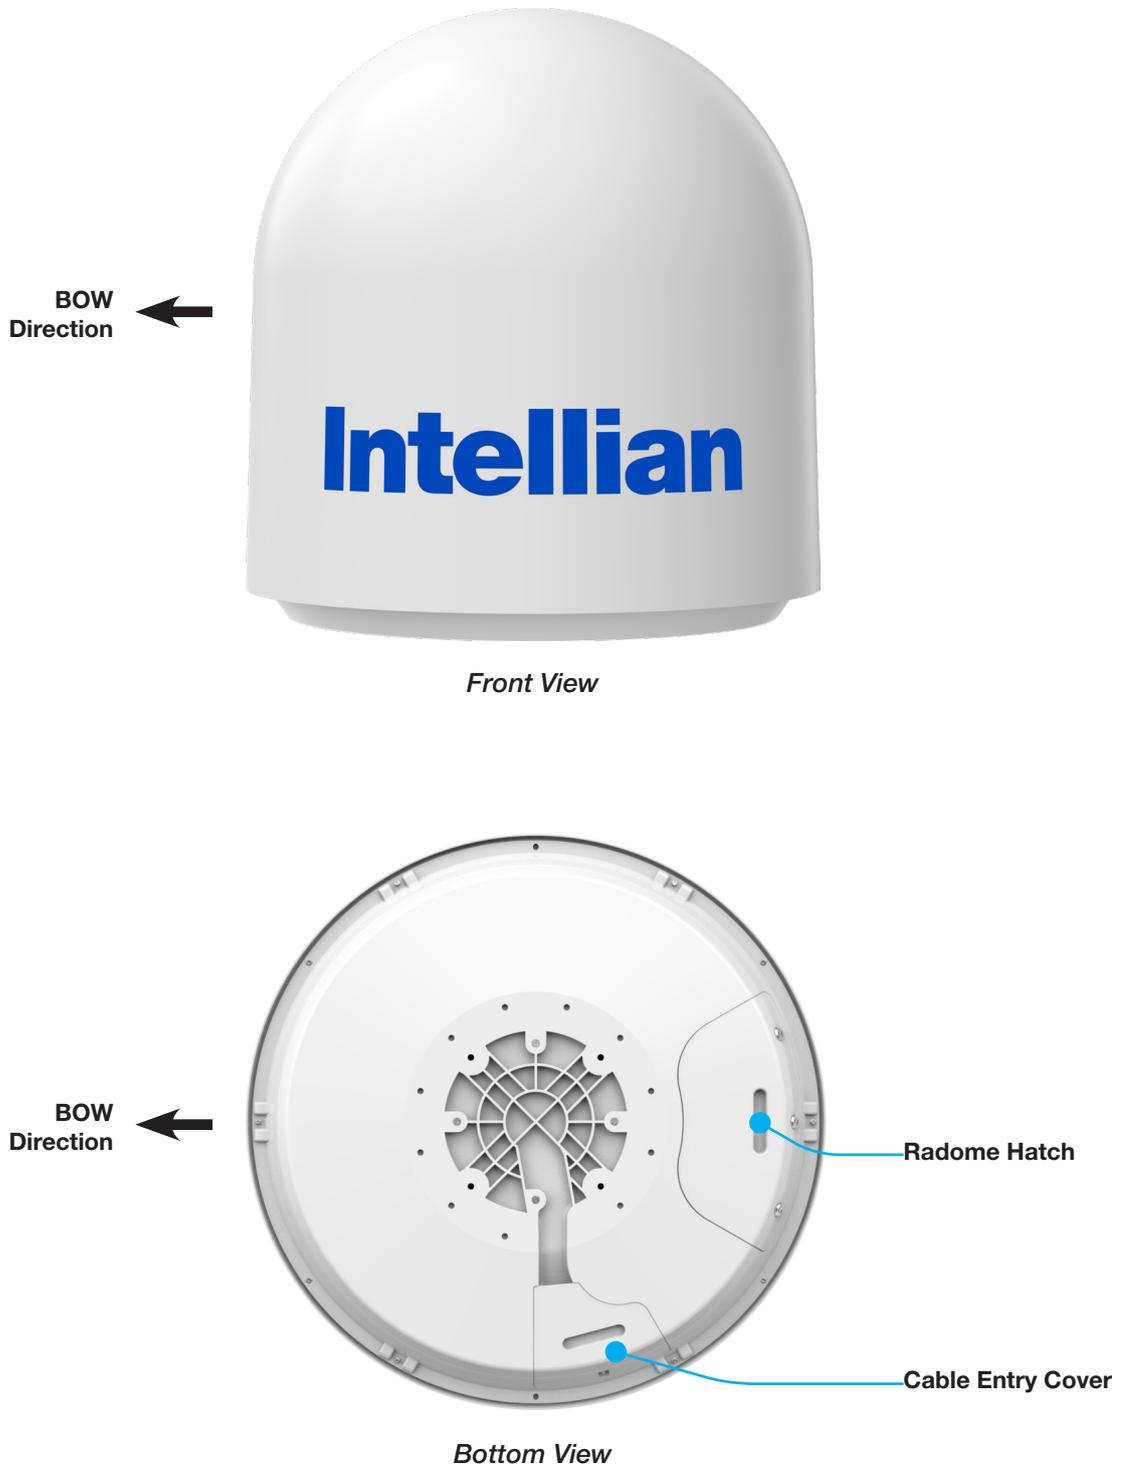


Figure: Antenna Heading Alignment

Option2. When Placing Cable Outside Mast

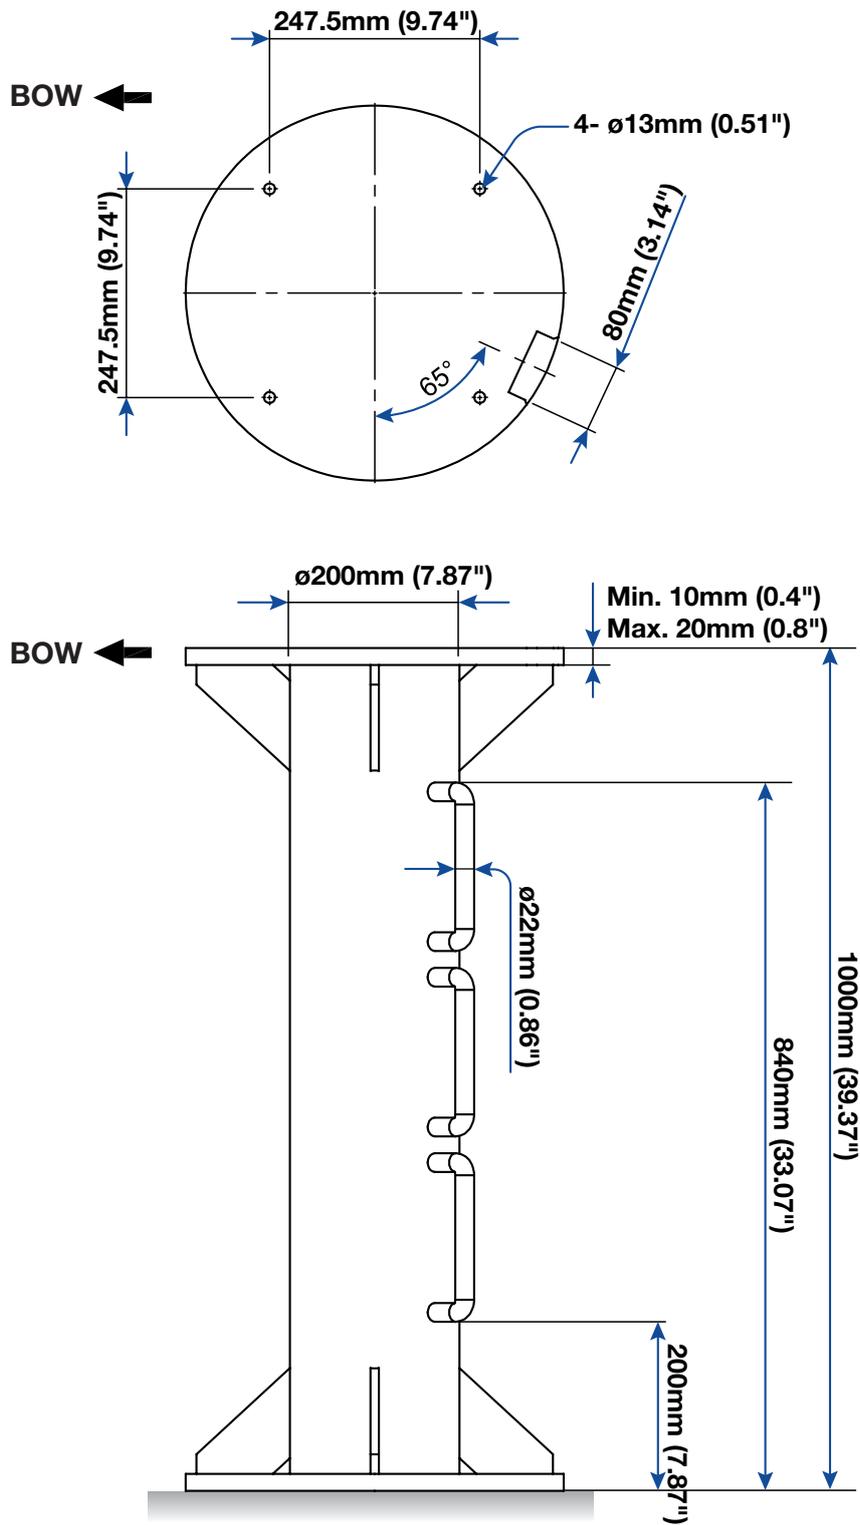


Figure: Recommended Size of Mast (Option2)

Antenna Mounting Hole Pattern

The mounting holes must be in the exact same place as shown in the diagram below.

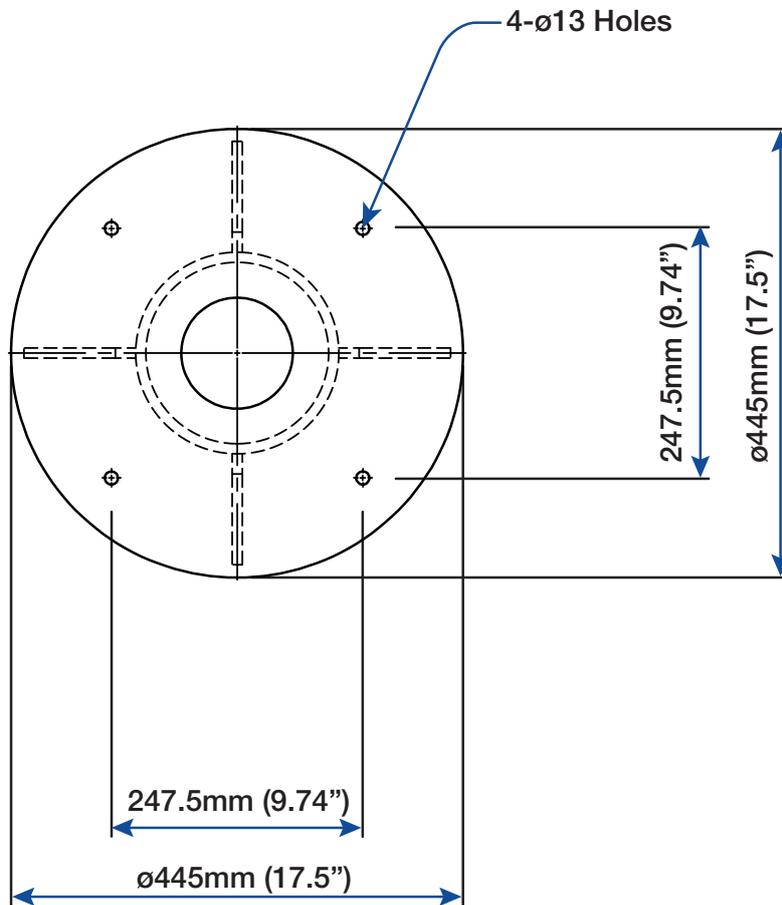


Figure: Antenna Mounting Hole Pattern

Preparing Installation

The antenna installation requires extreme precaution and safety measures given its size and weight. Failure to follow the correct installation process may lead to injury of the installer and/or cause damage to the system. In order to maximize the performance of the system, a thorough review of this installation guide is strongly recommended, as well as executing the installation process as it is noted in this manual.

Selection of Installation Site

The system should be placed in an area onboard the vessel with little to no RF signal blockage. When the antenna is transmitting, obstacles in way of the beam path will cause decreases satellite signal strength. The antenna unit should have direct line-of-sight with the desired satellite without any obstacles in the beam path. Certain minimum distances between the antenna and other onboard devices must also be considered during installation.

Minimize Satellite Blockage

Install the antenna in accordance with the following procedures to ensure maximum performance of the antenna. The ideal antenna site should have a clear view of the horizon or satellite with all around clearance. Please be sure there are no obstacles within the EL range -20° to $+115^{\circ}$ from the center of the antenna. Obstacles can prevent the antenna from transmitting and receiving the satellite signal.

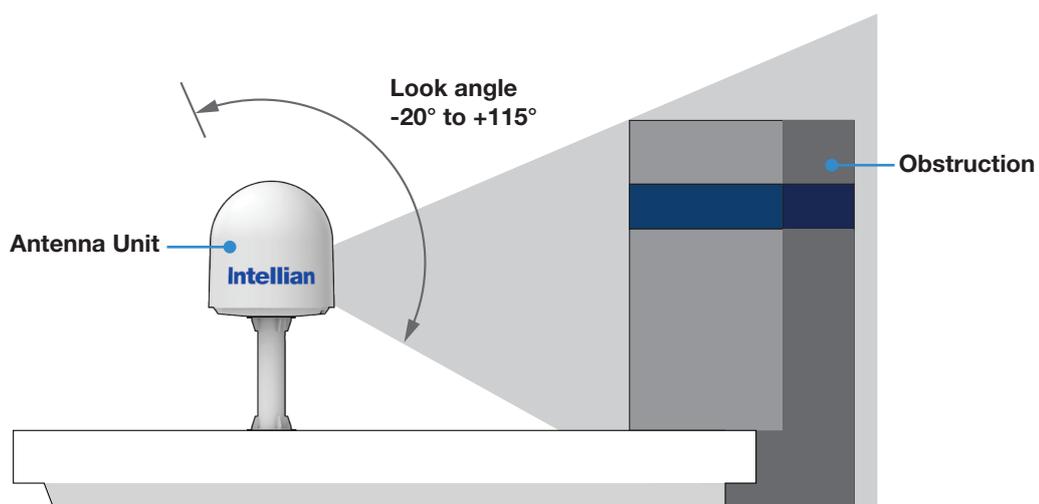


Figure: Elevation Limit of Obstacles

Avoid RF Interference

Do not install the antenna near the high power shortwave radar. Most radar transmitters emit RF energy within an elevation range of -15° to $+15^{\circ}$. For this reason, it is recommended to position the antenna at least 15 feet (4.6 m) away from the radar.

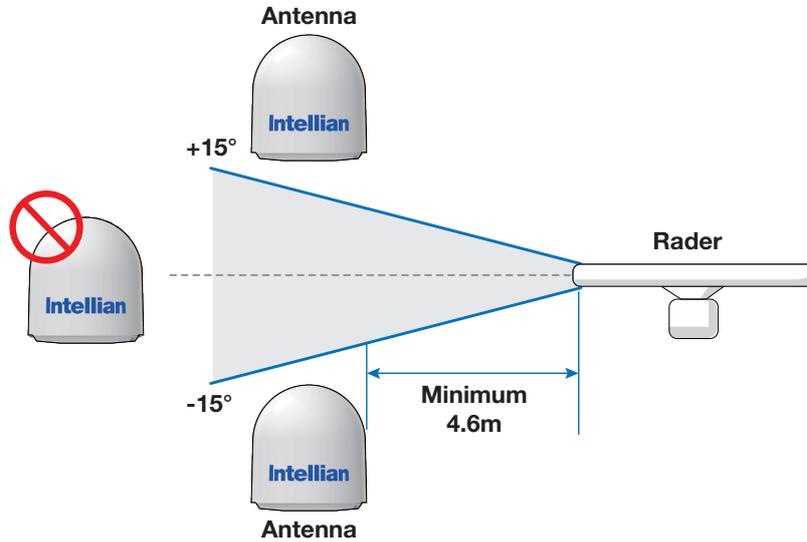


Figure: Potential RF Interference



WARNING

Never place the antenna in the beam path of the radar regardless of distance. The high power shortwave radar may impair its performance or damage the antenna.

RF Hazard Precautions

The antenna is designed to be used with radiation transmitting equipment manufactured by others. Exposure to RF radiation, including exposure associated with an improper use of the transmit equipment, may be hazardous to persons close to the above deck unit. Ensure the safety of personnel who work on the system. During transmission, ensure to keep the minimum safety distance. The recommended minimum safety distance to the reflector on the focal line is about 15m, based on a radiation level of $5\text{mW}/\text{cm}^2$ that applies under occupational/controlled environment. No hazard exists $>20^{\circ}$ below the antenna's mounting plane.

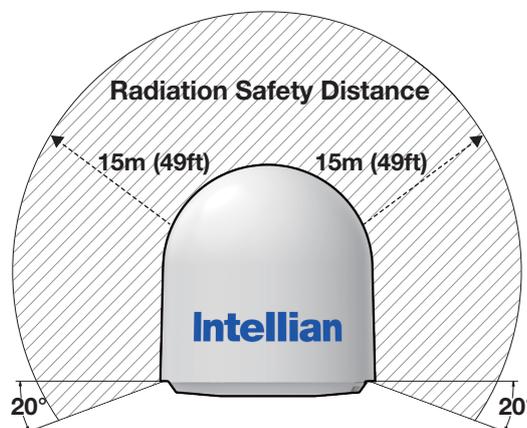


Figure: RF Hazard Precautions

Preparing System Cables

Before installing the system cables, you need to take the following points into consideration.

1. All cables need to be well clamped and protected from physical damage and exposure to heat and humidity.
2. A cable with an acute bend should be avoided.
3. Wherever a cable passes through an exposed bulkhead or deck head, a watertight gland or swan neck tube should be used.

For cables that run longer than Intellian's recommendations, please consult Intellian Technologies.

- **RF Cable (Customer Supplied)**

Due to the signal losses across the length of the RF coax on L-Band, Intellian recommends the following 50 ohm coax cable types for standard system installations. For cables that run longer than 100 meters (except LMR600 coaxial cable type), please consult Intellian Technologies.

* The maximum DC Resistance of RF Cable is 0.8 Ohm.

Coaxial Cable Type	Attenuation in dB/100M (@ 2GHz)	Attenuation in dB/M (@ 2GHz)	Recommended Max. Cable Length
LMR400	19.6	0.196	80M
LMR600	12.8	0.128	120M

- **Gyrocompass Cable (Customer Furnished)**

Due to the environment of various type of vessel, Intellian recommend the general cable types compatible with the antenna.

	NMEA 2000	NMEA 0183
Connector Type	Mini-C 5 pins connector	2 pins terminal block connector
Cable Type	5 wires within a single cable	2-wires constructed with one enclosed shield cable
Heading Information	Supports PGN, 127250: Vessel Heading	Supports xxHDT, baud rate 4800, format 8N1 as standard. If there is no xxHDT sentence, use xxHDM sentence instead.

Placing Cable on Mast

The cable must be routed from the antenna and through various areas of the ship to end up at the antenna control unit. When pulling the cables in place, avoid sharp bends, kinking, and excessive force. After placement, seal the deck penetration gland and tie the cable securely in place. The cable bracket must be installed on the mast to fix the relevant cable. The gooseneck must be installed on the side of the mast to protect the relevant cable against water.



WARNING

Ensure that cable has been run through watertight fittings to prevent water entry into the vessel when installation is completed.

Option1. Placing Cable Outside Mast

1. Place the cable from the gooseneck labeled on the deck to the antenna as shown in the picture.
2. Maintain a sufficient cable length (more than 2M) from the surface of the mast. After connecting the cable to cable connector inside the cable entry, adjust the cable length and then fix the cable on the cable bracket by using cable ties.

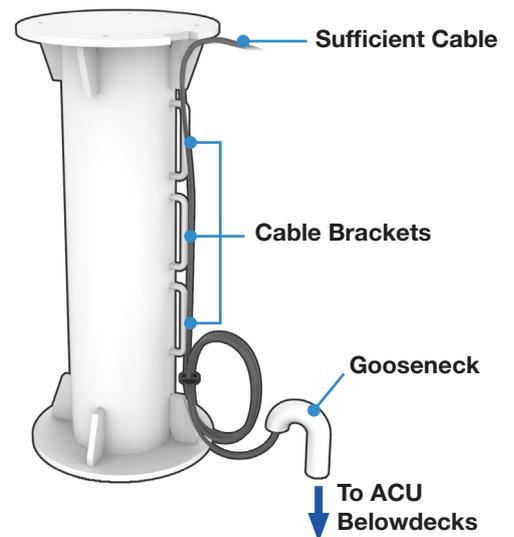


Figure: Cabling on Outside of Mast

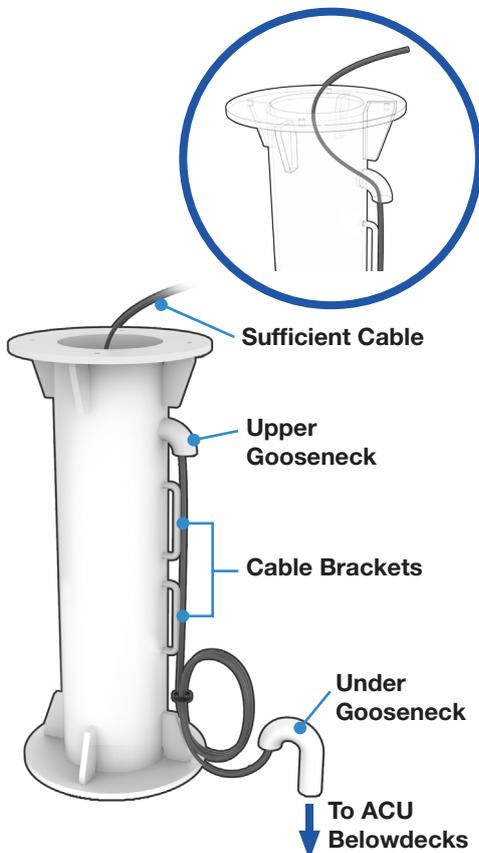


Figure: Cabling on Inside of Mast

Option2. Placing Cable Inside Mast

1. Before placing the radome on the mast, the cable should route through the upper gooseneck from the under gooseneck labeled on the deck to facilitate connecting RF Cable to the antenna as shown in the picture.
2. Maintain a sufficient cable length (more than 2M) from the surface of the mast. After connecting the cable to cable connector inside the cable entry, adjust the cable length and then fix the cable on the cable bracket by using cable ties.

Installing Antenna

Antenna Installation

Unpacking Wooden Crate

The pallet should be lifted by means of a forklift. To unpack the wooden crate, follow the procedure below.

1. Locate one of the side panels with a paper sticker (Unpack Guide). Detach this side panel by removing the fixing screw (1EA) and clips (6EA).




CAUTION


CAUTION

Be careful with the direction of the panel that you must open first.


1-1  : 1EA

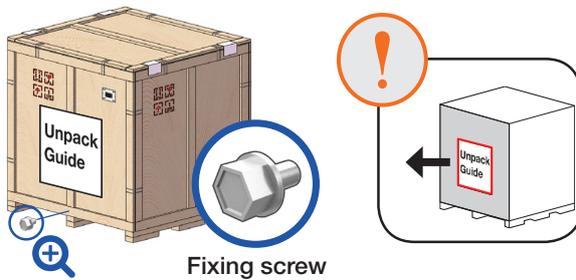

1-2  : 6 EA

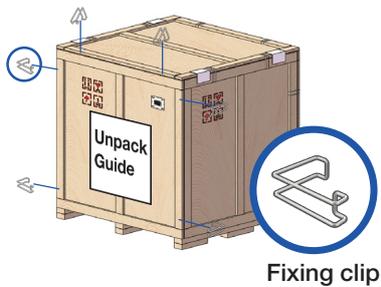


1-3

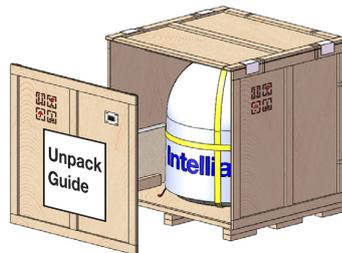

2. The ACU box is located inside the side panel. Take out the ACU box by removing fixing screws (2EA) on the ACU bracket.

2-1

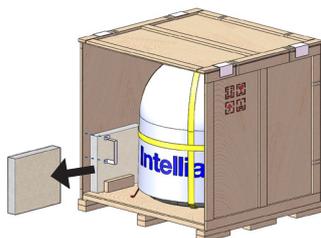


3. Running Diagnostic Tests: *This step is optional.* After removing one of the side panels, you can run the diagnostic tests easily to verify the condition of the antenna. First, prepare the "RF Cable (Customer Supplied)" to connect the antenna and the ACU.

3-1. Remove the M4x15L Wrench Bolt by using the wrench set then open the cover of cable entry.

3-2. Connect the "RF Cable (Customer Supplied)" from the "ANTENNA" connector on the rear of the ACU to the "RF Connector" inside cable entry of radome (Antenna).

3-3. Execute diagnostic tests (Full Diagnosis Test) via ACU and check the real-time diagnosis result.

Optional

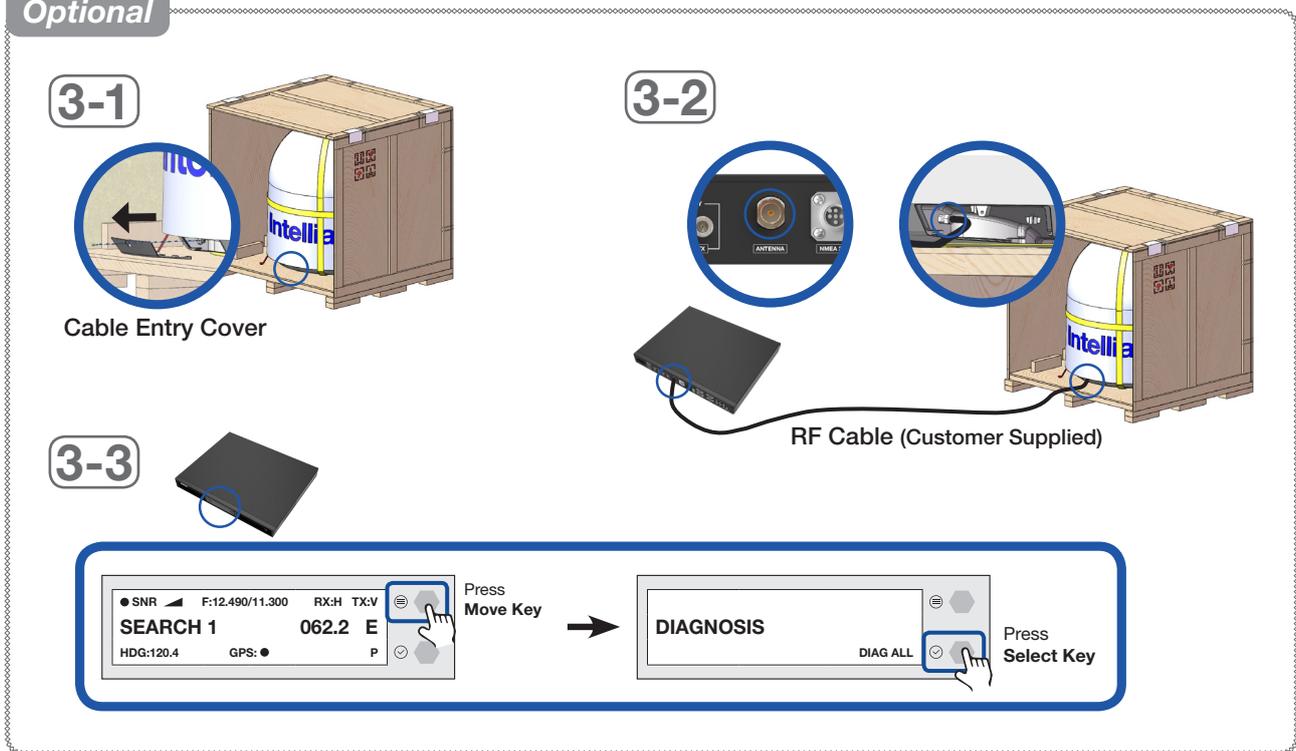


4. Remove the clips (6EA) on the top panel. Detach the top panel by carefully pulling it as shown in the picture.




WARNING

The side brackets at the edge of the top panel secure the side panels and top panel in position. When pulling the top panel, ensure that the top panel doesn't fall on the radome.




4-1 ⚡: 6 EA

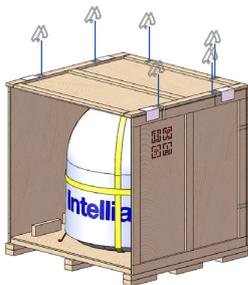

4-2

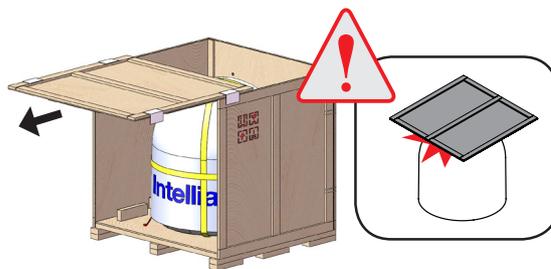





5. Remove the fixing screws (5EA) from the remaining side panels, then detach the side panels.

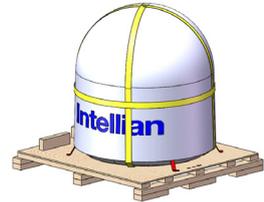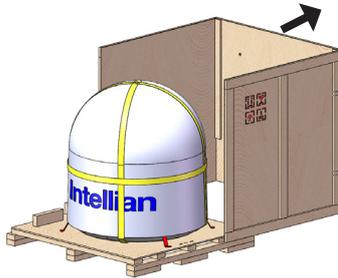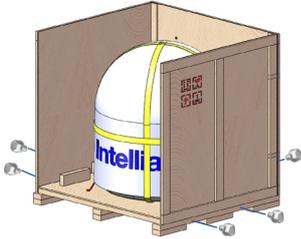


Removing Antenna from Wooden Crate

Four radome brackets secure the antenna to the pallet. To remove the radome bracket, follow the procedures below.

1. Remove the fixing screw(2EA) on the radome bracket that secures the antenna to the pallet using a wrench.
2. Loosen the radome bolt (1EA) counter-clockwise using a wrench then slide the radome bracket to the left side to remove that.
3. After removing radome bracket, apply Loctite #263 to the bolt's threads to ensure the bolts are fastened firmly. Fully tighten the radome bolt (1EA) clockwise using a wrench. Apply the same procedure to all four parts.

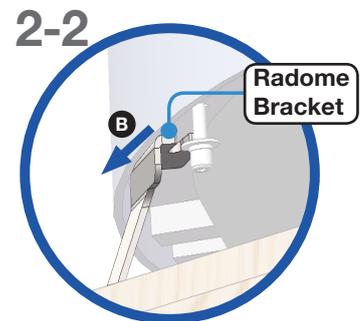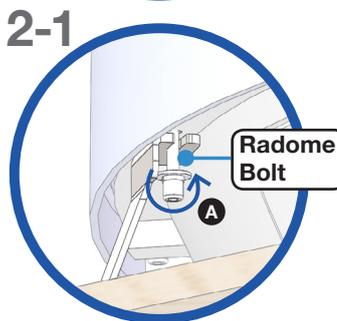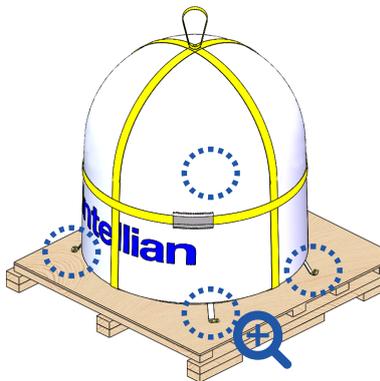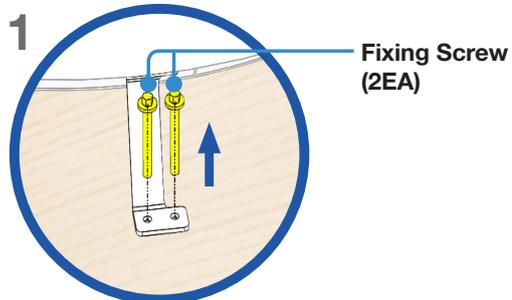

4. Check up the condition of lifting strap to make sure the shackles (2EA) are tightened. Re-wrap the shackles with the existing protection to avoid radome damage.

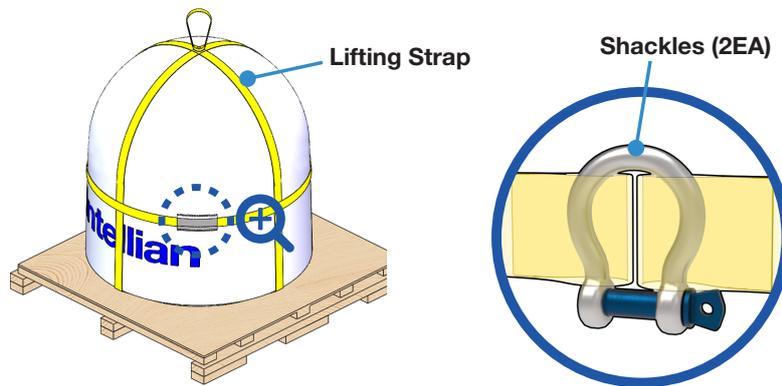**WARNING**

When lifting the antenna using the lifting straps, make sure to remove the securing radome brackets to separate antenna from the pallet.

Placing Antenna on Mast

The Intellian antenna comes with the lifting straps pre-mounted from the factory. Check the condition of the lifting strap and that the shackle is tightened up. Lift the antenna above the mast using a crane and carefully put the antenna down on the mast. When placing the radome, consider that the antenna should be positioned with the BOW marker aligned as close as possible to the ship's heading.


**WARNING**

The antenna may be subject to swaying motions in windy conditions. Be careful when handling the antenna.




Attaching Waterproof Foam

The waterproof foam must be attached to prevent water from penetrating inside the Radome before fully mounting the radome to the mast. Make sure the foam is attached in the same position as in the picture below.

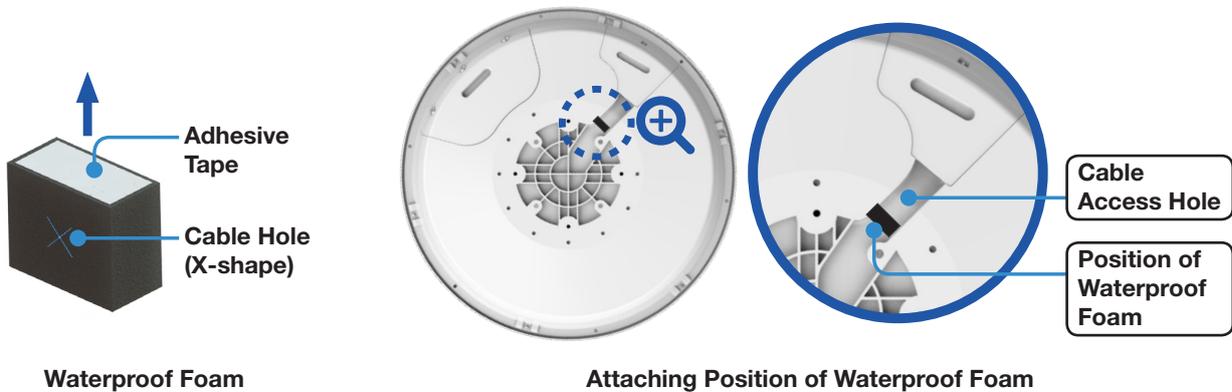


Case 1. When Placing Cable Outside Mast

1. Peel off the paper from the supplied waterproof foam to expose the adhesive.
2. Attach the waterproof foam firmly onto the surface of the cable access hole.

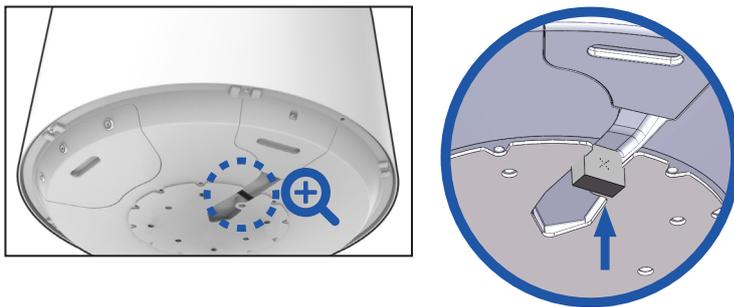


Case 2. When Placing Cable Inside Mast

1. Peel off the paper from the supplied waterproof foam to expose the adhesive.
2. Pull the cable from the mast through the cable hole (X-shape). Then attach the waterproof foam firmly onto the surface of the cable access hole. When moving the radome, be careful not to let the waterproof foam or the cable fall down.

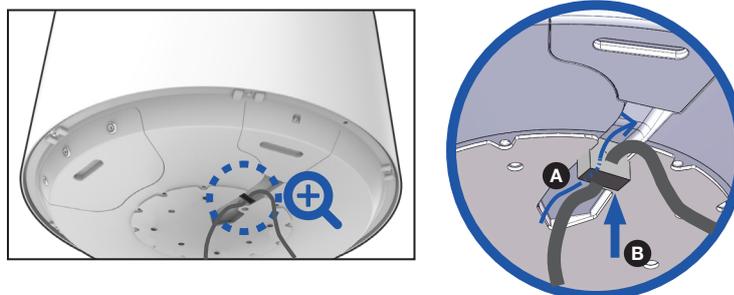

Mounting Radome

Bring the Bolt Kit (4EA) from the ACU box. Before assembling bolts, apply Loctite #263 to the bolt's threads to ensure the bolts are fastened firmly. Insert the bolts and washers from under the mast into the radome, and fasten them to the nuts assembled inside the radome. After mounting the antenna on the mast, remove the lifting strap.

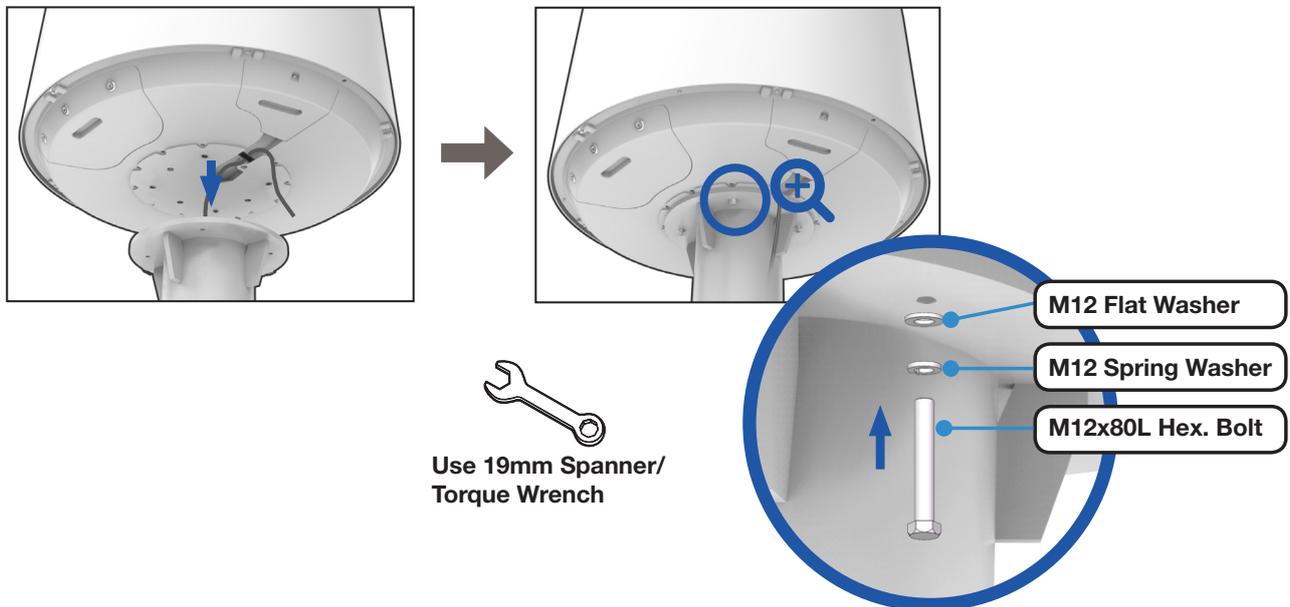

NOTE


NOTE

- Make sure the cable from the mast is aligned with the cable entry of antenna bottom for a cable connection.
- In case of using a mast with a surface thickness of more than 20mm, use the M12x100L Hex Bolt.

Connecting RF Cable (Customer Supplied)

Connect the "RF Cable" from the "ANTENNA" connector on the rear of the ACU to the "RF Connector" inside the cable entry of radome. In the cable connection on both sides, cable termination should be completed using suitable tools. After connecting, securely fix the cable by using the cable ties in place.


1. Remove the M4x15L Wrench Bolt by using the wrench set then open the cover of cable entry.

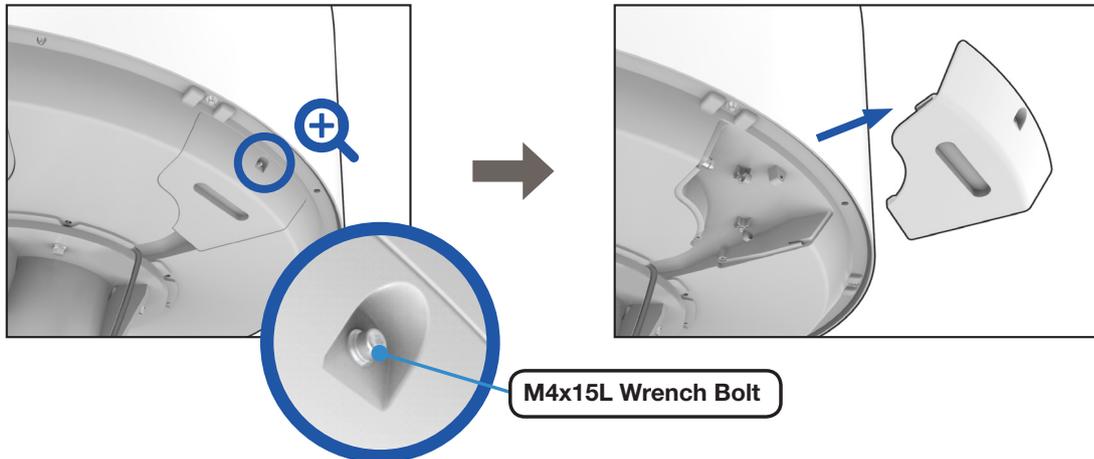


NOTE

After removing the M4x15L Wrench Bolt from the cover of cable entry, Keep it safe for a next step. When closing the cover of cable entry, this bolt must be used.

2. Make sure that the end of the RF cable is completed the cable termination work before connecting RF cable. Then connect the RF cable to the connector as shown in the figure below. Ensure the cable is firmly fastened to the connector. Fasten the cable with cable ties using the cable mount or cable clamp along the routing path.

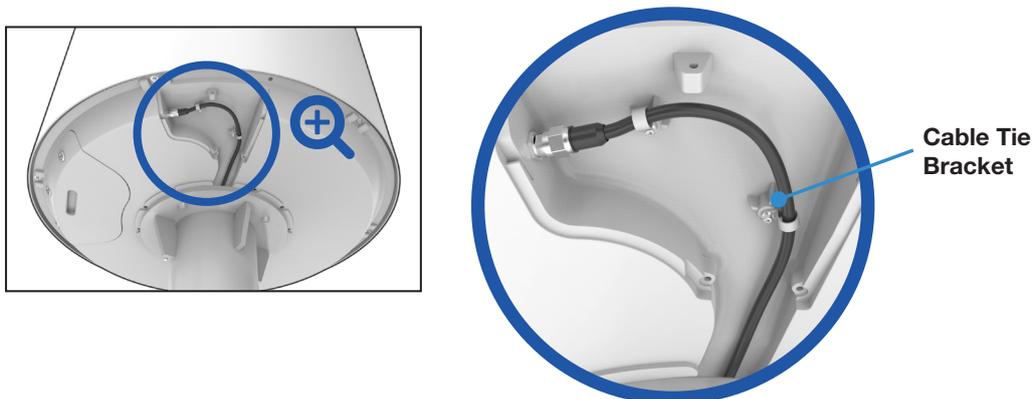


3. After completing cable connection, put the cover in the right place and tighten the M4x15L Wrench Bolt by using the wrench set.

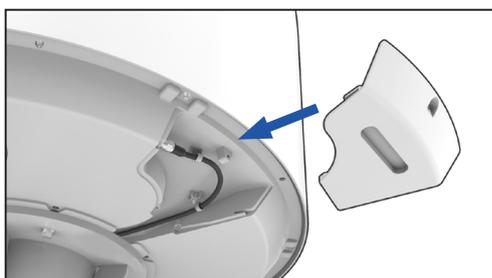


Switching On Power Box

Access the ADU modules inside the radome to check that the power switch is on through the radome hatch. Make sure that there is sufficient free space underneath the ADU to open the radome hatch.


1. Bring the radome door key from the ACU box. Open the radome hatch by turning the fixed bolts counterclockwise by using the radome door key.

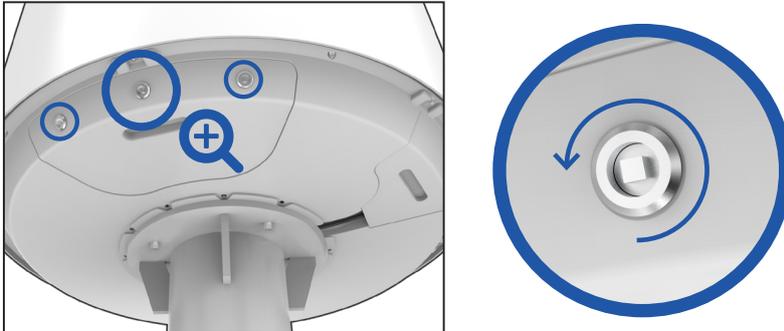

2. Switch on the power box inside the radome.

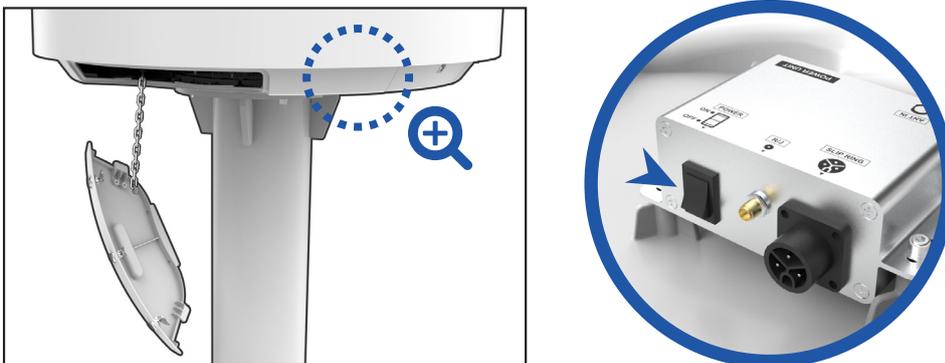

3. Put the radome hatch in the right place. Close the radome hatch by turning the fixed bolts clockwise by using the radome door key.

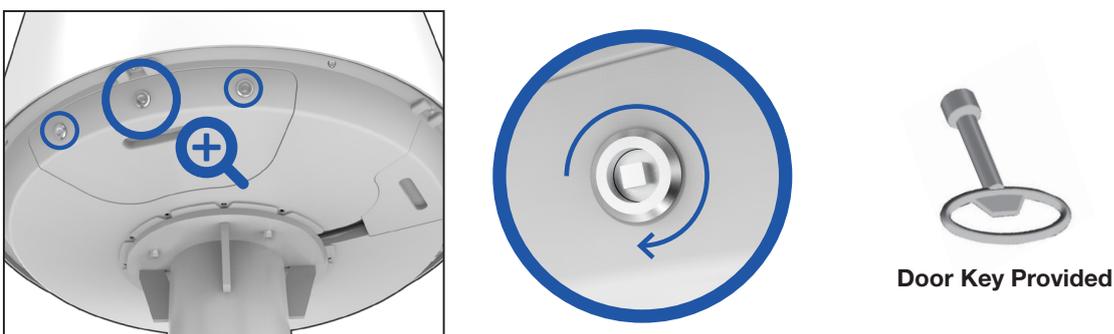

NOTE

After using the door key, store it in a safe place for future use.

NOTE

Installing ACU

Selection of ACU Installation Site

The ACU should be installed below deck, in a location that is:

- Dry, cool and ventilated.
- The front panel should be easily accessible to users.

ACU Dimensions

Confirm the dimension of the ACU before installing it.

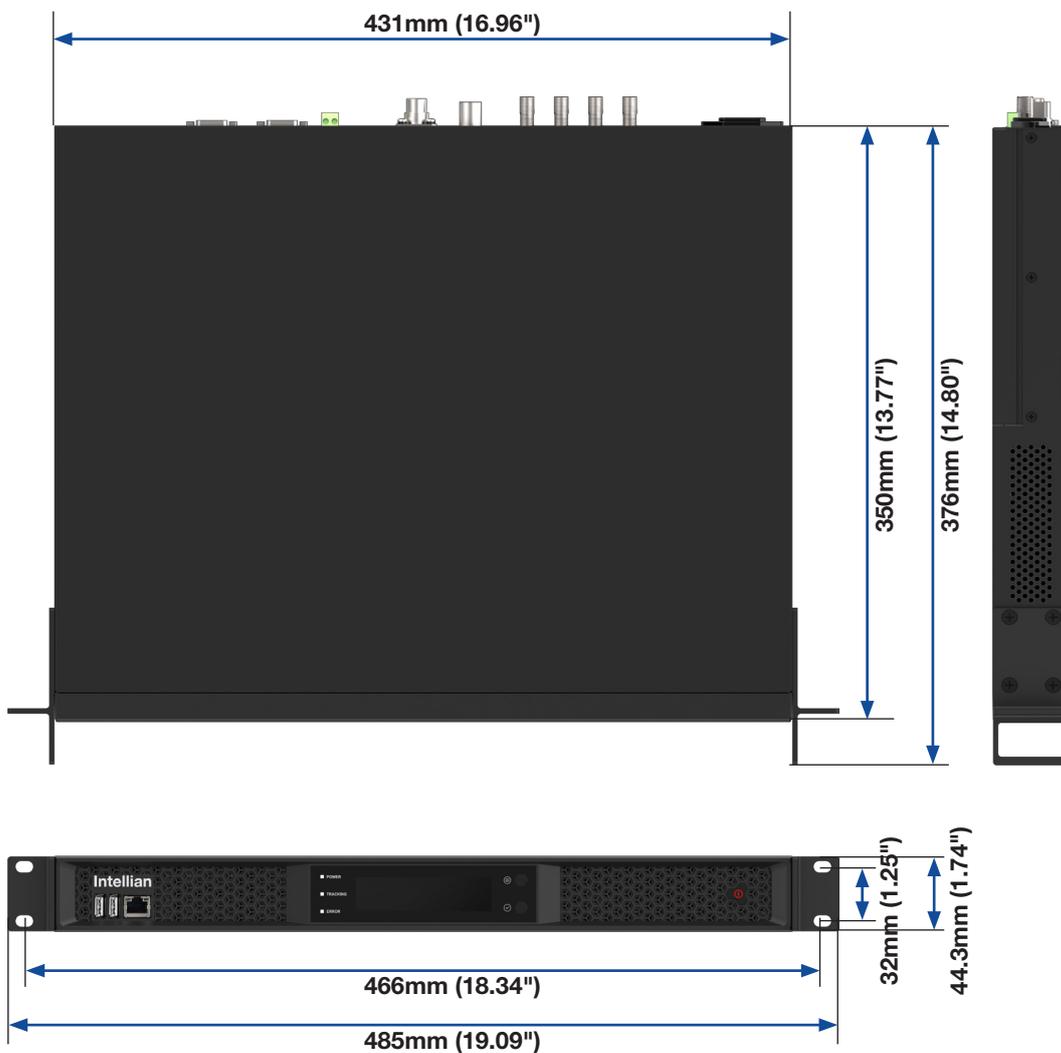


Figure: ACU Dimensions

Mounting ACU

Intellian supplies 19" Rack Mounting Brackets to mount the ACU on the rack.

19" Rack Mount Type

The ACU should be installed using the two supplied 19" Rack Mounting Brackets. Using the Flat Head Screw supplied, attach the mounting brackets to the sides of the ACU. Place the ACU in the location where it is going to be installed. Connect the cables to the rear of the ACU.



Figure: 19" Rack Mount Type ACU



WARNING

Ensure that the cables connected to the ACU are long enough to prevent damage when the ACU is pulled out from the rack.

System Configurations

For your satellite communication system to work properly, the system will have to be connected with all of the provided components as shown in the figure below. Separate purchase of a satellite modem, switch router and ship's gyrocompass may be required.

Single Antenna System Configuration (Basic Antenna System)

The Basic system configuration consists of one VSAT antenna and one ACU. The configuration is as shown below.

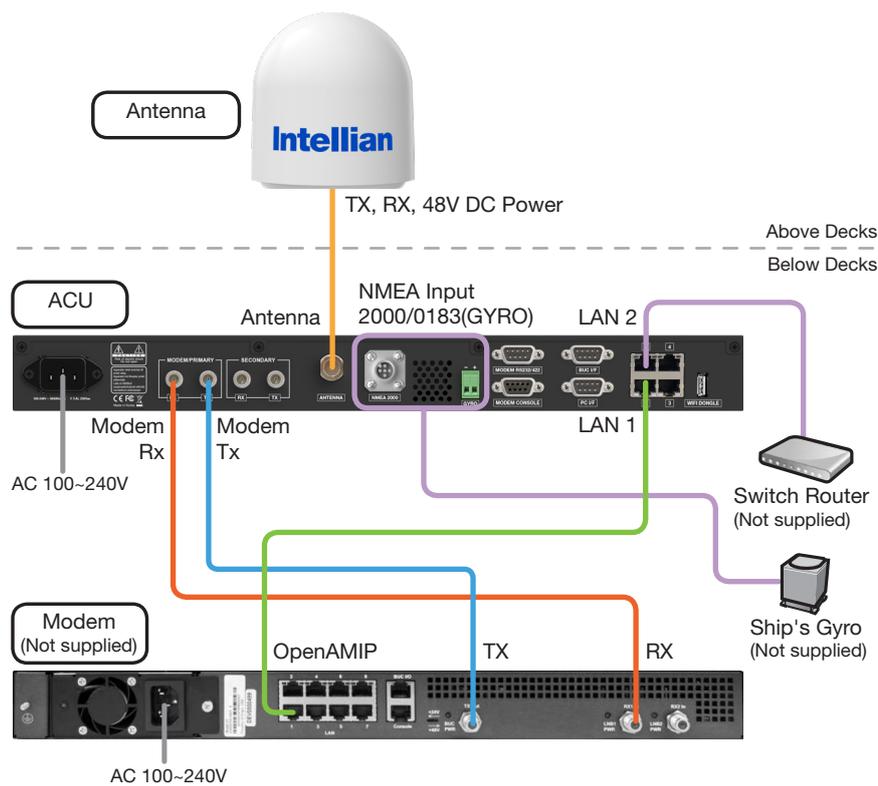


Figure: Single Antenna System Configuration (Basic Antenna System)

Dual Antenna System Configuration (Optional)

The dual system configuration consists of two VSAT antennas and two ACUs. The ACUs have embedded Dual Antenna Mediator function, which is capable of controlling and managing two VSAT antenna systems simultaneously. The configuration is as shown below.

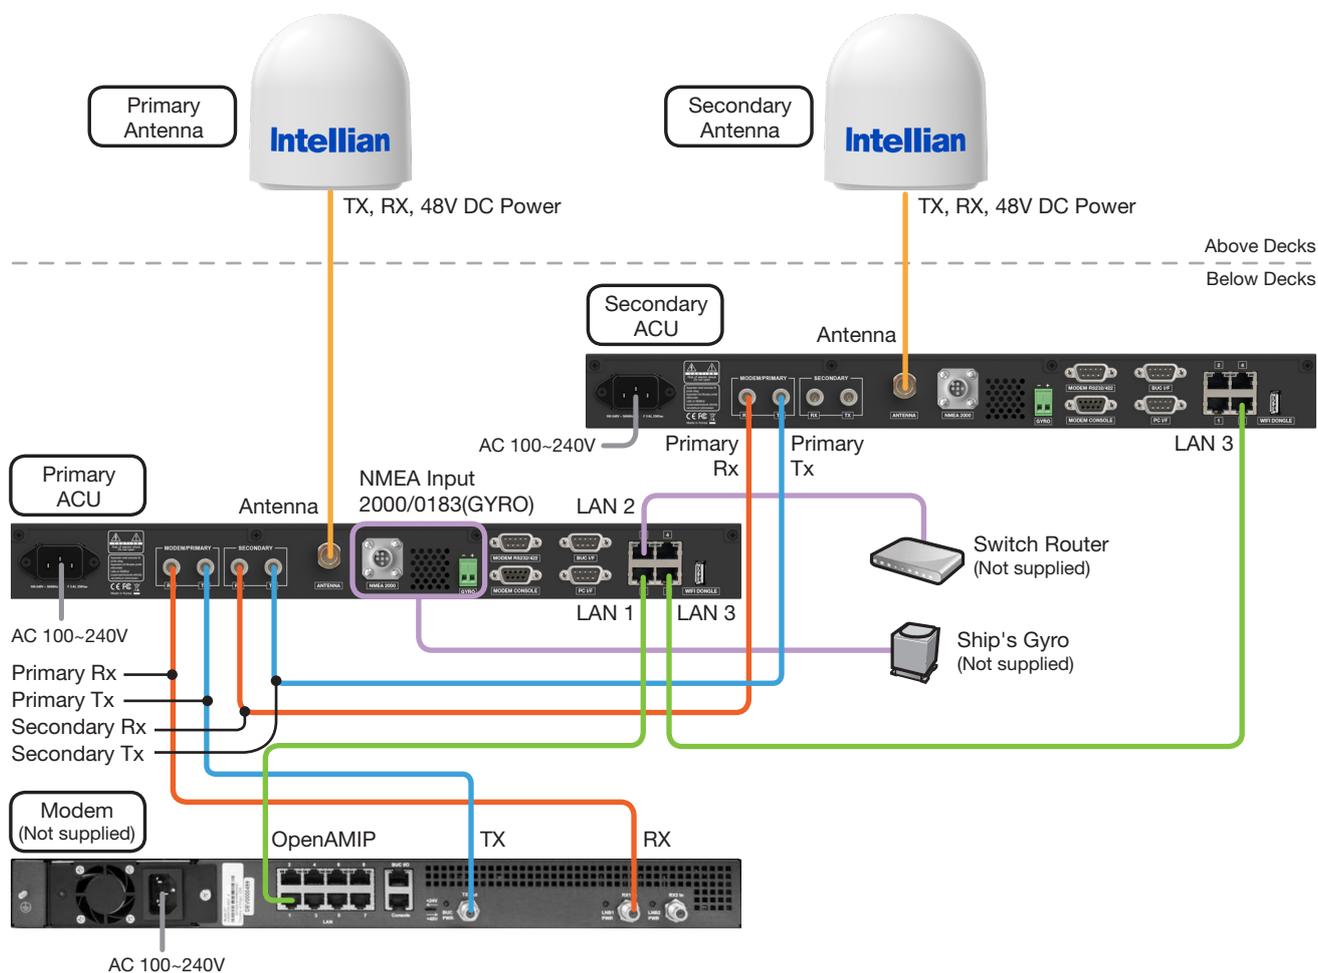


Figure: Dual Antenna System Configuration



NOTE

The description of this Dual Antenna System is written on the "Appendix A" chapter. Refer to the "Using Dual Antenna System" on page 105 for more details.

ACU Cable Connection

Name of ACU Rear Panel

The following figure shows the ACU's rear panel.

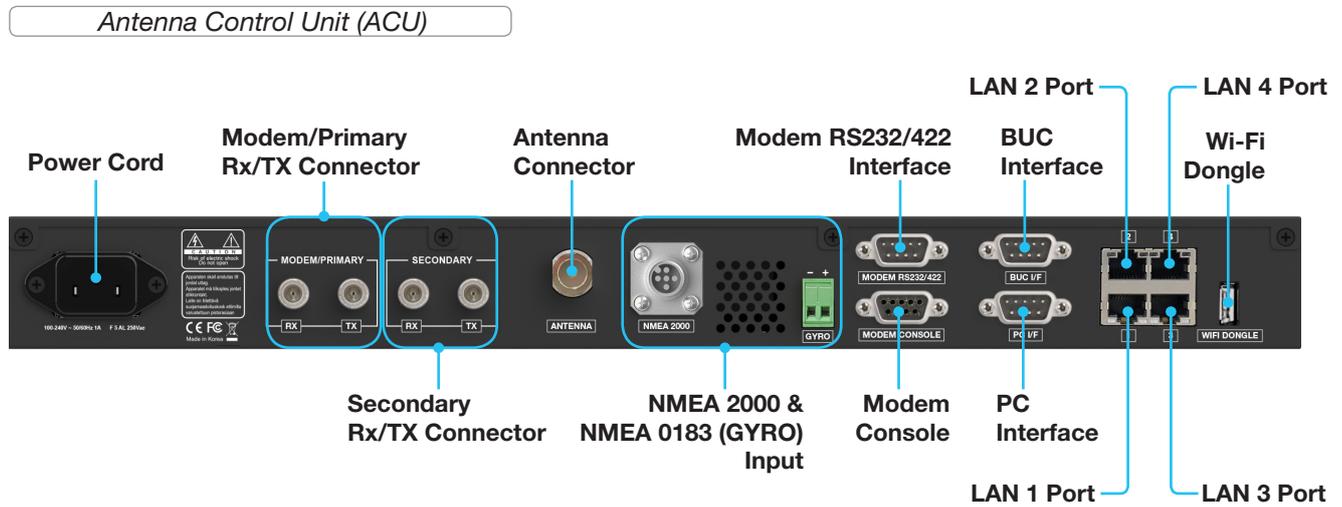


Figure: Name of ACU Rear Panel

Connecting to the Antenna

Connect the "RF Cable (not supplied by Intellian)" from the "ANTENNA" connector on the rear of the ACU to the "RF Connector" inside cable entry of radome (Antenna).

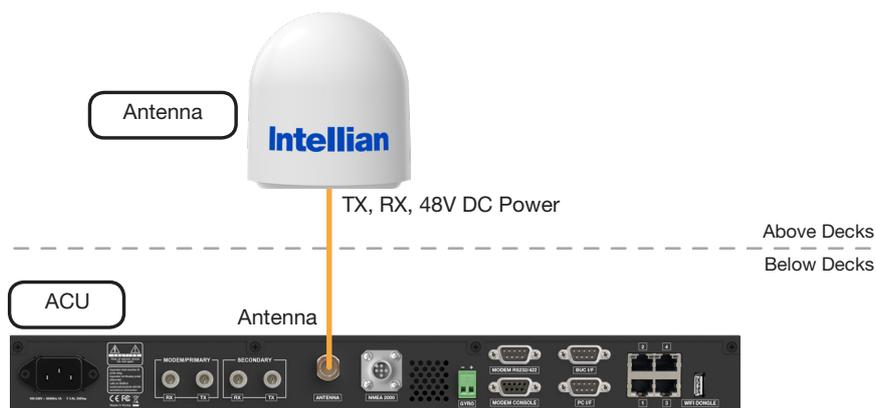


Figure: ACU to Antenna Cable Connection

Connecting to Antenna (Optional: For Dual Antenna System)

To use the Dual Antenna System, the antenna system needs to be installed with the two of ACUs and antennas to support the Dual Antenna System operation.

Connect the "RF Cable (not supplied by Intellian)" from the "ANTENNA" connector on the rear of the "Primary ACU" to the "RF Connector" inside cable entry of radome (Primary Antenna).

Connect the "RF Cable (not supplied by Intellian)" from the "ANTENNA" connector on the rear of the "Secondary ACU" to the "RF Connector" inside cable entry of radome (Secondary Antenna).

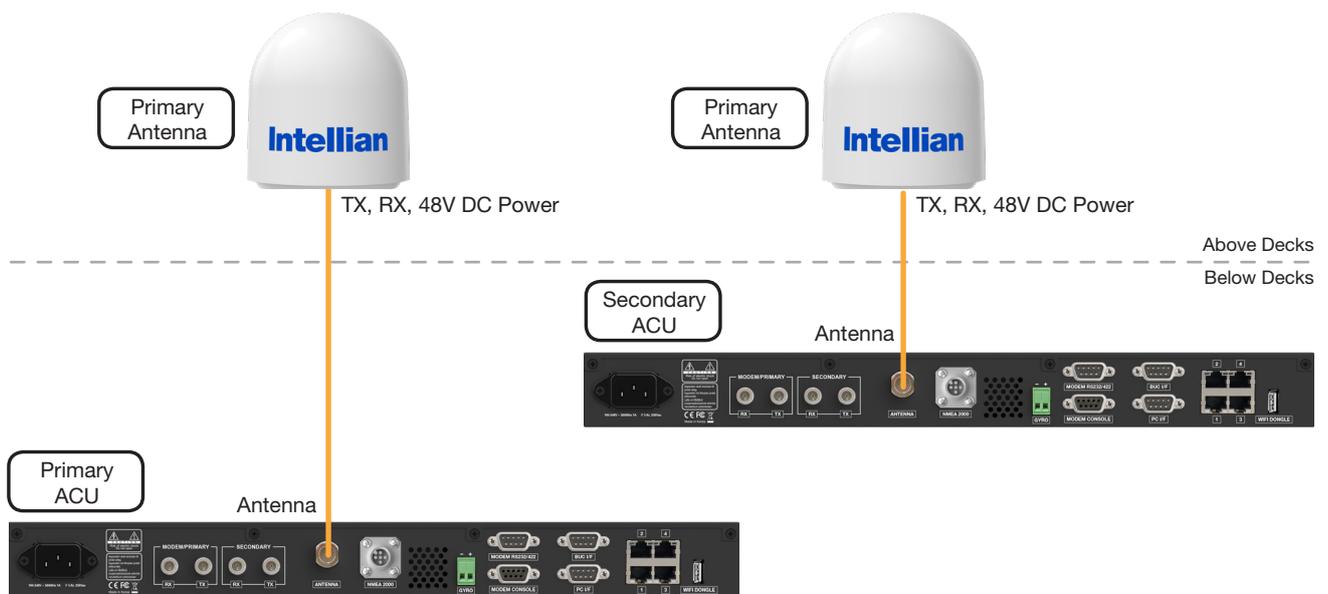


Figure: ACU to Antenna Cable Connection for Dual Antenna System

Connecting to Modem

Connect the "RG-6 RF cable" from the "MODEM Rx" connector on the rear of the ACU to the "Rx connector" on the modem.

Connect the "RG-6 RF cable" from the "MODEM Tx" connector on the rear of the ACU to the "Tx connector" on the modem.

When using the OpenAMIP, connect the "Ethernet cable" from the "LAN 1" port on the rear of the ACU to the "LAN" port on the modem.

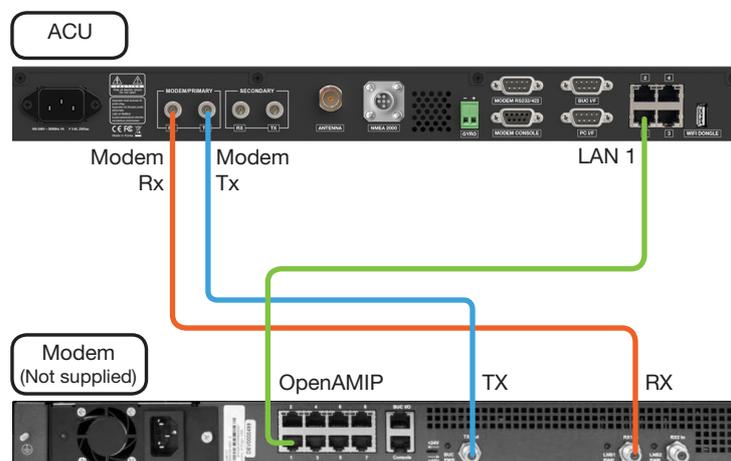


Figure: ACU to Modem Cable Connection

Connecting to Additional ACU (Optional: For Dual Antenna System)

To use the Dual Antenna System, the antenna system needs to be installed with the two of ACUs and antennas to support the Dual Antenna System operation. The Primary ACU is connected to the additional Secondary ACU as follows.

Connect the "RG-6 RF cable" from the "SECONDARY-Rx" connector on the rear of the "Primary ACU" to the "PRIMARY-Rx" connector on the rear of the "Secondary ACU".

Connect the "RG-6 RF cable" from the "SECONDARY-Tx" connector on the rear of the "Primary ACU" to the "PRIMARY-Tx" connector on the rear of the "Secondary ACU".

Connect the "Ethernet cable" to the each "LAN 3" connector on the rear of the "Primary ACU" and "Secondary ACU".

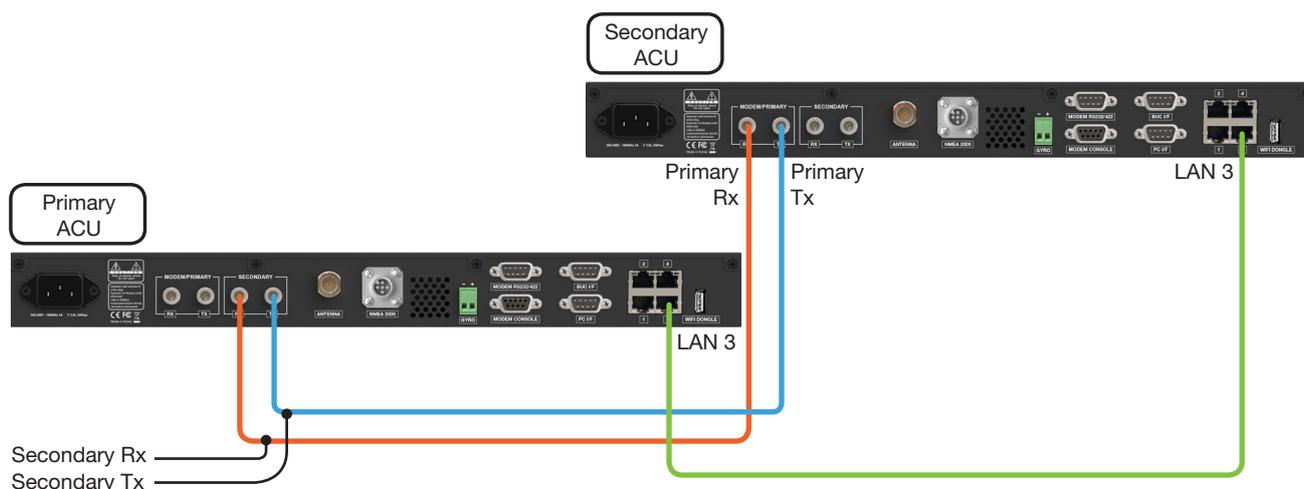


Figure: Additional ACU Cable Connection for Dual Antenna System

Connecting to Switch Router

Connect the "Ethernet cable" from the "LAN 2" port on the rear of the ACU to the "LAN" port on the Switch Router.



Figure: ACU to Switch Router Cable Connection

Connecting Ship's Gyrocompass

For satellite tracking, you must connect a ship's gyrocompass to the antenna system through the gyrocompass interface on the rear of the ACU. Intellian's ACU supports NMEA 0183 (GYRO) and NMEA 2000 gyrocompass inputs. If the ship's gyrocompass output uses a different standard, a compass converter should be installed to supply the required NMEA input.

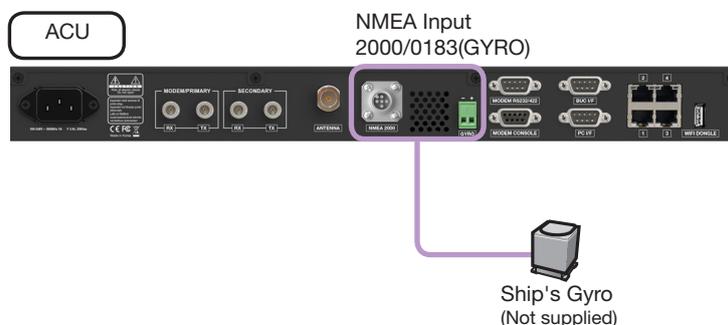


Figure: ACU to Ship's Gyrocompass Cable Connection

How to Connect NMEA 0183 Gyrocompass Cable


1. Turn the screw located on the top of the 2-position terminal block counterclockwise enough using the Phillips Screwdriver.
2. Connect NMEA 0183 Gyrocompass Cable to the terminal block.



NOTE

When connecting the NMEA 0183 gyrocompass cable:

1. The positive and negative marks are shown on the top of the terminal block. Check the positive and negative correctly and connect the cables.
2. Strip the end of the cables up to 5mm (0.2"). Do not solder the cables.

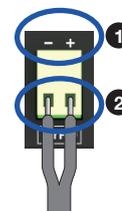

3. Fully turn the screw clockwise to secure the cable. Apply equally to both positive and negative cables.

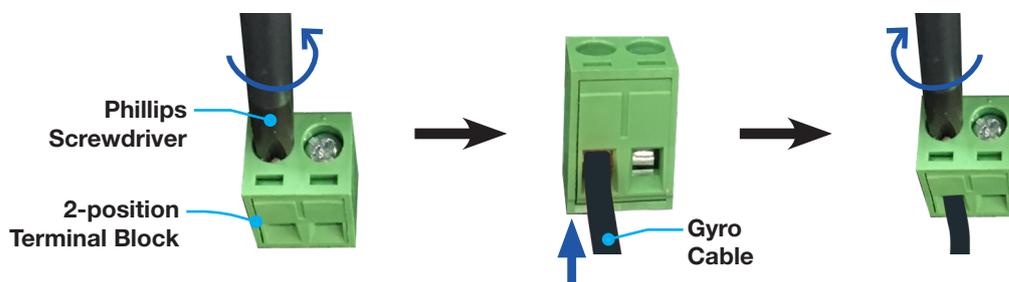



Figure: NMEA 0183 Gyrocompass Cable Connection

ACU Connector Pinouts Guide

The ACU connector pins and their corresponding descriptions are shown in the figure and table.


Console Connector (Modem Interface)

 Antenna Control Unit (ACU):



*D-Sub 9 Pin: MODEM CONSOLE
(Female Connector Type)*

 Cable Connector:




*D-Sub 9 Pin
(Male Connector Type)*

Pin	Signal
1	GND
2	GPS_OUTA
3	MODEM_LOCK
4	MUTE 0
5	NC
6	GPS_OUTB
7	EXM_AGC
8	MUTE 1
9	NC


RS232/RS422 Connector (Modem Interface)

 Antenna Control Unit (ACU):



*D-Sub 9 Pin: MODEM RS232/422
(Male Connector Type)*

 Cable Connector:




*D-Sub 9 Pin
(Female Connector Type)*

Pin	Signal
1	NC
2	Modem TX / MAX422 RX+
3	Modem RX / MAX422 TX+
4	NC
5	GND
6	NC
7	MAX422 RX-
8	MAX422 TX-
9	NC


RS232 Connector (PC Interface)

 Antenna Control Unit (ACU):



*D-Sub 9 Pin: PC I/F
(Male Connector Type)*

 Cable Connector:




*D-Sub 9 Pin
(Female Connector Type)*

Pin	Signal
1	NC
2	PC RX
3	PC TX
4	NC
5	GND
6	NC
7	IARM TO PC_ DBG_ TX
8	PC TO IARM_ DBG_ RX
9	NC


RS232/RS422 Connector (BUC Interface)

 Antenna Control Unit (ACU):



*D-Sub 9 Pin: BUC I/F
(Male Connector Type)*

 Cable Connector:



*D-Sub 9 Pin
(Female Connector Type)*

• For Ku-band Model


Pin	Signal
1	NC
2	BUC RS232 RX
3	BUC RS232 TX
4	GND
5	GND
6	NC
7	NC
8	NC
9	NC

• For Ka-band Model (Optional)

Pin	Signal
1	BUC RS422 RX+
2	BUC RS422 RX-
3	BUC RS422 TX+
4	GND
5	GND
6	BUC RS422 TX-
7	BUC KEYLINE RX+
8	BUC KEYLINE RX-
9	NC


NMEA 2000 Connector

Antenna Control Unit (ACU):

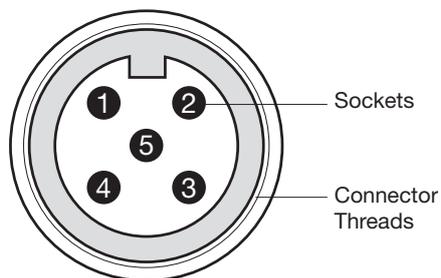

**NMEA 2000 Connector
(Male Connector Type)**

Cable Connector:

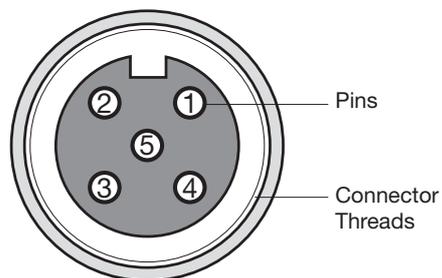


**NMEA 2000 Connector
(Female Connector Type)**

Pin	Signal
1	Shield
2	NET-S, (power supply positive, +V)
3	NET-C, (power supply common, -V)
4	NET-H, (CAN-H)
5	NET-L, (CAN-L)


LAN 1~4 Ports

Antenna Control Unit (ACU):

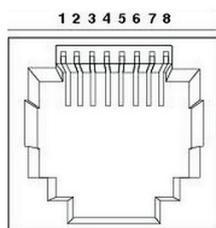

LAN Ports

Cable Connector:

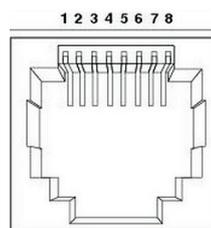

LAN Ports

Pin	Signal
1	Tx-
2	Tx+
3	Rx-
4	NC
5	NC
6	Rx+
7	NC
8	NC

ACU to PC Communication Setup

You can establish data communication between the ACU and a PC the using the following method.

TCP/IP Connection

Connection through Front Panel Management Port

The network is automatically configured by DHCP without the need for additional PC IP configuration.

1. Connect an Ethernet cable from the Management LAN port on the front of the ACU to the LAN port of PC.
2. The network connection is established automatically.
3. Use the following IP address to access Intellian AptusNX page.
 - **IP Address: 192.168.2.1 (Default)**



Figure: Front Panel Management LAN Port Connection

USB Connection:

Connection through Front Panel Right USB Port

The "Right USB port" just allows the USB device to be connected to each other for log download, backup/restore antenna settings, firmware upgrade. The "Left USB port" is not available in this model.



CAUTION

CAUTION

Make sure that the USB is connected to the "Right USB port" to communicate with the antenna. Do not connect to the "Left USB port".



Figure: Front Panel Right USB Port Connection

Wi-Fi Connection

Connection through Rear Panel Wi-Fi Dongle

Intellian provides the Wi-Fi Dongle for Wi-Fi connection. You can connect to the ACU via Wi-Fi for easy management and control whenever you are on the vessel.


1. Connect an Ethernet cable from the Management LAN port on the front of the ACU to the LAN port of PC. The network connection is established automatically.
2. Bring the Wi-Fi Dongle is located in the ACU package. Plug the Wi-Fi Dongle into the USB port on the rear of the ACU.



Figure: Rear Panel Wi-Fi Dongle Connection



3. Use the following IP address to access Intellian AptusNX page.
 - **IP Address: 192.168.2.1 (Default)**
4. Log into the ACU by typing in User Name and Password information. If this system has not been changed from the factory default:
 - **User Name: intellian**
 - **Password: 12345678**
5. Select the "SETUP" on the main menu then select the "Network" menu. Choose the AP "Enable" button on the "Wi-Fi Access Point Configuration". If you don't want to use Wi-Fi Connection, choose the AP "Disable" button.
6. Check the "SSID (Wi-Fi AP Name)" information.
7. Choose the SSID Broadcast "Enable" button to show the SSID (Wi-Fi AP Name) on the Wi-Fi list.
8. Click the "Apply" button to apply the settings to the system. Then perform the "iARM Save & Reboot" on page 79.
9. After rebooting, access to the Wi-Fi.

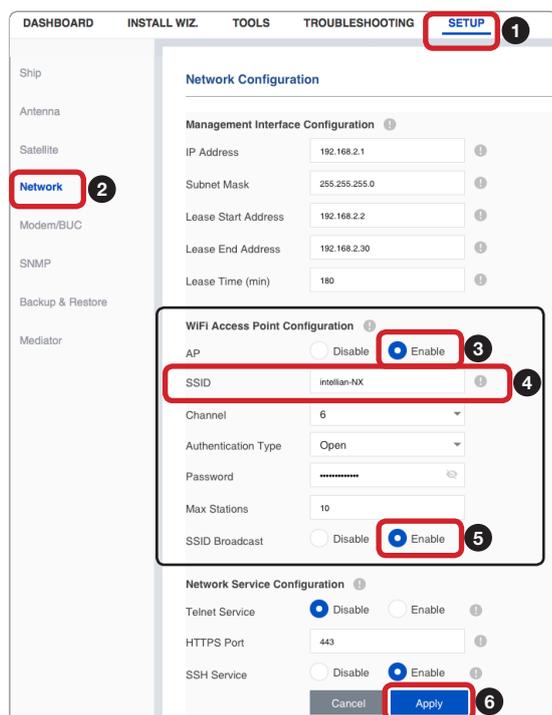

Operating Install Wizard

Turning On System

Make sure the antenna has a clear view of the sky. Press the Power button on the front of the Antenna Control Unit (ACU) then wait a few minutes for system startup. Once the antenna finds the satellite, the "POWER" status lights will be lit Green.

Accessing AptusNX

The network is automatically configured by DHCP without the need for additional PC IP configuration.

1. Connect an Ethernet cable from the Management LAN port on the front of the ACU to the LAN port of PC.
2. The network connection is established automatically.
3. Use the following IP address to access Intellian AptusNX page.
 - **IP Address: 192.168.2.1 (Default)**

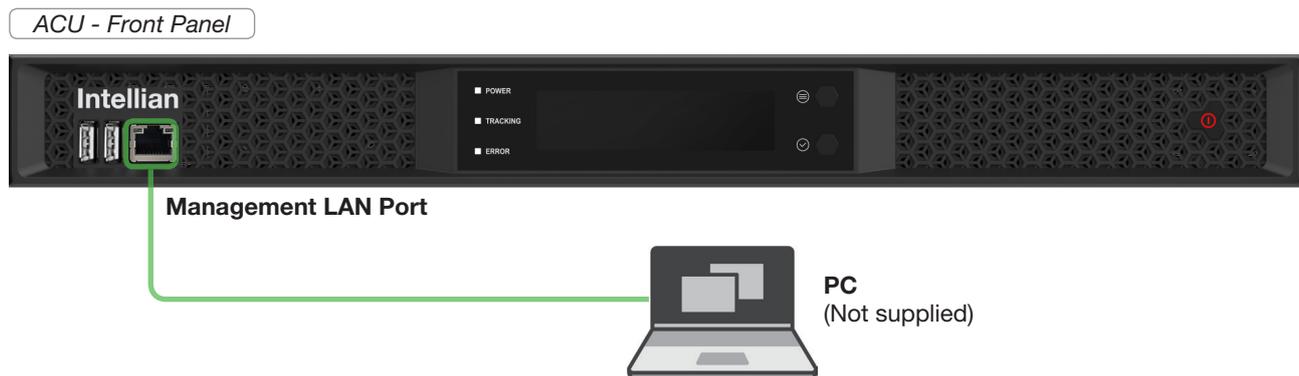


Figure: Front Panel Management LAN Port Connection

Starting Install Wizard


The Install Wizard will guide you through the steps of setting up the antenna system for commissioning. We highly recommend using this wizard to complete your installation and commissioning the system. You can choose to exit the wizard at any time by clicking the Finish button. You can also skip a step by clicking the Next button. However, it is recommended to follow the procedure for the initial commissioning. Before you start, please make sure the basic device connections (antenna, modem, etc) are connected to ACU properly. This wizard includes a brief explanation of the purpose and action buttons to perform the setting values. After accessing the AptusNX main page, go to the "INSTALL WIZ." on the main menu then follow these steps.



NOTE

The detailed description of each function is written on the "Using AptusNX" chapter on page 66.


✓ **Welcome Page**

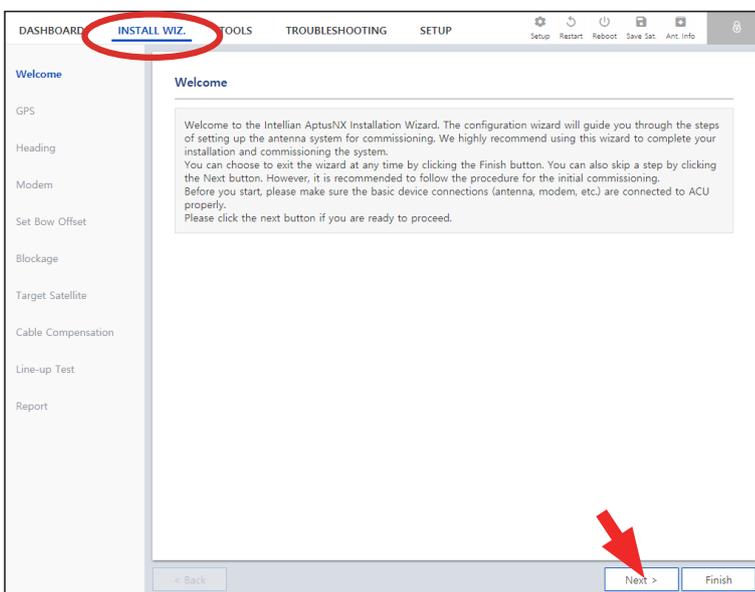

Description

Displays the welcome message. Click the "Next" button to start.

✓ **Step 1: GPS**

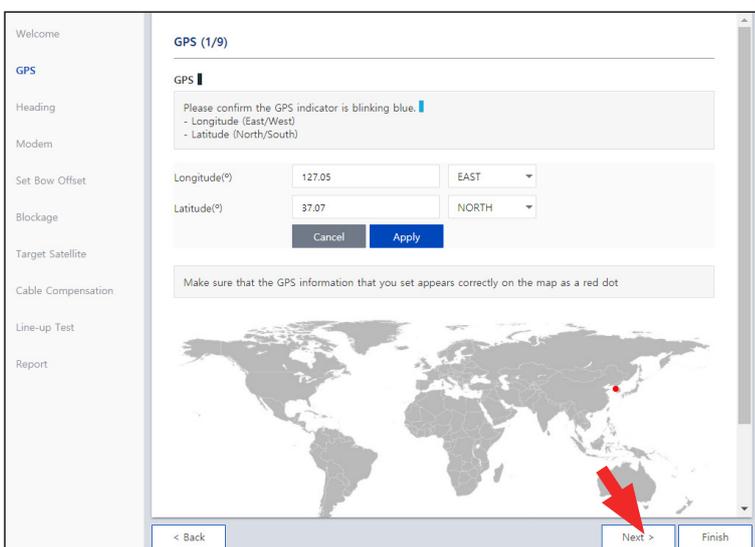

Description

Set the GPS position of the vessel for searching for a satellite. Check the GPS status connected to the antenna system. The indicator right of the title shows the GPS status. Please confirm the GPS indicator is Blue (blinking).

- Blue (blinking): the system received a correct GPS signal.
- Red: the GPS signal is abnormal or the received value is incorrect (Error).
- Black: the system has not received a GPS signal. You can enter the GPS value manually to set the GPS position.

If you have no problems, click the "Next" button.

✓ **Step 2: Heading**

The screenshot shows the 'Heading (2/9)' configuration screen. On the left is a navigation menu with options: Welcome, GPS, Heading, Modem, Set Bow Offset, Blockage, Target Satellite, Cable Compensation, Line-up Test, and Report. The main area is titled 'Heading Device' and contains the following fields: 'Current Device' (dropdown menu set to NMEA), 'Baud Rate' (dropdown menu set to 4800), and 'Sentence' (text input set to SHEHDT, 5.5, T*2F). Below these are 'Cancel' and 'Apply' buttons. There is also a 'Heading(°)' field with a value of 5.5 and its own 'Cancel' and 'Apply' buttons. At the bottom of the screen, there are three buttons: '< Back', 'Next >', and 'Finish'. A red arrow points to the 'Next >' button.

Description

Set the ship's heading device. Choose the device type from the "Current Device" drop-down list. The indicator right of the title shows the device connection status.

- Blue: a ship's heading device is connected.
- Black: a ship's heading device is not connected.

If you have no problems, click the "Next" button.

✓ **Step 3: Modem**

The screenshot shows the 'Modem (3/9)' configuration screen. On the left is a navigation menu with options: Welcome, GPS, Heading, Modem, Set Bow Offset, Blockage, Target Satellite, Cable Compensation, Line-up Test, and Report. The main area is titled 'Modem' and contains the following fields: 'Select Modem' (dropdown menu set to IDIRECT OPENAMIP), 'Modem Port' (dropdown menu set to ETHERNET), 'Modem Protocol' (dropdown menu set to Open AMIP), and 'GPS Out Sentence' (dropdown menu set to GLL). Below these are radio buttons for 'Use Tx Mute' (NO selected) and 'Use Modem Lock' (YES selected), each with an information icon. There are 'Cancel' and 'Apply' buttons. The 'Modem Connection' section includes fields for 'Modem IP' (10.110.5.193), 'Port' (23), 'ID' (admin), and 'Password' (masked with dots). There is a checked 'Auto Connection' checkbox and 'Cancel' and 'Connect' buttons. At the bottom, there is a 'Last Update Date' field showing 2018.10.22 5h:44m:30s. At the very bottom of the screen, there are three buttons: '< Back', 'Next >', and 'Finish'. A red arrow points to the 'Next >' button.

Description


Select your modem type from the "Select Modem" drop-down list for loading pre-configuration which type of modem is used. The settings related to the modem interface will be set automatically once the modem type is selected. When you select "USER SETTING" the rest settings can be changed separately.

If you have no problems, click the "Next" button.

✓ **Step 4: Set Bow Offset**

For setting bow offset, need to select a trackable satellite. There are two satellite tracking methods. Select the desired tracking type. When Antenna tracks to the satellite selected, the bow offset will be set up automatically based on information of GPS.

(Option 1: Using Beam Switch Type)

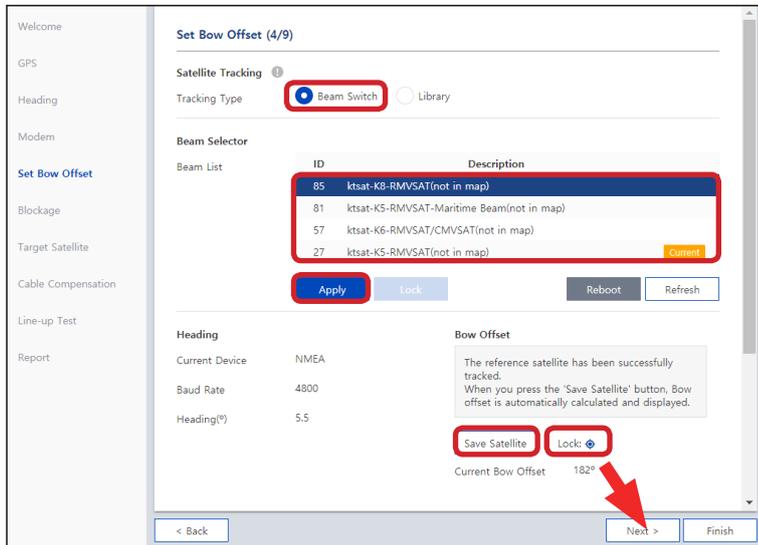

Description


- **Step 1:** choose the "Beam Switch" button on the "Tracking Type".
- **Step 2:** select a satellite in beam list then click the "Apply" button.

Please wait until antenna terminal is tracking to the satellite. The bow offset will be set up automatically.

- **Step 3:** check the "Lock On" mark and click the "Save Satellite" button in the "Bow Offset" menu to save the bow offset information to ACU.

If you have no problems, click the "Next" button.

(Option 2: Using Library Type)

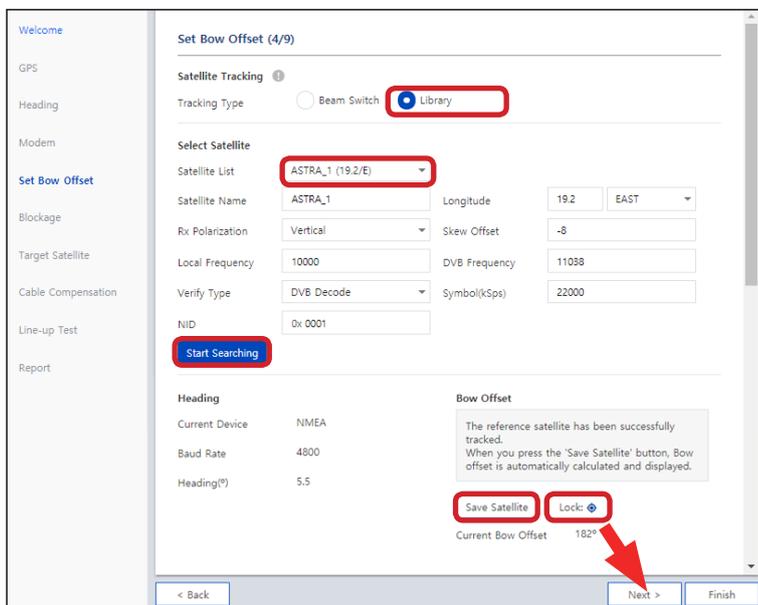

Description


- **Step 1:** choose the "Library" button on the "Tracking Type".
- **Step 2:** select a satellite in satellite library list then click the "Start Searching" button.

Please wait until antenna terminal is tracking to the satellite. The bow offset will be set up automatically.

- **Step 3:** check the "Lock On" mark and click the "Save Satellite" button in the "Bow Offset" menu to save the bow offset information to ACU.

If you have no problems, click the "Next" button.

✓ **Step 5: Blockage**

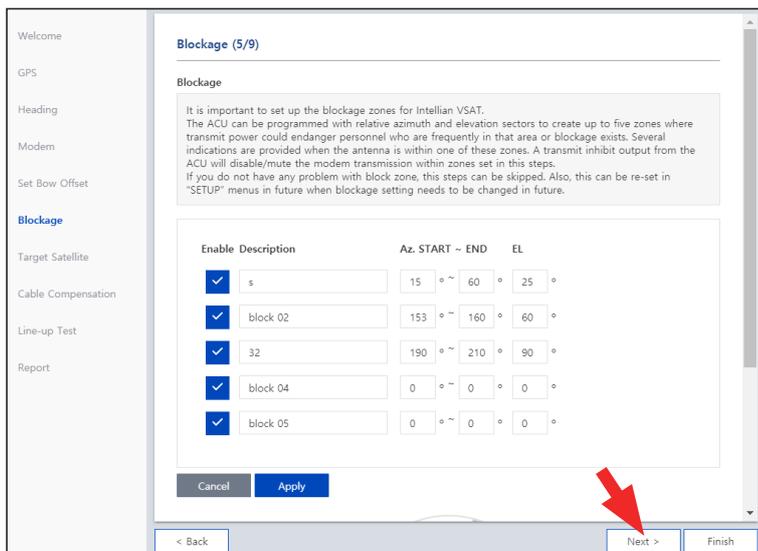

Description

It is important to set up the blockage zones for Intellian VSAT. The ACU can be programmed with relative azimuth and elevation sectors to create up to five zones where transmit power could endanger personnel who are frequently in that area or blockage exists. The "AZ Start" is where the relative azimuth starts and the "AZ End" is where the relative azimuth ends (Range: 0 ~ 360). The "EL" is where the elevation block starts (Range: 0 ~ 90).

If you have no problems, click the "Next" button.

✓ **Step 6: Target Satellite**


Sets the target satellite that you want to track. There are two methods for selecting a target satellite.



NOTE

The following images in this step show when the system is using the Open AMIP modem. In case of using other modems, refer to the "Modem/BUC Setting" on page 95 for more details.

(Option 1: Using Controlled by Modem)

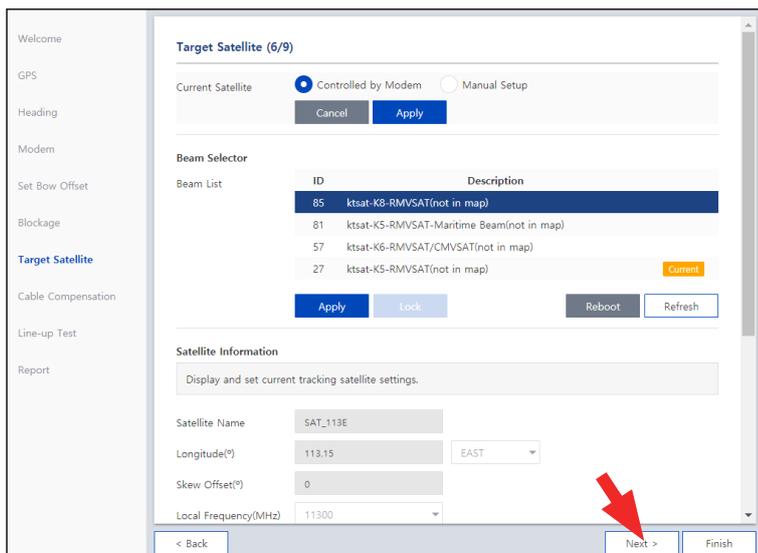

Description

This method is recommended.

When you already set the modem connection in the previous step (Step 3: Modem), the "Controlled by Modem" button on the "Current Satellite" is selected and current satellite information and NBD information is displayed automatically.

If you have no problems, click the "Next" button.

(Option 2: Using Manual Setup)

Target Satellite (6/9)

Current Satellite: Controlled by Modem Manual Setup

Satellite Information

Satellite Name: SAT_116E

Longitude(°): 116 EAST

Skew Offset(°): -12

Local Frequency(MHz): 11300

RX Polarization: Vertical

TX Polarization: Horizontal

Identify: Modem Lock DVB Lock

NBD Information

< Back Next > Finish

Description

When you did not set the modem connection, select the "Manual Setup" button and enter the satellite information and NBD information manually to track a satellite. Click the "Apply" button.

If you have no problems, click the "Next" button.

✓ Step 7: Cable Compensation

Cable Compensation (7/9)

Cable Compensation

Before running this procedure, make sure the ADU and BDU are properly terminated and connected. This procedure performs the calibration to ensure consistent RF level. Click the "Start" button and wait a moment. The cable loss will be calculated and compensated automatically.

Start

Result: There is no Compensation Margin values.

RF Uplink Frequency (Mhz): 14100

Current IF Frequency (Mhz): 1300

Cancel Apply

< Back Next > Finish

Description


Before running this procedure, make sure the ADU and BDU are properly terminated and connected. This procedure performs the calibration to ensure consistent RF level. Click the "Start" button and wait for a moment. The cable loss will be calculated and compensated automatically.

If you have no problems, click the "Next" button.

✓ **Step 8: Line-up Test**

Perform a line-up test by the satellite operator to confirm antenna performance and operation status.

(Option 1: Using iDirect Open AMIP Modem)

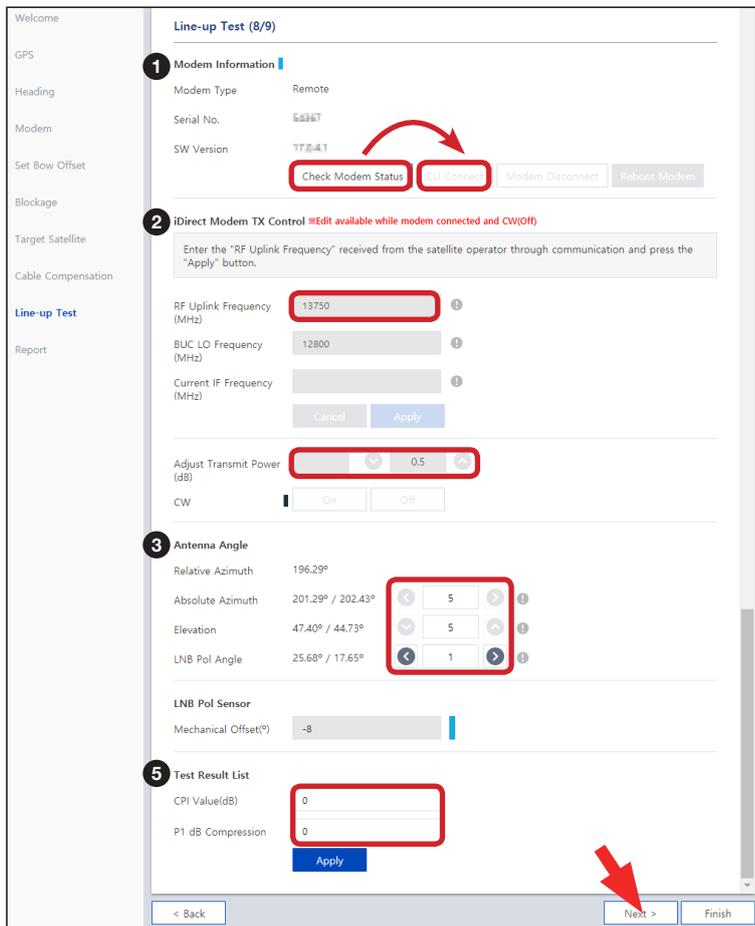

Description


1. Check the modem status which is ready for a connection by clicking the **"Check Modem Status"** button. Then connect to iDirect Open AMIP modem by clicking the **"CLI Connect"** button.
 2. Enter the **"RF Uplink Frequency"** received from the satellite operator through communication and click the **"Apply"** button. *This menu can be edited when the antenna is connected to iDirect Open AMIP modem and the CW is off.*
 3. Adjust the **"Transmit Power"** of the frequency using the arrow keys which increases or decreases by 0.5dBm.
 4. Adjust the **"Antenna Angle"**.
 5. Enter the **"Test Result"** value received from the satellite operator and click the **"Apply"** button.
- If you have no problems, click the "Next" button.

Refer to the following table for a detailed explanation of each menu.

No.	Item	Description
①	Modem Information	<p>Checks the iDirect Open AMIP modem information. The indicator right of the title shows the device connection status. (Blue: a iDirect Open AMIP modem is connected. Black: a iDirect Open AMIP modem is not connected.)</p> <ul style="list-style-type: none"> • Modem Type: displays the iDirect Open AMIP modem type. • Serial No.: displays the iDirect Open AMIP modem's serial number. • SW Version: displays the iDirect Open AMIP modem's sw version. - Check Modem Status: before the CLI connection, check the modem status which is ready for a connection by clicking the "Check Modem Status" button. - CLI Connect : connects to iDirect Open AMIP modem by clicking the "CLI Connect" button. - CLI Disconnect: disconnects to iDirect Open AMIP modem by clicking the "CLI Disconnect" button.

No.	Item	Description
②	iDirect Modem TX Control	<p>Adjusts the modem frequency to receive optimal signal. This menu can be edited when the antenna is connected to iDirect Open AMIP modem and the CW is off. Click the "Apply" button to apply the settings to the system.</p> <ul style="list-style-type: none"> • RF Uplink Frequency (MHz): enters the RF uplink frequency received from the satellite operator through communication. • BUC LO Frequency (MHz): the BUC LO frequency is applied automatically. The value is fixed according to the satellite band. • Current IF Frequency (MHz): the current IF frequency is applied automatically. The value is "RF Uplink Frequency" value - "BUC LO Frequency". <p>The following menus are performed to adjust the transmit power of the frequency.</p> <ul style="list-style-type: none"> • Adjust Transmit Power: adjusts the power calibration value using the arrow keys which increases or decreases by 0.5dBm. • CW: selects whether or not to use the modulation function (On or Off). The indicator right of the title shows the CW status. (Blue: a CW is on. Black: a CW is off.) To edit the details of the iDirect Modem TX Control menu, you must keep this function is off.
③	Antenna Angle	<p>Adjusts the antenna angle to receive optimal signal.</p> <ul style="list-style-type: none"> • Relative Azimuth: displays the relative azimuth angle. • Absolute Azimuth: adjusts the absolute azimuth angle using the arrow keys. • Elevation: adjusts the elevation angle using the arrow keys. • LNB Pol Angle: adjusts the LNB Pol angle using the arrow keys.
④	LNB Pol Sensor	<p>Displays the Mechanical Offset value of the LNB Pol Sensor. The indicator right of the title shows the LNB Pol Sensor status. (Blue: the LNB pol sensor is on. Black: the LNB pol sensor is off.)</p> <ul style="list-style-type: none"> • Mechanical Offset: displays the mechanical offset value of the LNB Pol Sensor.
⑤	Test Result List	<p>Enters the test result value received from the satellite operator.</p> <ul style="list-style-type: none"> • CPI Value(dB): enters the CPI value. • P1 dB Compression: enters the P1 dB compression.

(Option 2: Using Other Modems)

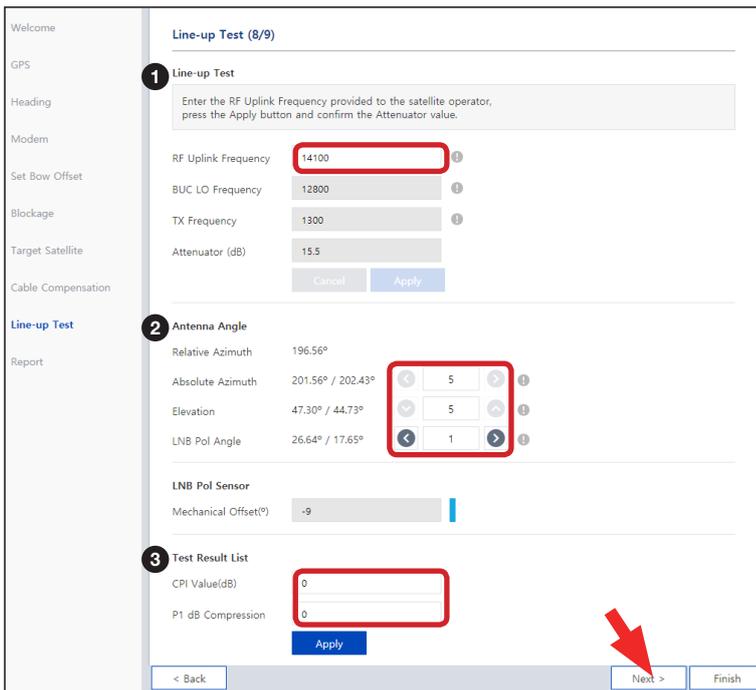

Description

1. Enter the "RF Uplink Frequency" received from the satellite operator through communication and click the "Apply" button.
 2. Adjust the "Antenna Angle".
 3. Enter the "Test Result" value received from the satellite operator.
- If you have no problems, click the "Next" button.

Refer to the following table for a detailed explanation of each menu.

No.	Item	Description
①	iDirect Modem TX Control	<p>Adjusts the modem frequency to receive optimal signal. Click the "Apply" button to apply the settings to the system.</p> <ul style="list-style-type: none"> • RF Uplink Frequency (MHz): enters the RF uplink frequency received from the satellite operator through communication. • BUC LO Frequency (MHz): the BUC LO frequency is applied automatically. The value is fixed according to the satellite band. • TX Frequency: the TX frequency is applied automatically. The value is "RF Uplink Frequency" value - "BUC LO Frequency". • Attenuator (dB): the attenuator is applied automatically.
②	Antenna Angle	<p>Adjusts the antenna angle to receive optimal signal.</p> <ul style="list-style-type: none"> • Relative Azimuth: adjusts the relative azimuth angle. • Absolute Azimuth: adjusts the absolute azimuth angle. • Elevation: adjusts the elevation angle. • LNB Pol Angle: adjusts the LNB Pol angle.
③	Test Result List	<p>Enters the test result value received from the satellite operator.</p> <ul style="list-style-type: none"> • CPI Value(dB): enters the CPI value. • P1 dB Compression: enters the P1 dB compression.

✓ **Step 9: Report**



NOTE

NOTE

The following image in this step shows when the system is using the Open AMIP modem. In case of using other modems, the report items displayed may vary with the image below.

Description

Displays the configuration report (System Information, ACU Parameter, Modem Parameter, Line-up Test).

You can save the results into the ACU by clicking the "Save Report" button and print this page by clicking the "Print" button.

Click the "View Last Report" button to check the recently saved report information including the saving date and time.

After complicating the steps, click the "Finish" button.

Operating ACU

Introduction

Antenna Control Unit (ACU)

The Antenna Control Unit (ACU) controls the various settings of the antenna.

ACU Front Panel

The following figure shows the ACU's front panel.

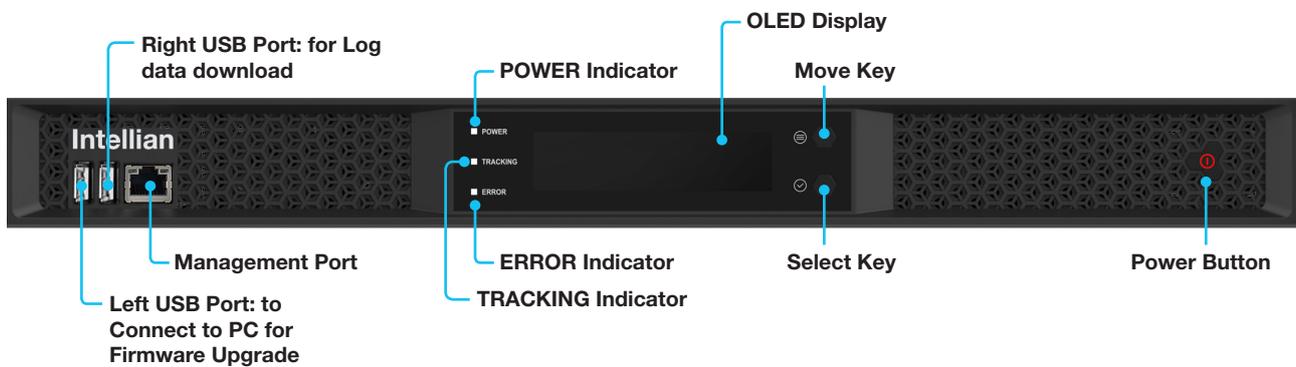


Figure: Name of ACU Front Panel

The following table shows the function of each touch key.


Touch key	Function
Power Button	Power on/off the ACU.
Move Key	Moves to the desired screen.
Select Key	Selects the desired screen.

The following table shows status indicators on the face of ACU.

LED Display	Color	Description
POWER	Steady Green	The ACU is powered on.
	Off	The ACU is powered off.
ERROR	Steady Red	The antenna is faulty.
TRACKING	Steady Green	The antenna is in tracking mode.

ACU Display Menu

The following figure shows the ACU display menu.

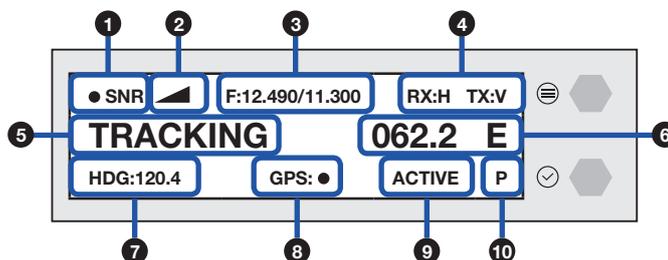

The following table shows the function of each touch key.


No.	Item	Description
①	Satellite Lock	Displays the satellite lock status.
②	Signal Level	Displays the antenna signal level.
③	Frequency Information (Target/LNB Local)	Displays the frequency information (Target / LNB Local).
④	Polarization	Displays the Rx/Tx polarization (H: Horizontal / V: Vertical).
⑤	Antenna Status	Displays the antenna status (Tracking / Search / Setup).
⑥	GPS Compass	Displays the GPS compass (E: East / W: West).
⑦	Heading Compass	Displays the heading compass.
⑧	GPS Lock	Displays the GPS lock status.
⑨	Antenna Active State	<p><i>This function is available when using Dual Antenna System.</i></p> <p>Displays the antenna's active state. The active antenna (either primary or secondary antenna) is communicating (Tx/Rx) with a satellite.</p> <ul style="list-style-type: none"> ACTIVE: the active antenna is displayed as "ACTIVE" on the ACU screen.
⑩	Antenna Role Status	<p><i>This function is available when using Dual Antenna System.</i></p> <p>Displays the antenna's role of the primary antenna or secondary antenna.</p> <ul style="list-style-type: none"> P (Primary): when running the master ACU which connected to the modem and the gyrocompass, select the primary role. The master ACU is assigned and operated as the primary antenna, which will communicate with the target satellite. S (Secondary): when running the slave ACU, select the secondary role. The secondary ACU is assigned and operated as the secondary antenna, which will be on standby and ready to assume primary antenna role to provide better service in tracking failure and low signal level status.

Startup

With the system installed and power applied, the ACU display will show the following sequence.



✓ **Startup**

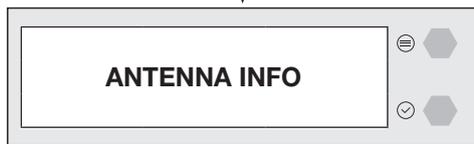


✓ **Initialize Antenna Information**


("Intellian XXXX" will appear. The "XXXX" is the model name.)



✓ **Initialize Elevation Angle**

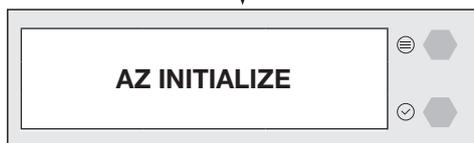


✓ **Initialize Azimuth Angle**

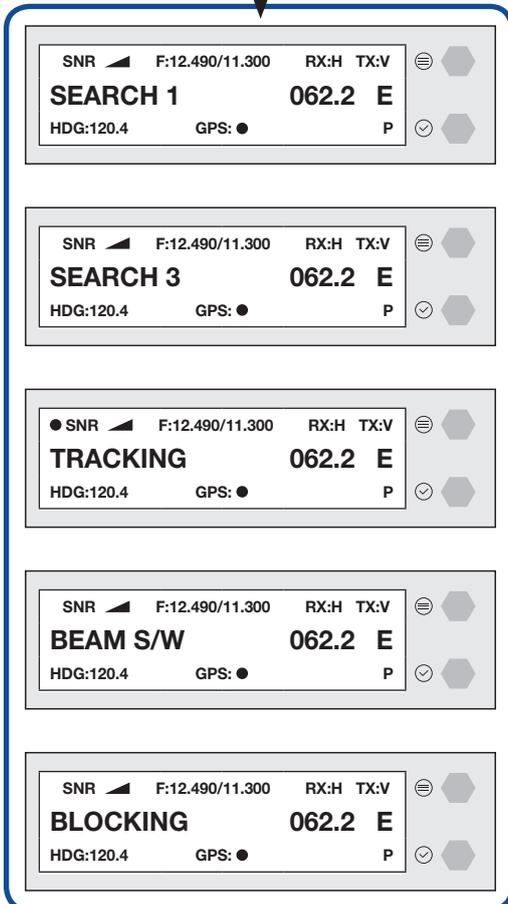


✓ **Antenna's Status**

(in Search 1 (Global Search), Search 3 (Local Search), Tracking, Beam Switching, Blocking)


When the antenna is controlled by AptusNX, the ACU displays the control mode status.

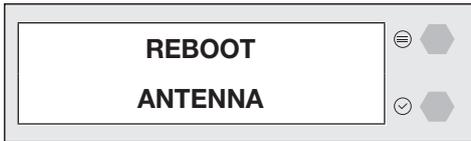

✓ **Control Mode Status**
(in Reboot Mode, Setup Mode, Test Mode)

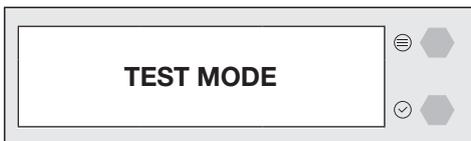


If the antenna is not communicated with ACU, the "COMMUNICATION ERROR" message will appear.

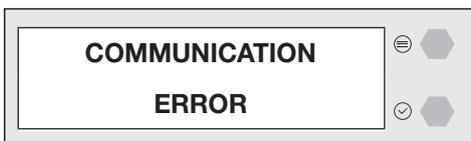


Diagnosis

Executes antenna Diagnosis test and shows the real-time diagnosis result.

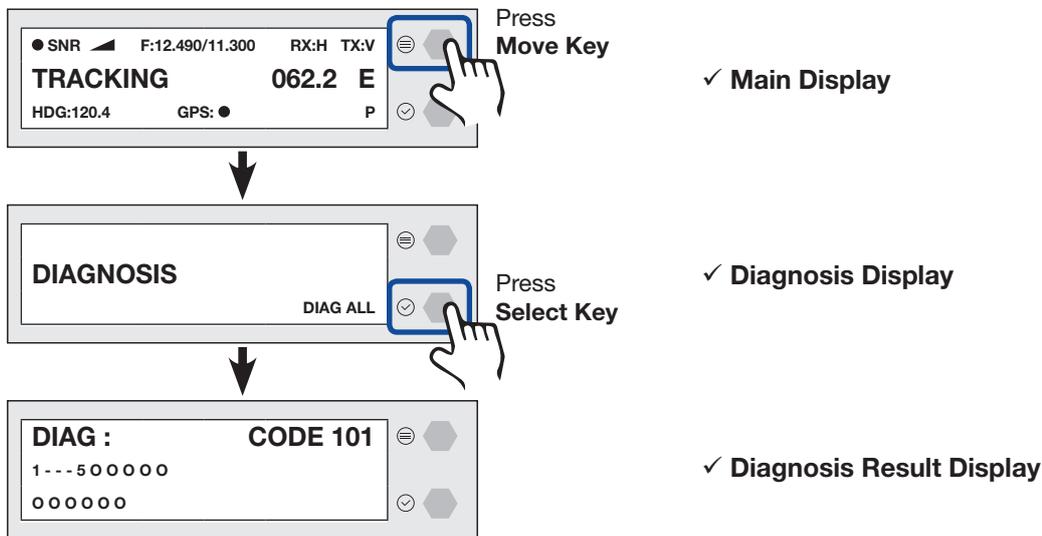


Refer to the diagnosis codes for the test results.

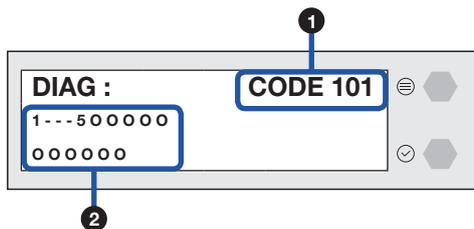


No.	Item	Description
①	Diagnosis Code	<p>Displays the diagnosis code.</p> <ul style="list-style-type: none"> • CODE 101: the data communication between the antenna and the ACU is tested. • CODE 102: the azimuth axis is tested. • CODE 103: the elevation axis is tested. • CODE 104: the cross-level axis is tested. • CODE 107: the rate sensor is tested. • CODE 110: the LNB / NBD is tested. • CODE 111: the LNB pol motor is tested. • CODE 113: the antenna power is tested. • CODE 114: the ACU power is tested. • CODE 116: the home sensor is tested.
②	Diagnosis Result	<ul style="list-style-type: none"> • An example of test result: 1 - - - 5 0 0 0 0 0 - ' - ' : the test has passed. - ' # ' : the test has failed (CODE102). - ' O ' : the test is not performed.

Antenna Information

Displays the Antenna/ACU serial number, PCU/STAB/ACU/i-ARM Version of the product.

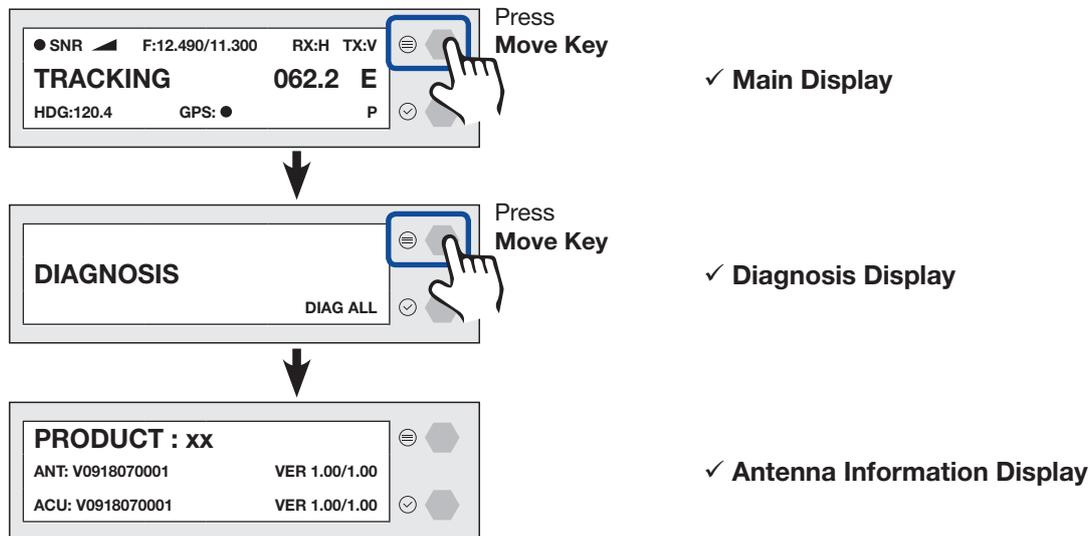


Refer to the Antenna Information display.

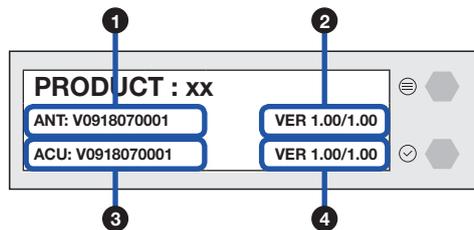


No.	Item	Description
①	Antenna Serial Number	Displays the Antenna serial number. The serial number is displayed depending on the product.
②	PCU Version/ STAB Version	Displays the PCU version / Stabilizer version.
③	ACU Serial Number	Displays the ACU serial number. The serial number is displayed depending on the product.
④	ACU Version/ i-ARM Version	Displays the ACU version / i-ARM version.

Interface Information

Displays the modem/heading type in use and the network connection status.

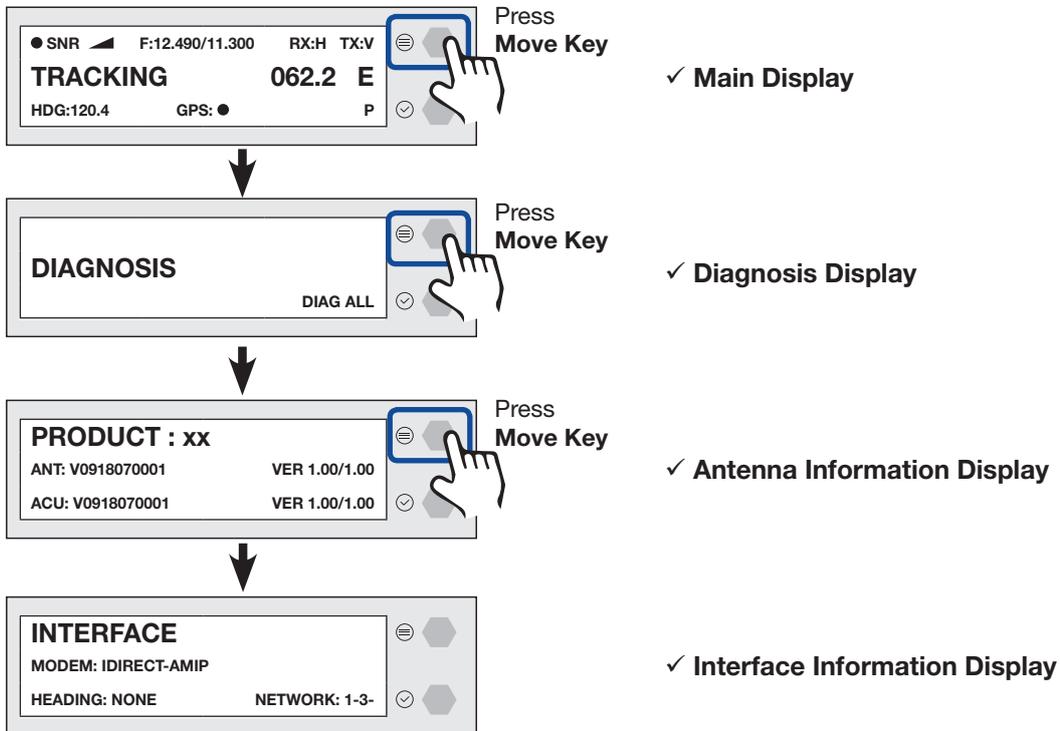


Refer to the Interface Information.

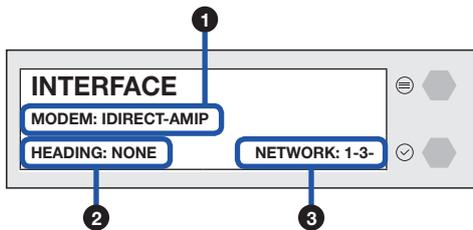

No.	Item	Description
①	MODEM	Displays the modem type in use. (IDIRECT-AMIP, SATLINK-SERIAL, IDIRECT I/O, SATLINK-VACP, NEWTEC AMIP, COMTECH I/O, ELEKTRIKOM AMIP, USER SETTING, COMTECH ROSS, GILAT-SE-II, HUGHES, IP STAR)
②	HEADING	Displays the heading type in use (NONE, NMEA0183, STATIC, NMEA2000).
③	NETWORK	Displays the network connection status with the ACU. <ul style="list-style-type: none"> An example of network result: 1-3- ' - ': the network is not connected. ' 1~4 ': the number (1~4) of connected ACU port to network.


USB Function

To use this function, a USB Memory Stick is connected to the USB port (located on the right USB Port of front of ACU). The USB Function supports the four menus (LOG DOWNLOAD, FIRMWARE UPLOAD, BACKUP TO USB, RESTORE FROM USB). For detailed information about each function, refer to the next page.

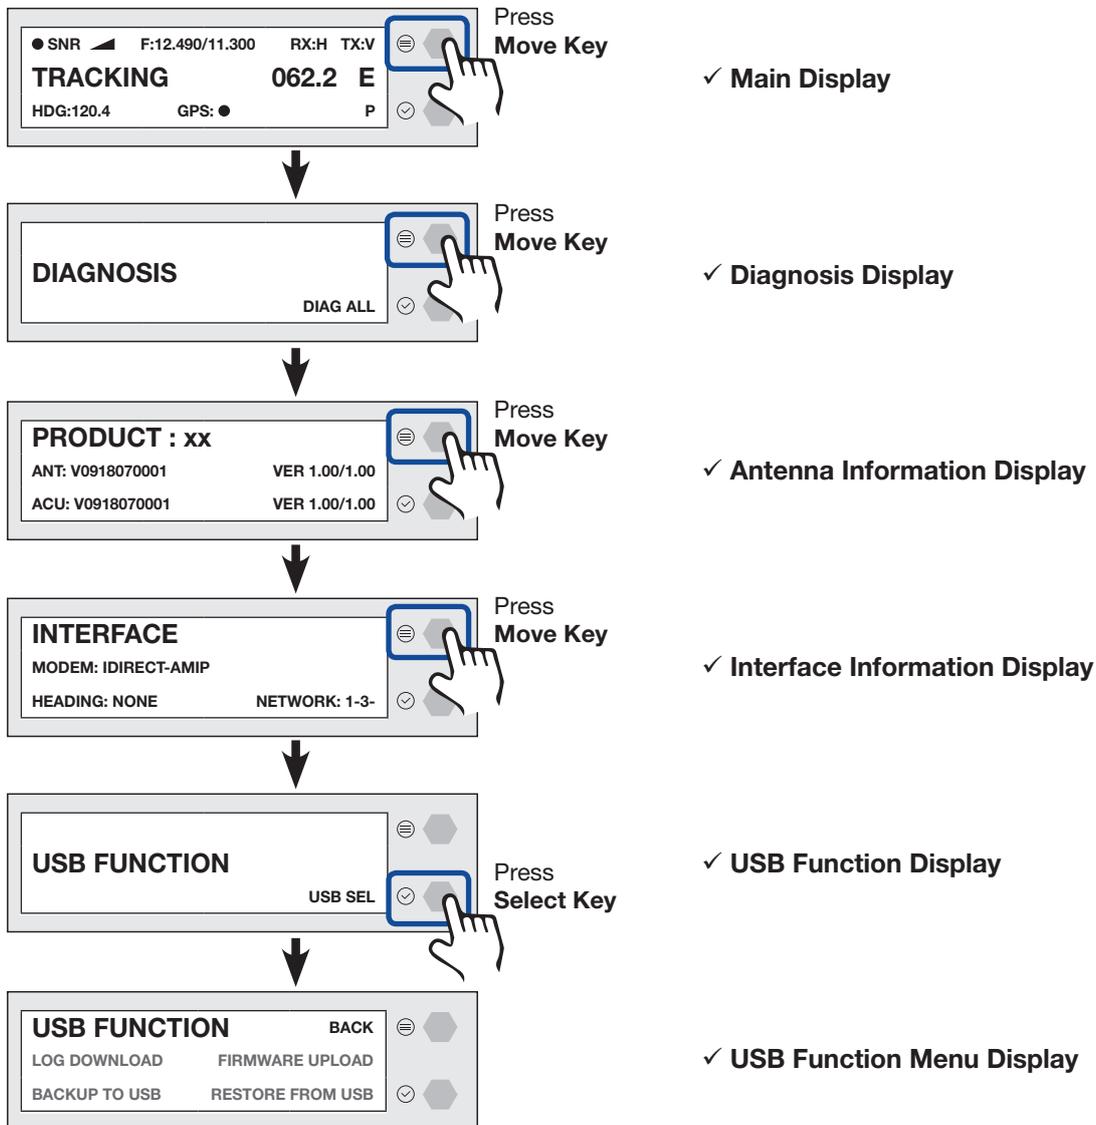


LOG DOWNLOAD

Downloads all data logs to the USB memory stick

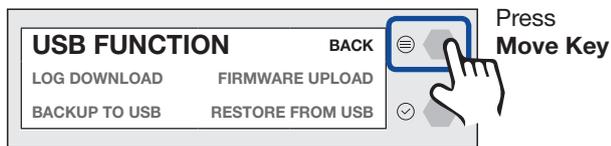


Press
Move Key

✓ USB Function Menu Display

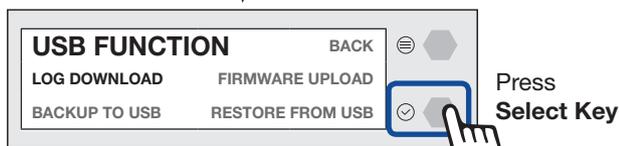


Press
Select Key

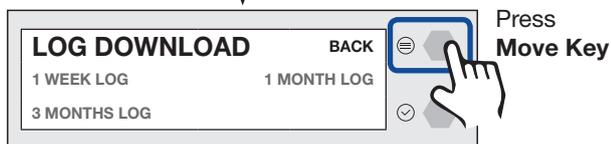

Press
Move Key

✓ Log Download Menu Display

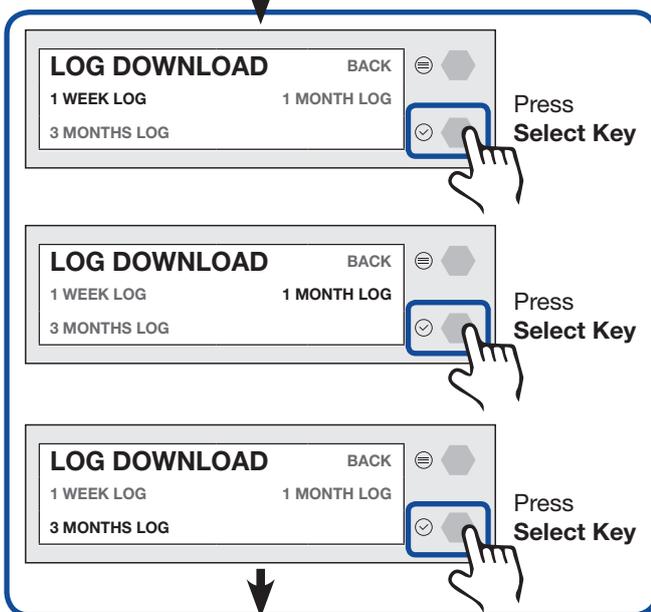


Press
Select Key

Press
Select Key

Press
Select Key

✓ Download Log File to USB


(Select one of three options: 1 WEEK LOG / 1 MONTH LOG / 3 MONTHS LOG)

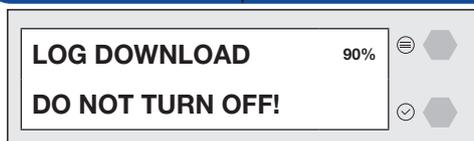

Press
Select Key

✓ Download Process Display

If there is not enough space on the USB memory stick, the "NOT ENOUGH SPACE" message will appear.

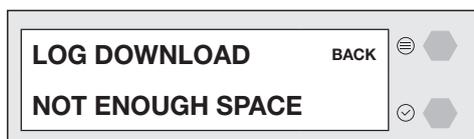


NOTE

NOTE

When you want to return to the previous display, select "BACK" screen then press the "Select" key.

FIRMWARE UPLOAD


To use Firmware Upload function, you need to design the folder structure. It supports up to FAT32. The ACU is upgraded with the FWP file in the designated folder of a USB memory stick.

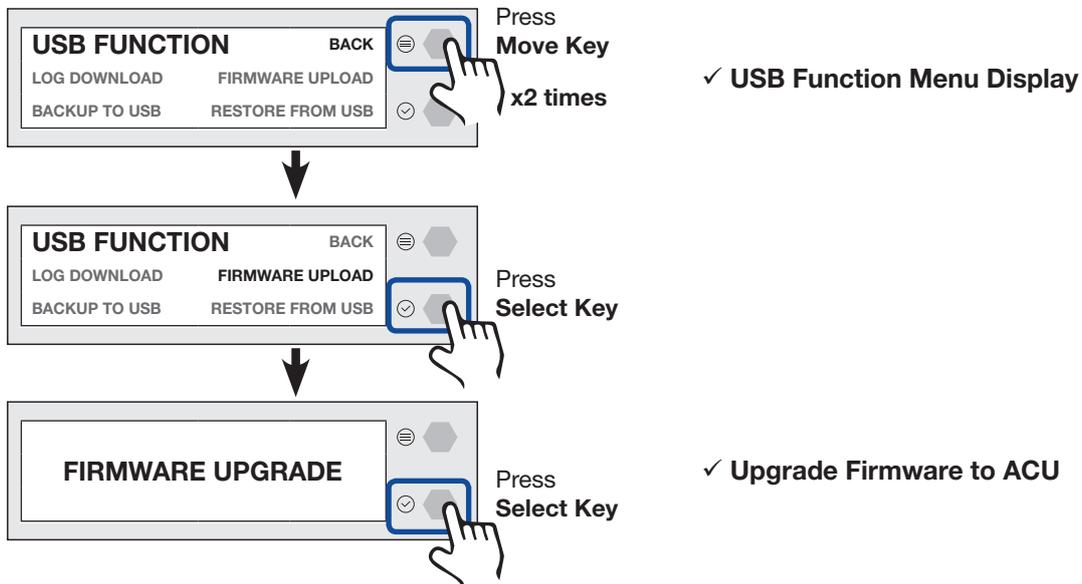

If the firmware file does not match the file format, the "INVALID FILE FORMAT" message will appear.



If there is no firmware file on the USB memory stick, the "FILE NOT FOUND" message will appear.

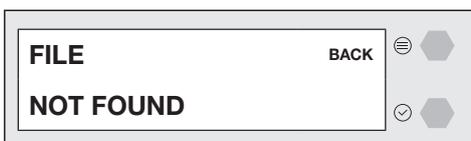


NOTE

When you want to return to the previous display, select "BACK" screen then press the "Select" key.

BACKUP TO USB

Backs up the antenna setting files to the USB.

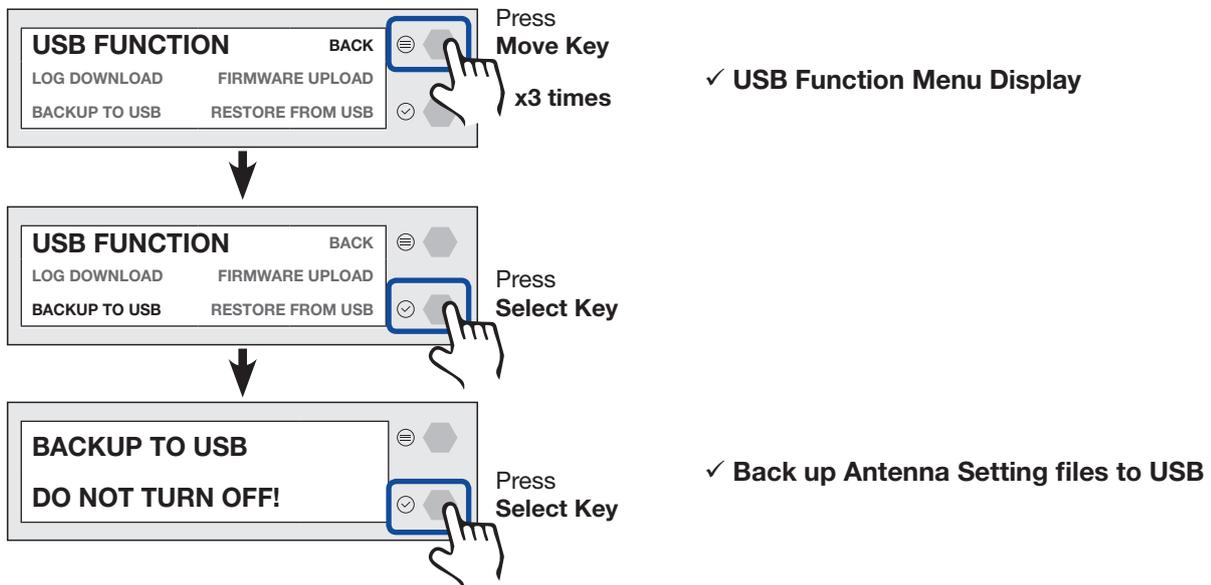

If there is not enough space on the USB memory stick, the "DATA BACKUP" message will appear.




NOTE

When you want to return to the previous display, select "BACK" screen then press the "Select" key.

NOTE

RESTORE FROM USB

Restores the antenna setting files by using the setting files saved in USB.

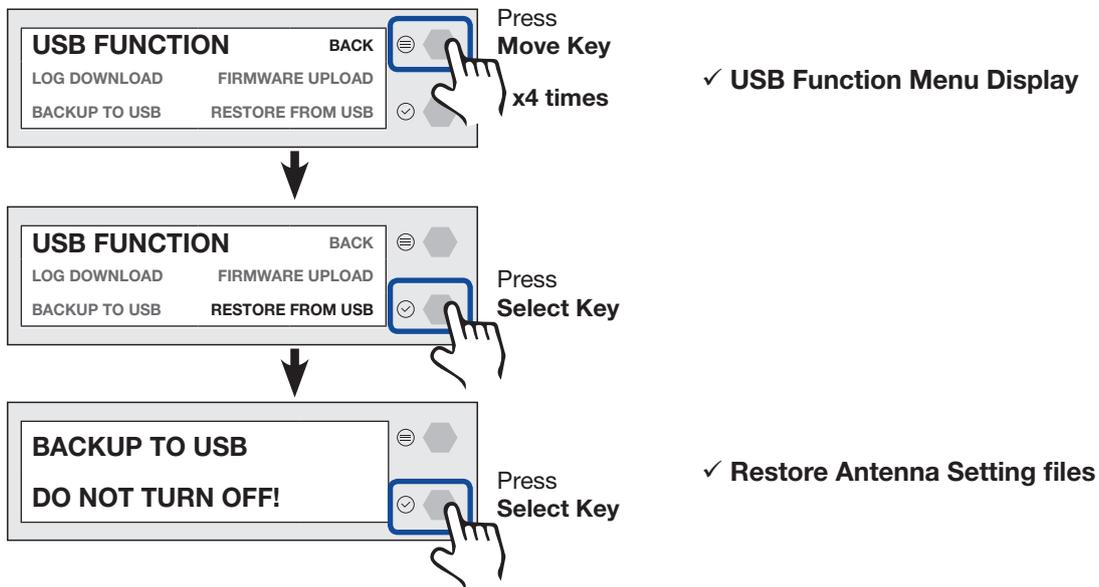

NOTE

When you want to return to the previous display, select "BACK" screen then press the "Select" key.

Using AptusNX

Introduction


With embedded AptusNX software, the antenna can be monitored, controlled, and diagnosed remotely from anywhere, anytime through the TCP/IP protocol. This not only can save time but also save the cost generated from the hundreds of routine maintenance activities such as operating firmware upgrades, tracking parameters resets, and system Diagnosis.

How to access AptusNX for ACU

1. Connect an Ethernet cable from the Management LAN port on the front of the ACU to the LAN port of PC. This method is most recommended.
2. Enter the ACU's IP address (**192.168.2.1**) into your web browser's address bar to login into the ACU's internal HTML page, if this system has not been changed from the ACU's factory default.

**NOTE****NOTE**

AptusNX can be displayed on the Internet Explorer 11 or later (Windows 7 or later), and is also compatible with Firefox, Microsoft Edge and Chrome web browsers.

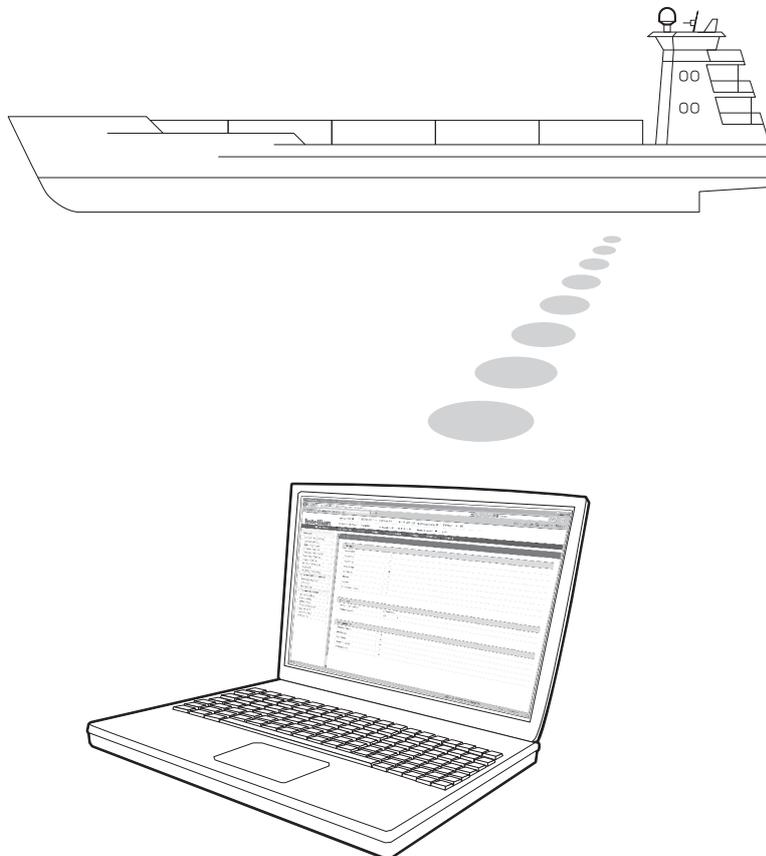


Main Page

Page Login

The Intellian software Aptus provides a different user level access to ensure safe operation of the system. Depending on the user level, a limited range or a full range of functions can be accessed and operational.

1. Log into the ACU by typing in User Name and Password information. If this system has not been changed from the factory default:

User Type	User ID	Password	Access Authority
Admin	<i>intellian</i>	<i>12345678</i>	Supports all menus for monitoring and setting.
	<i>captain</i>	<i>12345678</i>	Supports all menus for monitoring and setting. Can control and manage user permission separately.
User	<i>guest</i>	<i>guest</i>	Only some menus for monitoring are supported. (Dashboard, Tools, Troubleshooting)

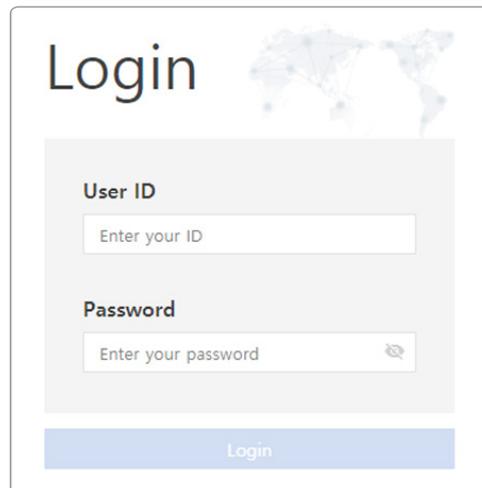

The screenshot shows a login interface with the word "Login" at the top left. Below it is a light gray box containing two input fields: "User ID" with the placeholder text "Enter your ID" and "Password" with the placeholder text "Enter your password" and a small eye icon for toggling visibility. At the bottom of the gray box is a blue "Login" button. In the background, there is a faint world map graphic.



NOTE

After entering with the default password, the user must change the default password to a new password for security.

Top Menu


Once you log in, the following information and menus are displayed.



No.	Item	Description													
①	Target Satellite	Displays the name of the targeted satellite.													
②	Quick Status Screen Area	When clicking this top menu area (marked as red dots), the "Quick Status Screen" appears. You can quickly monitor each status of the five items (Enable Mode, In Blockage, Pointing, Modem Lock, LNB Rotate) through the screen (Blue: enable, Black: disable). <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px auto;"> <p style="text-align: center; margin: 0;">APTUS NX</p> <ul style="list-style-type: none"> █ Enable Mode █ Blockage █ Pointing █ Modem Lock █ LNB Rotate <p style="text-align: right; margin: 0;">Close</p> </div> <p style="text-align: right; margin: 0;"><Quick Status Screen></p>													
③	Antenna Status Info	Displays the antenna status through a yellow indicator in the SETUP mode. <ul style="list-style-type: none"> Initialize: the antenna or ACU is initialized. Searching: the antenna is searching the target satellite. Tracking: the antenna is tracking the target satellite. 													
④	Signal Level	Displays the current signal level.													
⑤	Tx Status	Displays whether or not the antenna is able to transmit the data.													
⑥	Lock	Displays whether or not the satellite is locked.													
⑦	Main Menu	Selects the Main Menu (DASHBOARD, INSTALL WIZ., TOOLS, TROUBLESHOOTING, SETUP). Each main menu offers side menus on the left of the screen.													
⑧	Setup	Enters the setup mode to modify settings. The following functions are available only in setup mode. <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <thead> <tr> <th>Main Menu</th> <th>Side Menu</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td rowspan="5">SETUP</td> <td rowspan="5">Antenna</td> <td>Antenna Angle</td> </tr> <tr> <td>Sensor Calibration</td> </tr> <tr> <td>Tilt Sensor Bias</td> </tr> <tr> <td>Rate Sensor Bias</td> </tr> <tr> <td>Antenna Mode (Set Idle Mode)</td> </tr> <tr> <td></td> <td>Backup & Restore Setting</td> <td>Antenna Restore</td> </tr> </tbody> </table>	Main Menu	Side Menu	Function	SETUP	Antenna	Antenna Angle	Sensor Calibration	Tilt Sensor Bias	Rate Sensor Bias	Antenna Mode (Set Idle Mode)		Backup & Restore Setting	Antenna Restore
Main Menu	Side Menu	Function													
SETUP	Antenna	Antenna Angle													
		Sensor Calibration													
		Tilt Sensor Bias													
		Rate Sensor Bias													
		Antenna Mode (Set Idle Mode)													
	Backup & Restore Setting	Antenna Restore													
⑨	Restart	Restarts the antenna system.													
⑩	Reboot	Reboots the antenna system.													
⑪	Save Sat.	Saves current satellite settings. Bow offset will be adjusted and saved automatically.													
⑫	Ant. Info	Obtains current antenna information.													
⑬	Account Button	Selects the "Account" button and enter the user management menu. The "Account" and the "Logout" menu will appear. Selects the "Account" menu to manage your account details and select the "Logout" menu to log out the AptusNX web page.													

Account Menu

1. Select the "Account" button and enter the user management menu.
2. The "Account", the "System", the "User Mgr." and the "Logout" menu will appear. Select each menu to manage and control details, and select the "Logout" menu to log out the AptusNX web page.

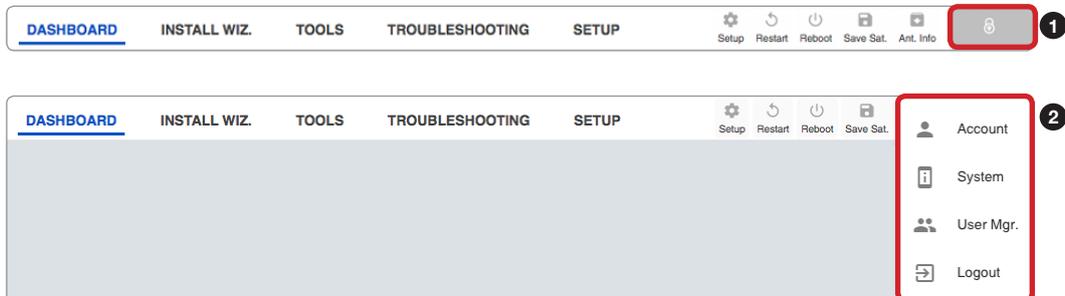

Account

No.	Item	Description
①	Account	Updates your password and sets timeout.
②	Change Password	<p>You can change your password.</p> <ul style="list-style-type: none"> • Current User ID: displays your user ID. • User ID: enters the current user ID. • Current Password: enters the current password. • New Password: enters the new password. • Confirm New Password: re-enters the new password to verify that it was entered correctly. <p>Click the "Change Password" button to change to the new password. At the next login, the new password is required.</p>
③	Session	<p>You can set guest connection and timeout.</p> <ul style="list-style-type: none"> • Allow Guest Connections: sets up the guest access option (Disable / Enable). • Idle Session Timeout: sets the Idle timeout. • Console Timeout: sets the console timeout. <p>Click the "Apply" button to apply the settings to the system.</p>

Registration

Account

Registration 1

System

User Mgr.

2 Product

Antenna V5-85-U1JW

Serial Number V0918070001

3 Vessel

Has IMO Number Yes No

Ship Name Ship_Name

Type Cargo vessel

Owner Intelliantech

4 Service Provider

Service Provider 1

Service Provider 2

Service Provider 3

Cancel Register(Update)

No.	Item	Description
①	Registration	Enters product registration information for the convenient use of a product. Click the "Register (Update)" button to apply the settings to the system.
②	Product	Displays the antenna information. <ul style="list-style-type: none"> Antenna: displays the antenna name. Serial Number: displays the antenna serial number.
③	Vessel	Enters the vessel information. There are two options whether using the IMO number or not. When you have the IMO number select the "Yes" button and enter the IMO Number. When you do not have the IMO number select the "No" button and enter the Ship Name, Type, and Owner information. <ul style="list-style-type: none"> Has IMO Number: selects whether using the IMO number or not. IMO Number: enters the IMO number. Ship Name: enters the ship name. Type: enters the ship type. Owner: enters the name of the owner.
④	Service Provider	Enters the service provider information. <ul style="list-style-type: none"> Service Provider 1/2/3: enters the name of the service provider.

System

Account
Print

Registration
System 1
 User Mgr.

2 Antenna Information

Antenna Size 85 cm / 33.5 inch

Antenna Voltage 47.4V

ACU Voltage 23.4V

Temperature 25.9°C

Antenna Product VS-85-U1JW

ACU Product VP-T84G1

Antenna Serial Number V0918070001

ACU Serial Number V0918070001

System Polarization Co & Cross Pol

System Band Ku Band

3 S/W Version Information

ACU Main v1.00

Antenna PCU v1.00

Antenna Stabilizer v1.00

Antenna Skew v1.00

Antenna Stacker v1.00

Antenna Destacker v1.00

OLED v1.00

Lib Ver v1.00

4 Network Information

Control IP 192.168.2.1

Current IP 192.168.2.5

Idle Session Timeout 29:22



Date 2018-08-17

Time 03:25:05

Wifi On

No.	Item	Description
①	System	Displays system information such as the antenna, S/W version, and network IP address.
②	Antenna Information	Displays antenna information.
③	S/W Version Information	Displays S/W version information.
④	Network Information	Displays network information.

User Manager

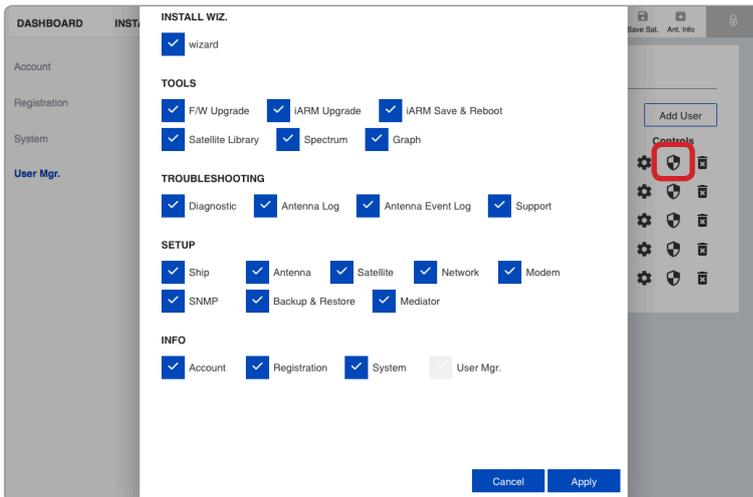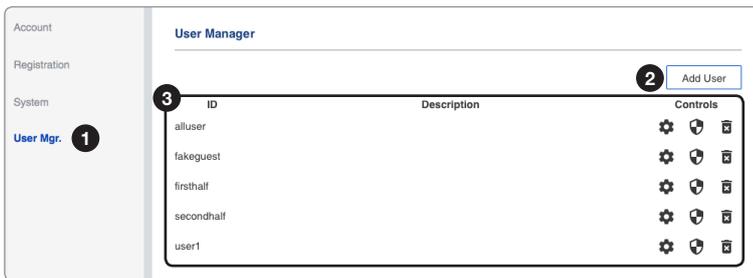


Editable User Permission Menus

No.	Item	Description
①	User Manager	The captain with admin permission can control and manage user permission separately.
②	Add User	To add a new user, click the "Add User" button. The registration window will appear in the pop-up window. Enters the new user ID and password then click the "Add User" button.
③	User Management List	Displays the user management state and can control and manage through the control buttons. <ul style="list-style-type: none"> • ID: displays the registered user ID. • Description: displays the user's description. • Controls: each user can be controlled and managed by individual settings. <ul style="list-style-type: none"> - User Setting: resets the user ID by clicking the "Update User" button, and changes the password by clicking the "Reset Password" button. - Edit Menu Permission: chooses the permission menus by clicking the checkbox. After selecting menus, click the "Apply" button. The user can only access the selected menus. - Delete User: deletes the user.

Dashboard


The Dashboard menu is displayed as below to provide quick monitoring of the antenna status. The Dashboard helps you arrange panels on a single screen while providing you with a broad view of a variety of information at once. The dashboard contains multiple panels, which can easily customize the structure of your dashboard and arrange your panels in various ways to make them more readable and user-friendly.

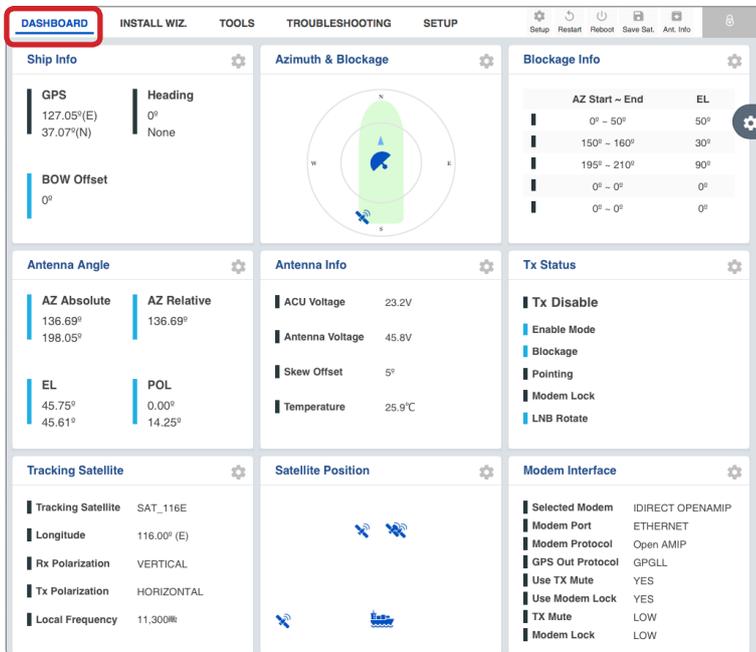

How to Add & Remove Panels (Dashboard Setting)


Adding Panels

1. On the right side of the page, you will see the gear icon to edit your dashboard. To start editing, click on the gear icon.
2. Check the box of the panel that you wish to add to the dashboard.
3. Click the "Apply" button to apply the settings to the system.
4. Once the panel is added, it will be automatically placed at the bottom of the page.

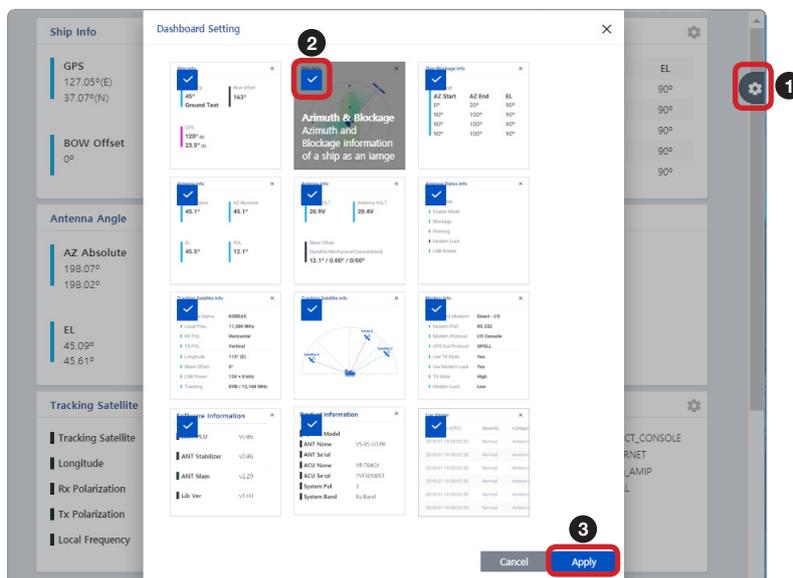

Removing Panels


1. On the right side of the page, you will see the gear icon to edit your dashboard. To start editing, click on the gear icon indicated by the red mark.
2. Uncheck the box of the panel that you wish to remove from the dashboard.
3. Click the "Apply" button to apply the settings to the system.

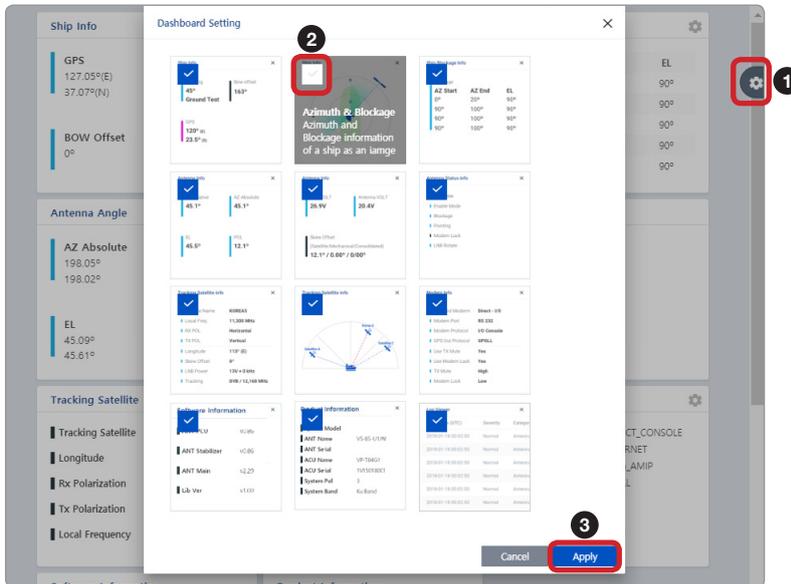


How to Arrange Dashboard Layout

You can customize the dashboard by rearranging panels that you wish.

1. Click and hold the left mouse button on a panel's title and then drag-and-drop the desired position.

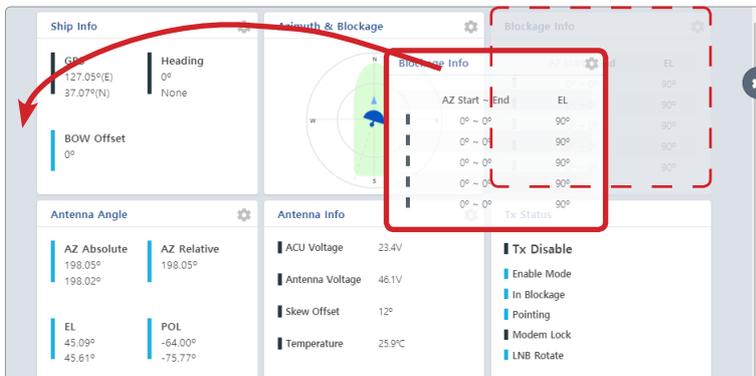


2. This time, the selected panel will be moved to the desired position. You can also move multiple panels into a customized layout in the same manner.

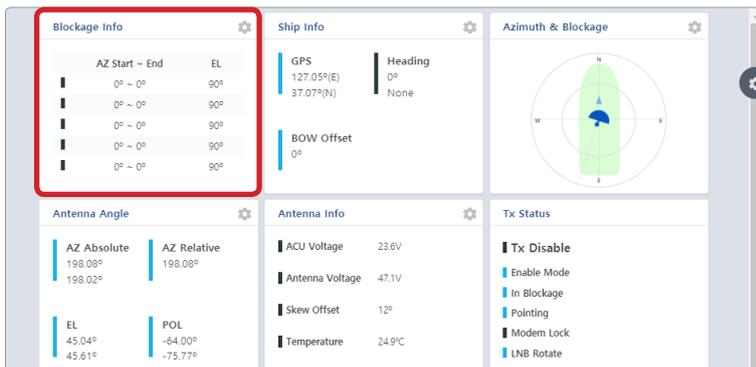


How to Use Shortcut Settings

Each panel on the dashboard provides a shortcut function. Using the "Shortcut" button on right side of the panel, you can easily access the detailed information and manage the each panel's settings.

1. Click the "Shortcut" button indicated by the red mark to open the setting page.

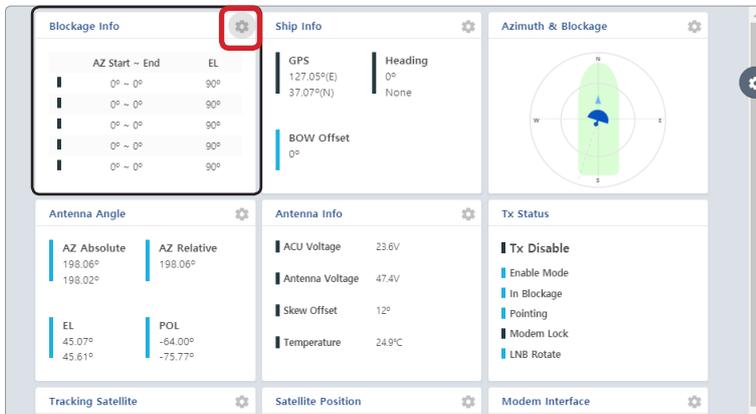


2. The setting page will appear on the individualized web page. You can check the detailed information and quickly apply settings that you wish.

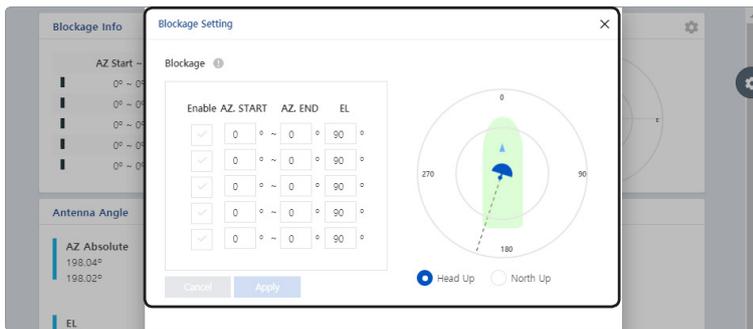

Install Wizard


The description of this menu is written on the previous page. Refer to the "Operating Install Wizard" on page 45 for more details.

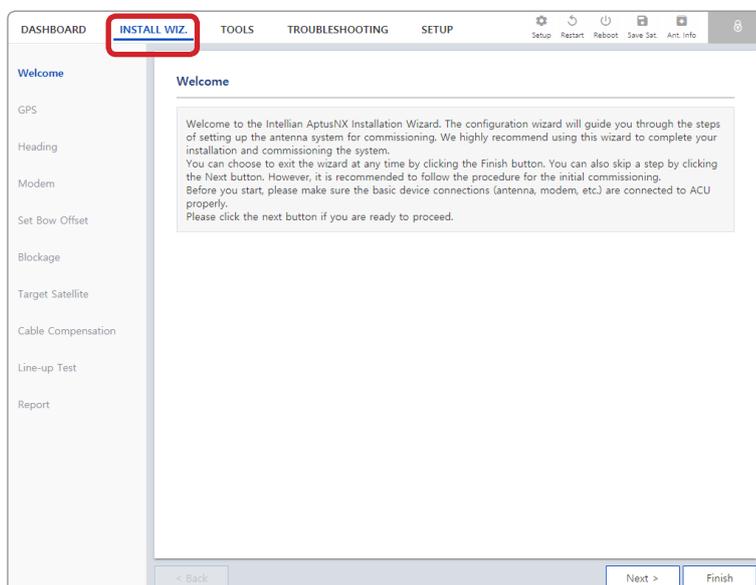

System Tools

This menu sets and displays the F/W Upgrade, iARM Upgrade, iARM Save&Reboot, Satellite Library, Spectrum Graph and Graph function.

Firmware Upgrade

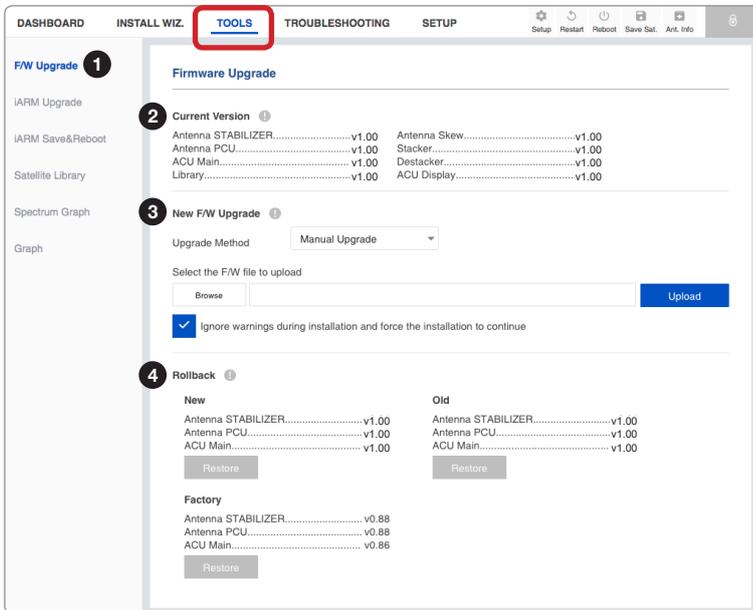

No.	Item	Description
①	Firmware Upgrade	Displays current firmware versions and upgrades antenna firmware.
②	Current Version	Displays current firmware versions (Antenna STABILIZER, Antenna PCU, ACU Main, Library, Antenna Skew, Stacker, Destacker, ACU Display)
③	New F/W Upgrade	Upgrades antenna firmware. The update may take a few minutes to complete. The upload time may vary due to a variety of factors such as the speeds of your network. Upload an incorrect firmware file may cause serious damage to your antenna and ACU. Please check firmware version before uploading firmware. <ul style="list-style-type: none"> Upgrade Method: selects an upgrade method between the "Manual Upgrade" or the "Auto Upgrade". <p>NOTE: when using the "Manual Upgrade" method, refer to the following "Antenna Firmware Update (Manual Upgrade method) Procedures" page for more details.</p>
④	Rollback	Displays previous/latest firmware package versions and rollback firmware to previous/latest version. Other function cannot be operated while rollback is in progress.

Antenna Firmware Upgrade (Manual Upgrade method) Procedures:

1. Choose "Manual Upgrade" from the pull-down menu of Upgrade Method. Browse and select the upgrade package file to upload. Click on the "Upload" button to transfer the Firmware package file (*.fwp) to iARM module.

New FW Upgrade

Upgrade Method: Manual Upgrade

Select the FW file to upload

Browse Upload

Ignore warnings during installation and force the installation to continue



NOTE

NOTE

When selecting the box "Ignore warnings during installation and force the installation to continue" before performing the upgrade, the warning messages do not appear during the upgrade.

2. The antenna firmware state will appear in the pop-up window. Check the current version and the new version then select the checkbox of items that you want to upgrade. Click the "Start Upgrade" button. If the current version and the new version are the same, the check box of the item is disabled.

Type	Current Ver.	New Ver.
STAB	v1.03	v1.02
PCU	v1.01	v1.01
ACU Main	v1.04	v1.03
SKEW	v1.01	v1.00
STACKER	v1.02	v1.00
DESTACKER	v1.02	v1.00
ACU Display	v1.00	v1.00

Cancel Start Upgrade

3. During the upgrade process, the window will display process status.

Type	Current Ver.	New Ver.	Result
STAB	v1.03	v1.03	Skip
PCU	v1.01	v1.01	Skip
ACU Main	v1.04	v1.04	24 %
SKEW	v1.01	v1.01	Ready
STACKER	v1.02	v1.02	Ready
DESTACKER	v1.02	v1.02	Ready
ACU Display	v1.00	v1.00	Ready

Ok

4. If the firmware is successfully upgraded, it will display as the "Success". Click the "Ok" button to close the pop-up window.

Type	Current Ver.	New Ver.	Result
STAB	v1.03	v1.03	Skip
PCU	v1.01	v1.01	Skip
ACU Main	v1.04	v1.04	Success
SKEW	v1.01	v1.01	Skip
STACKER	v1.02	v1.02	Skip
DESTACKER	v1.02	v1.02	Skip
ACU Display	v1.00	v1.00	Skip

Ok

iARM Upgrade

The screenshot shows the iARM Upgrade interface with the following sections:

- 1 iARM Upgrade**: A sidebar menu with options like F/W Upgrade, iARM Upgrade, iARM Save&Reboot, Satellite Library, Spectrum Graph, and Graph.
- 2 New iARM Firmware**: A section for selecting a firmware file to upload. It includes a "Browse" button, a "Start Upgrade" button, and a checkbox for "Ignore warnings during installation and force the installation to continue." (checked).
- 3 Bootstrap/Bootloader**: A section showing version information for Bootstrap and Bootloader.

Component	Main	Factory Default	Active
Bootstrap	v1.10	v1.10	
Bootloader	v1.10	v1.10	Main
- 4 Kernel/File System**: A section showing version information for Kernel and File System across different storage parts (Sys0, Sys1, Factory Default, Current Active).

Storage Part	Kernel	File System	Action
Sys0	v1.80	v0.95	Activate
Sys1	v1.80	v0.94	Activate
Factory Default	v1.80	v0.87	Activate
Current Active	Current Package: Sys0	Kernel: v1.80, File System: v0.95	

No.	Item	Description
①	iARM Upgrade	Upgrades the firmware of iARM module.
②	New iARM Firmware	<p>Browse and select the iARM firmware file to upload and click "Start Upload" button. The update may take a few minutes to complete. The upload time may vary due to a variety of factors such as the speeds of your network. Upload an incorrect firmware file may cause serious damage to your antenna and ACU. Please check firmware version before uploading firmware.</p> <p>NOTE: refer to the following "iARM Upgrade Procedures" page for more details.</p>
③	Bootstrap/Bootloader	<p>Displays current bootstrap and bootloader version.</p> <ul style="list-style-type: none"> Bootstrap: displays the Bootstrap Version (Main, Factory Default). Bootloader: displays the Bootloader Version (Main, Factory Default, Active Bootloader)
④	Kernel/File System	<p>The ACU has three storage parts the Sys0, the Sys1 and the Factory Default. Selects the desired storage part and click the "Activate" button. Then perform the "iARM Reboot" to apply the settings to the system.</p> <ul style="list-style-type: none"> Sys0: displays the Sys0 version. Sys1: displays the Sys1 version. Factory Default: displays the Factory Default version. <p>The "Current Active" displays activated storage part Information.</p> <ul style="list-style-type: none"> Current Active <ul style="list-style-type: none"> Current Package: displays the activated storage part's name (Sys0, Sys1 or Factory Default). Kernel, File System: displays the activated storage part's file version.

iARM Upgrade Procedures:

1. Browse and select the iARM firmware file (.tgz) that you wish to upgrade. Click on "Start Update" button to update the iARM firmware. Wait until the page is loaded.



NOTE


When selecting the box "Ignore warnings during installation and force the installation to continue" before performing the upgrade, the warning messages do not appear during the upgrade.

2. Once update starts, a page will indicate upgrade status. It should take around two minutes to complete the firmware upgrade.




WARNING


Do not turn off the device power if the firmware upgrade page is displayed. Failure to comply may lead to damage and/or malfunction of the system.

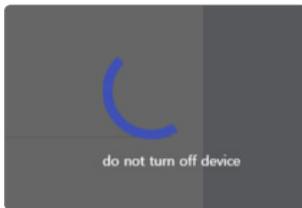

3. Once the upgrade is completed, the system will automatically reboot in 10 seconds.

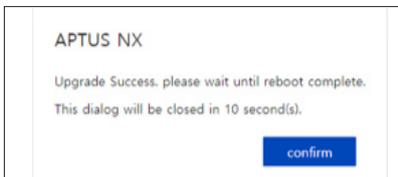

iARM Save & Reboot

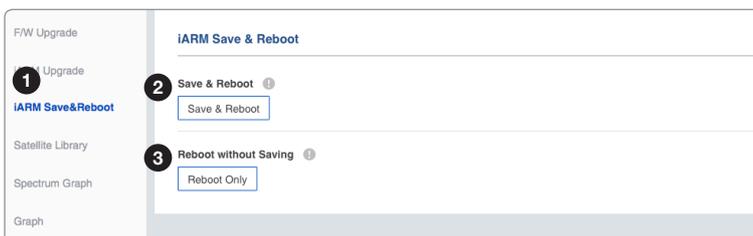


No.	Item	Description
①	iARM Save & Reboot	Saves settings to the ACU and reboot or reboot the system without saving.
②	Save & Reboot	Saves the modified settings and reboots the system. All configuration changes made will be saved in the ACU and effective upon reboot. Click the "Save & Reboot" button.
③	Reboot without Saving	Reboots the system without saving the modified settings. All configuration changes made will be lost upon reboot. Click the "Reboot Only" button.

Satellite Library

The screenshot shows the 'Satellite Library' configuration page. On the left sidebar, 'Satellite Library' is selected and marked with a circled '1'. The main content area is titled 'Satellite Library' and contains a 'Satellite List' table (marked with a circled '2') with buttons for 'Get Library from ACU', 'Save to PC(Download)', 'Get Library from PC', and 'Save to ACU'. Below the table is a 'Common Information' form (marked with a circled '4') for the selected satellite 'ASTRA21'. This form includes fields for Longitude (19.2), Skew Offset (-8), Identify (DVB Lock selected), Rx Polarization (Vertical), and Tx Polarization (Horizontal). Below this is 'DVB Information' (marked with a circled '5') with fields for Frequency (11038), Symbol (22000), NID (0x 0001), and Verify Type (DVB Decode). At the bottom is 'NBD Information' (marked with a circled '6') with fields for Frequency (1038000), Bandwidth (1000), and Base Local (10000). A 'Load Satellite' button is at the bottom right of the form. A circled '3' is placed near the 'Load Satellite' button.

No.	Item	Description
①	Satellite Library	Sets the satellite library information.
②	Satellite List	Reads or manages satellite information from the library. <ul style="list-style-type: none"> Get Library from ACU: obtains satellite library file from the ACU. Get Library from PC: obtains the satellite library file from the PC. Save to PC (Download): saves the current library file to the PC. Save to ACU: saves the current library file to the ACU.
③	Satellite Information	Selects one of the satellites in the "Satellite List" then Click the "Load Satellite" button to load the satellite information.
④	Common Information	Displays selected satellite information. <ul style="list-style-type: none"> Satellite Name: displays the satellite name. Longitude(°): displays satellite orbit position. Skew Offset: displays the Skew offset. Identify: displays the lock setting type (Modem Lock / DVB Lock) for satellite tracking. Rx Polarization: displays the current RX polarization. Tx Polarization: displays the current TX polarization.
⑤	DVB Information	Displays DVB mode's tracking information. <ul style="list-style-type: none"> Frequency (MHz): displays the tracking frequency. Symbol (kSps): displays the symbol rate. NID: displays the network ID. Verify Type: displays the verification type.
⑥	NBD Information	Displays NBD mode's tracking information. <ul style="list-style-type: none"> Frequency (kHz_IF): sets the tracking frequency. Bandwidth (kHz): sets the detection bandwidth. Base Local (MHz): sets the base local.

Spectrum Graph

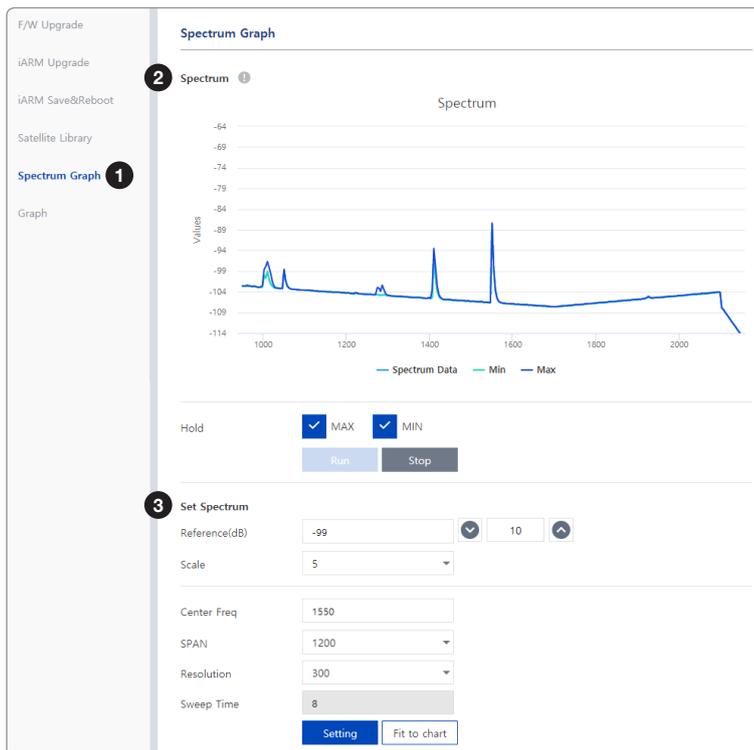


No.	Item	Description
①	Spectrum Graph	Displays that a spectrum analyzer measures an input Rx signal frequency within the full frequency range and sets spectrum data view options. The disconnect fault can be checked and solved through spectrum analyzer results.
②	Spectrum Graph	Displays measurement results. The display of a spectrum analyzer has the frequency on the horizontal axis and the amplitude displayed on the vertical axis. <ul style="list-style-type: none"> • Hold: displays the minimum/maximum value of the frequency band on the graph. - Max: displays the maximum value of the frequency band by clicking the check button. - Min: displays the minimum value of the frequency band by clicking the check button. • Run: requests the spectrum data to antenna continuously and update graph data in real-time. • Stop: Stops requesting the spectrum data. (The graph cannot be updated.)
③	Set Spectrum	Sets detailed options for the spectrum graph. <ul style="list-style-type: none"> • Reference/Scale: sets Amplitude Reference Level and Scale. Click the Reference Level submenu key and use the arrow keys, or the keypad to change the reference level (2000 to -2000). Select the Scale number (1, 2, 5, or 10 dB) in the drop-down list to enter the desired scale. • Center Freq.: enters the desired center frequency using the keypad. • Span: to quickly move the span value up or down, select the span number (6, 60, 300, or 1200 MHz) in the drop-down list. These numbers facilitate a zoom-in, zoom-out feature. • Resolution: to quickly adjust the resolution value up or down, select the resolution number (100, 200, 300, or 600) in the drop-down list. These numbers facilitate a zoom-in, zoom-out feature. • Sweep Time: displays the elapsed time all data received during the start to stop testing interval. <p>Click the "Setting" button to apply the settings to the graph. Clicking the "Fit to chart" button, the reference and scale value are automatically adjusted to easily check the resulting graph.</p>


Graph



Single Chart View

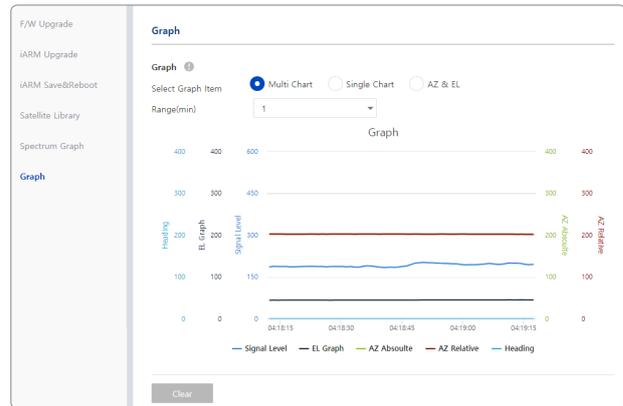

Multi Chart View

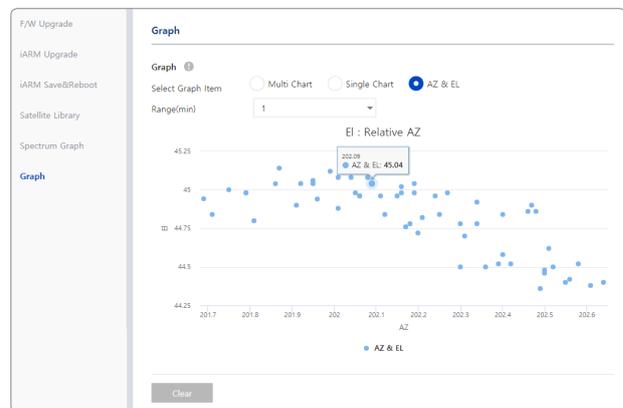


AZ & EL View

No.	Item	Description
①	Graph	This view provides information on the Signal Level, EL Graph, AZ Absolute, AZ Relative, Heading in the Multi Chart, Single Chart or AZ & EL formats.
②	Graph	<p>Sets detailed options for the graph.</p> <ul style="list-style-type: none"> Select Graph Item: shows the graphs of only the checked item(s) in the Multi Chart, Single Chart or AZ & EL formats. - Multi Chart: displays multiple graph Items in one graph View. - Single Chart: displays the checked graph Item in each graph View. - AZ & EL: displays the AZ / EL angle value in one graph View. • Range(min): displays the data for the set time. <p>Clicking the "Clear" button, the existing displayed graph is cleared and displays a new graph.</p>

System Troubleshooting

This menu sets and displays the Diagnosis, Antenna Log, Antenna Event Log and Support function.


Diagnosis

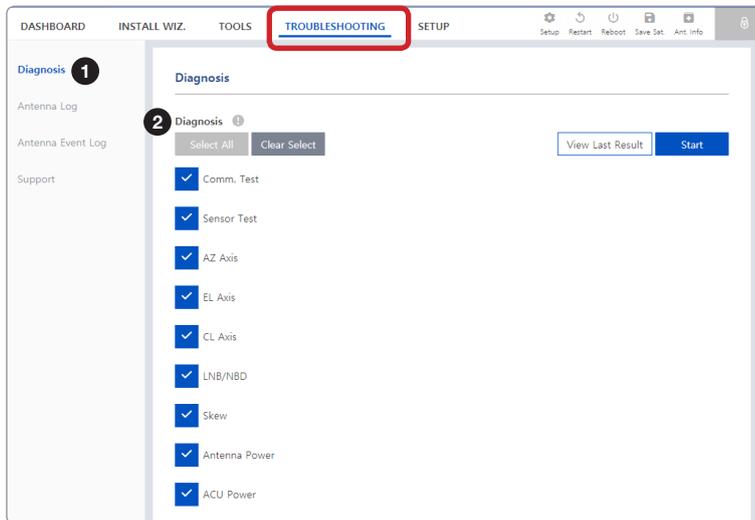


No.	Item	Description
①	Diagnosis	Executes antenna diagnosis test to check the antenna status.
②	Diagnosis	<p>Select the checkbox (full diagnosis test or single diagnosis test) before modifying the settings.</p> <ul style="list-style-type: none"> • Select All: selects to run a full diagnosis test. • Clear Select: selects to run a single diagnosis test. • View Last Result: displays the recently saved diagnosis result. • Start: executes the diagnosis test.

Diagnosis Procedures:


1. Select the checkbox (full diagnosis test or single diagnosis test) before modifying the settings. Click on the "Start" button to run the diagnostic test.

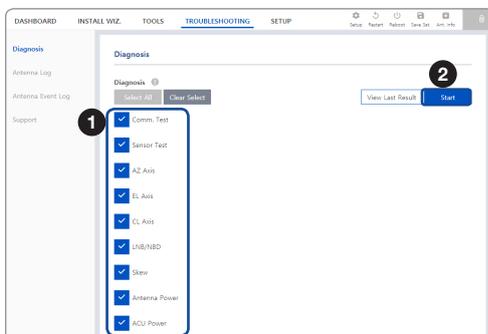


- Once the diagnosis starts, the page will indicate test status. It should take around a few minutes to complete the test.

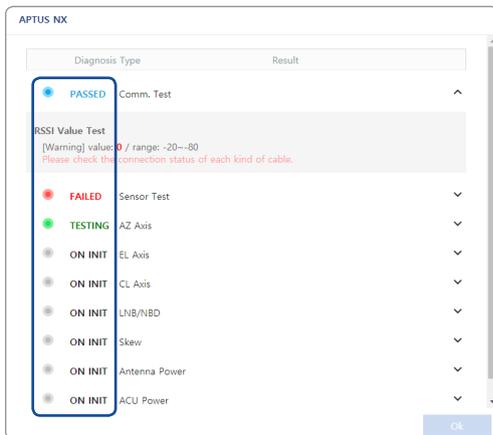

- After the diagnosis is completed the system shows the diagnosis results of each item. You can save the results into the ACU by clicking the "Save Report" button and print this page by clicking the "Print" button.

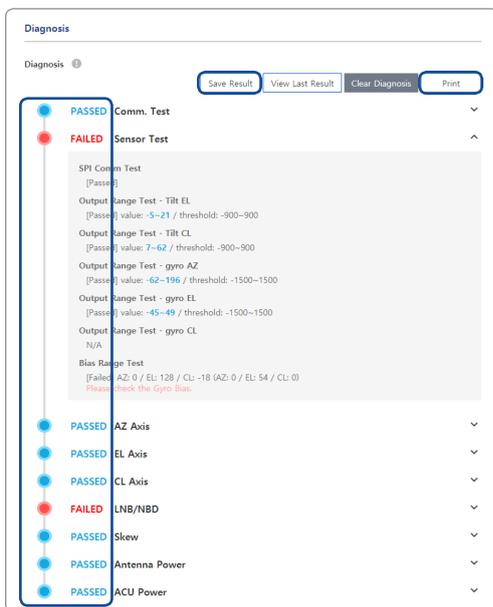

- When you want to check the recently saved diagnosis results, click the "View Last Report" button. The pop-up page of the diagnosis results including the saving date and time will appear. You can print this page by clicking the "Print" button.

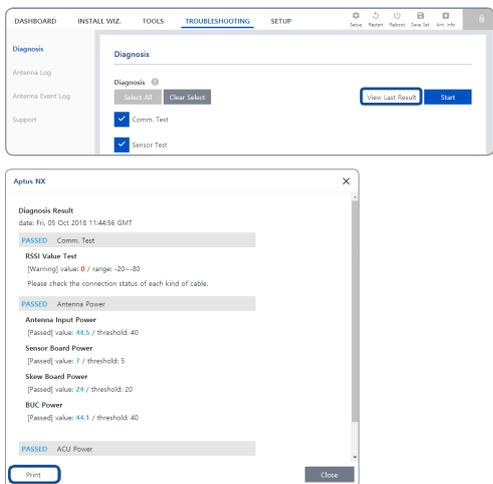

Antenna Log

Diagnosis

Antenna Log 1

Antenna Event Log

Support

2 GPS Log Option ⓘ

Turn On Off On

3 Antenna Log Download ⓘ

Duration

Include Backup/Report File Compress

[Start Download](#)

4 Antenna F/W Log

Date/Time (UTC 00:00)	STAB	PCU	Main
Wed, 25 Jul 2018 06:16:13	0.94 Success	0.94 Success	0.94 Success

No.	Item	Description
①	Antenna Log	Displays the antenna log data.
②	GPS Log Option	Turns on/off the GPS log download option. Click the "Apply" button to apply the settings to the system.
③	Antenna Log Download	Any log data within three months can be downloaded. Selects the duration on the calendar view that you want to show. Then click the "Start Download" button. NOTE: when selecting the box "Include Backup/Report File" before downloading, the Backup/Report File will download together. When selecting the box "Compress" before downloading, log files are downloaded in the compressed format.
④	Antenna F/W Log	Displays log information about firmware upgrade.

Antenna Event Log

No.	Item	Description
①	Antenna Event Log	Displays the antenna system and user log information by setting urgency level.
②	Query Filter	<p>Sets the log message option to display the event log.</p> <ul style="list-style-type: none"> Severity: sets the urgency level. Category: sets the target that caused the message. Time Frame: sets the time limit that you want to show. Duration: selects the duration on the calendar view that you want to show. Tracking Method: selects the sorting type (Descending / Ascending). <p>Click the "Query Event Log" button to apply the settings to the system.</p>
③	Event Log	Displays event log information.


Support

No.	Item	Description
①	Support	Supports the manual web page, support desk and FAQ list.
②	Manual and Help	<p>Shows the manual web page and support desk information.</p> <ul style="list-style-type: none"> View Manual: click the "View Manual" button to open the manual web page. Support Desk: click the "Support Desk" button to open Intellian's contact details for support.
③	FAQ	helps you the frequently asked questions about the product.

System Setting

This menu sets and displays the Ship, Antenna, Satellite, Network, Modem/BUC, SNMP, Backup & Restore and Mediator function.

Ship Setting

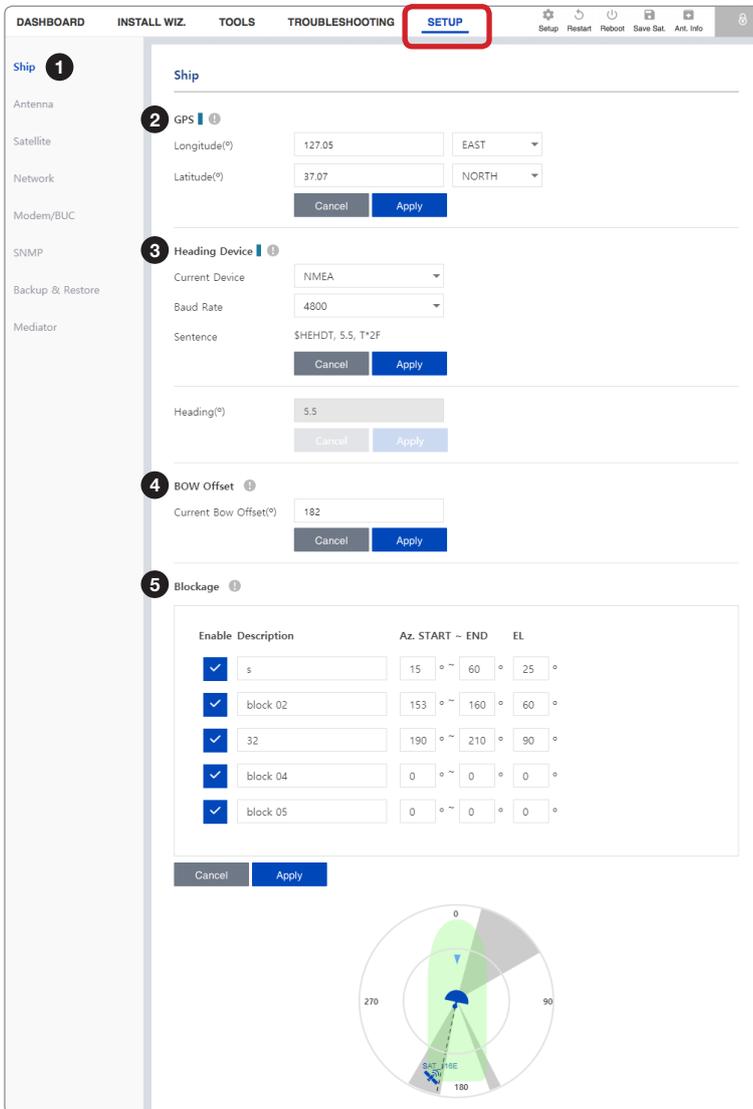

No.	Item	Description
①	Ship	Sets the ship information and block zone.
②	GPS	<p>Sets the GPS position of the vessel for searching for a satellite. Check the GPS status connected to the antenna system. The indicator left of the help button shows the GPS status. Please confirm the GPS indicator is Blue (blinking). (Blue (blinking): the system received a correct GPS input. Black: the system has not received a GPS input. You can enter the GPS value manually to set the GPS position.)</p> <ul style="list-style-type: none"> Longitude(°): sets Longitude information (East / West). Latitude(°): sets Latitude information (North / South). <p>Click the "Apply" button to apply the settings to the system.</p>

No.	Item	Description
③	Heading Device	<p>Sets the ship's heading device. Choose the device type from the "Current Device" drop-down list. The indicator left of the help button shows the device connection status. (Blue: a ship's heading device is connected. Black: a ship's heading device is not connected.)</p> <ul style="list-style-type: none"> • Current Device: selects the heading device (None / NMEA / NMEA 2000 / Static). • Baud Rate: selects the band rate (4800 / 9600 / 19200 / 38400). It must be set when "NMEA" is selected on the "Current Device" list. • Sentence: displays the sentence information. When "NMEA" is selected on the "Current Device" list, this item appears. • Heading(°): enters the heading information. <p>Click the "Apply" button to apply the settings to the system.</p>
④	BOW Offset	<p>For setting bow offset, need to select satellite which is trackable in satellite library information. When antenna tracks to satellite selected, bow offset will be set up automatically.</p> <ul style="list-style-type: none"> • Current Bow Offset(°): enters the Bow Offset Range: 0 – 360°. <p>Click the "Apply" button to apply the settings to the system.</p>
⑤	Blockage	<p>It is important to set up the blockage zones for Intellian VSAT. The ACU can be programmed with relative azimuth and elevation sectors to create up to five zones where transmit power could endanger personnel who are frequently in that area or blockage exists. Several indications are provided when the antenna is within one of these zones. A transmit inhibit output from the ACU will disable/mute the modem transmission within zones set in this steps The AZ. The START is where the relative azimuth starts and AZ. END is where the relative azimuth ends (Range: 0 - 360°). EL is where the elevation blockage starts (Range 0 - 90°).</p> <p>Click the "Apply" button to apply the settings to the system.</p>

Antenna Setting

Ship

Antenna 1

Satellite

Network

Modem/BUC

SNMP

Backup & Restore

Mediator

Antenna Setting

2 Antenna Angle

Relative Azimuth 136.69°

Absolute Azimuth 136.69° / 198.05°

Elevation 45.75° / 45.61°

LNB Pol Angle 0.00° / 14.25°

3 Tracking / Searching Parameter

Thresholds Setting

Detect Level

Tracking Level

Tx Enable

4 Search Parameter

Wait Time(sec)

Search Step(°)

Azimuth(°)

Search1	Search2	Search3
400	6	3

Elevation(°)

Search1	Search2	Search3
8	6	4

5 Conical Range

Azimuth

Elevation

6 Sensor Calibration

EI Adjust

EI Adjust(°)

7 Tilt Sensor Bias

EL

CL

8 Rate Sensor Bias

Azimuth

Elevation

Cross-level

9 LNB Pol Sensor Calibration (Skew)

Sat Skew Offset(°)

Mechanical Offset(°)

Consolidated Offset(°)

10 Antenna Mode

No.	Item	Description
①	Antenna Setting	Sets current antenna position and search parameters. These parameters should only be changed by an authorized service technician. Improper setting of these parameters will render your system inoperable.

No.	Item	Description
②	Antenna Angle	<p>Enter "Setup Mode" to modify settings.</p> <p>Sets current antenna position and LNB pol angle. You can move the antenna's azimuth and elevation position and LNB pol angle by using the arrows or inputting a value to find the desired satellite manually.</p> <ul style="list-style-type: none"> • Relative Azimuth: displays the antenna relative azimuth angle. • Absolute Azimuth: sets the antenna absolute azimuth angle. • Elevation: sets the elevation angle. • LNB Pol Angle: sets the LNB pol angle
③	Thresholds Setting	<p>Sets current detect level threshold and tracking level threshold.</p> <ul style="list-style-type: none"> • Detect Level: sets the current detect level threshold. • Tracking Level: sets the current tracking level threshold. • Tx Enable: sets the TX enable threshold. <p>Click the "Apply" button to apply the settings to the system.</p>
④	Search Parameter	<p>Sets the time-out, search step and search range.</p> <ul style="list-style-type: none"> • Wait Time (sec): sets the time-out for automatic initiation of a search after the signal level drops below the pre-defined threshold value. • Search Step(°): sets increment step size. • Search1/3: sets Search 1 & 3 search range. Search is conducted in a two-axis pattern consisting of alternate movements in azimuth and elevation as forming an expanding square. • Search2: this is reserved for future use. <p>Click the "Apply" button to apply the settings to the system.</p>
⑤	Conical Range	<p>The relative force of the motors controlling azimuth and elevation. Sets the conical range while the antenna is in tracking mode.</p> <p>Click the "Apply" button to apply the settings to the system.</p>
⑥	Sensor Calibration	<p>Enter "Setup Mode" to modify settings.</p> <p>Adjusts the elevation to offset the angle difference between the mechanical elevation angle and actual elevation angle.</p> <p>Click the "Apply" button to apply the settings to the system.</p>
⑦	Tilt Sensor Bias	<p>NOTE: <i>The tilt values of the elevation and cross-level axes were calibrated to the optimal condition at the factory prior to shipment. However, when the antenna MCU unit or fixed sensor unit is replaced, the elevation and the cross-level axes must be checked by adjusting tilt and rate sensor value. Refer to the replacement manual for detailed procedures. The separate device (e.g. level indicator) for manual adjustment is not provided by Intellian.</i></p> <p>Enter "Setup Mode" to modify settings.</p> <p>Maintains the elevation and the cross-level axes in order to keep the pedestal parallel to the horizon.</p> <ul style="list-style-type: none"> • Ready: click the "Ready" button to bring the elevation and cross-level to 0. • EL/CL: selects "EL"/"CL" and click the Up and Down arrow keys to adjust the elevation and cross-level. <p>Click the "Restart" button on the top menu to restarts the antenna system.</p>

No.	Item	Description
⑧	Rate Sensor Bias	<p>NOTE: The rate values of the azimuth, elevation, and cross-level axes were calibrated to the optimal condition at the factory prior to shipment. If the additional rate adjustment is required, make sure that the antenna is placed on a rigid and flat platform. During the calibration process, the antenna must avoid any motion as it can affect the antenna's performance.</p> <p>Enter "Setup Mode" to modify settings.</p> <p>Calibrates DC voltage output from the three rate sensors used to sense antenna motion in azimuth, elevation and cross-level axes. These are used to sense antenna motion that corresponds to the ship's motion (roll, pitch, and yaw) for stabilizing the pedestal. The DC voltage output from each of the rate sensors may vary by an amount which is directly proportional to the direction and rate of motion induced on it.</p> <ul style="list-style-type: none"> Rate Sensor Calibration: click the "Rate Sensor Calibration" button to calibrate the rate sensor. The indicator left of the help button shows the rate sensor calibration status. (Black: the calibration is ready to start. Blue: the calibration is completed. Red: the calibration is failed. Green: the calibration is in process.) <p>Click the "Set Rate Sensor Bias" button to apply the settings to the system.</p>
⑨	LNB Pol Sensor Calibration (Skew)	<p>Calibrates the LNB pol angle when the control board, the skew motor or belt is replaced.</p> <ul style="list-style-type: none"> Sat Skew Offset: displays the skew offset value. Mechanica Offset: displays the skew offset value. The indicator right of the value box shows the skew offset status. (Blue: Mechanical skew offset value is less than ± 10 degrees. Red: Mechanical skew offset value is more than ± 10 degrees.) Consolidated Offset: displays the consolidated offset value. Pol Sensor Calibration: calibrates the skew motor and check the skew range. Mechanical Skew Offset reset: the mechanical skew offset is present in the factory with a default value (0, 1 or 2) depending on the assembly status. Resetting of the mechanical skew offset may be required when the satellite skew offset is unknown (Consolidated Skew Offset = satellite skew offset + mechanical skew offset). Due to each satellite having its own skew offset, Intellian recommends you check with your service provider or satellite operator to get the satellite skew offset value and input it in "SETUP main menu → Satellite → Satellite Information → Skew Offset" rather than resetting the mechanical skew offset directly.
⑩	Antenna Mode	<p>Sets the Idle mode to motor brakes to check the antenna's movement.</p> <ul style="list-style-type: none"> Set Idle Mode: Enter "Setup Mode" to modify settings. Releases the elevation and cross-level motor brakes. Reboot: reboots the system. The antenna will restart.

Tracking Satellite Setting

The screenshot shows the 'Tracking Satellite Setting' configuration page. It includes a sidebar with navigation options like Ship, Antenna, Satellite, Network, Modem/BUC, SNMP, Backup & Restore, and Mediator. The main content area is titled 'Tracking Satellite Setting' and contains several sections:

- 1 Tracking Satellite Setting**: The overall configuration page.
- 2 Satellite Information**: Fields for Satellite Name (SAT_113E), Longitude (113.15), Skew Offset (0), Local Frequency (11300), RX Polarization (Vertical), TX Polarization (Horizontal), and Identify (Modem Lock selected).
- 3 NBD Information**: Fields for Frequency (1329200) and Reserved Parameter (2000).
- 4 Eutel Satellite**: Eutel Sat option set to On.
- 5 Modem Lock Use for Verification**: Modem Verify option set to On.

No.	Item	Description
①	Tracking Satellite Setting	Sets the current tracking satellite settings.
②	Satellite Information	<p>Sets the current tracking satellite settings.</p> <ul style="list-style-type: none"> • Satellite Name: sets the satellite name. • Longitude(°): sets the satellite orbit position. • Skew Offset(°): sets the skew offset. • Local Frequency (MHz): sets the local frequency. • RX Polarization: sets the current RX polarization. • TX Polarization: sets the current TX polarization. • Identify: sets the lock setting type (Modem Lock / DVB Lock) for satellite tracking. <p>Click the "Apply" button to apply the settings to the system.</p>
③	NBD Information	<p>Sets NBD mode's tracking information.</p> <ul style="list-style-type: none"> • Frequency (kHz_IF): sets the tracking frequency. • Reserved Parameter(kHz): sets the reserved parameter. <p>Click the "Apply" button to apply the settings to the system.</p>
④	Eutel Satellite	<p>Select "ON" when the antenna is tracking the Eutelsat satellite. With this option enabled, a defined skew angle for each Eutelsat satellite is automatically applied without allowing a manual modification to the skew offset value.</p> <p>Click the "Apply" button to apply the settings to the system.</p>
⑤	Modem Lock Use for Verification	<p>Verifies the modem lock status whether the modem lock function is using or not.</p> <ul style="list-style-type: none"> • Modem Verify: choose whether to use the modem lock function or not. (On / Off) <p>Click the "Apply" button to apply the settings to the system.</p>

Network Configuration

This function is available after performing the "iARM Save & Reboot" on page 79.

The screenshot shows the 'Network Configuration' page with the following sections:

- 1 Network Configuration** (Sidebar)
- 2 Management Interface Configuration**: IP Address (192.168.2.1), Subnet Mask (255.255.255.0), Lease Start Address (192.168.2.2), Lease End Address (192.168.2.30), Lease Time (min) (180).
- 3 WiFi Access Point Configuration**: AP (Disable/Enable), SSID (intellian-4NX), Channel (6), Authentication Type (Open), Password (masked), Max Stations (10), SSID Broadcast (Disable/Enable).
- 4 Network Service Configuration**: Telnet Service (Disable/Enable), HTTPS Port (443), SSH Service (Disable/Enable). Buttons: Cancel, Apply.
- 5 Sys Log Configuration**: Management Server (No/Yes), Server IP (192.168.1.1), UDP Port (514), Message Type (Error, Major, Minor, Diagnosis, Periodic, Special, Setting, Notice), Syslog Target Level (LOG NOTICE). Buttons: Cancel, Apply.
- 6 Radius Configuration**: Client (Disable/Enable), Server IP (192.168.1.10), Timeout (5), Server Secret (testing123). Buttons: Cancel, Apply.

No.	Item	Description
①	Network Configuration	Sets the ACU's Internal IP address and ports.
②	Management Interface Configuration	<p>Sets the Management Port's network configuration. The Management Port is located on the ACU front panel.</p> <ul style="list-style-type: none"> • IP Address: sets the network IP address (Factory default: 192.168.2.1). • Subnet Mask: sets the subnet mask (Factory default: 255.255.255.0). • Lease Start Address: sets the lease IP address start range. • Lease End Address: sets the lease IP address end range. • Lease Time: sets IP the lease address update time. <p>Click the "Apply" button to apply the settings to the system.</p>

No.	Item	Description
③	Wi-Fi Access Point Configuration	<p>Sets the Wi-Fi access point configuration.</p> <ul style="list-style-type: none"> • AP: sets the AP status (Disable / Enable). • SSID: the SSID is the network name shared among all devices in a wireless network. The SSID must be identical for all devices in the wireless network. It is case-sensitive and must not exceed 32 alphanumeric characters, which may be any keyboard character. Make sure this setting is the same for all devices in your wireless network. • Channel: selects an appropriate channel from the list provided to correspond with your network settings. All devices in your wireless network must use the same channel in order to function correctly. Try to avoid conflicts with other wireless networks by choosing a channel where the upper and lower three channels are not in use. • Authentication Type: the module supports an authentication mode that the 802.11 device uses when it authenticates and associates with an access point or IBSS cell. • Password: sets the Wi-Fi access password. • Max Stations: sets the max stations. • Disable SSID Broadcast: sets the disable SSID broadcast status (Disable / Enable). <p>Click the "Apply" button to apply the settings to the system.</p>
④	Network Service Configuration	<p>Sets the network service configuration</p> <ul style="list-style-type: none"> • Telnet Service: sets the telnet service (Disable / Enable). • HTTPS Port: sets the HTTPS port number. • SSH Service: sets the SSH service status (Disable / Enable). <p>Click the "Apply" button to apply the settings to the system.</p>
⑤	Sys Log Configuration	<p>Sets the system log configuration. Antenna sends log messages according to the emergency level. Enabling this function sends the message to your management server.</p> <ul style="list-style-type: none"> • Management Server: sets the management server status (No / Yes). • Server IP: sets the management server IP address. • UDP Port: sets the management port. • Message Type: selects message type (Intellian message level) to send to the management server (Lower number indicates higher emergency). • Syslog Target Level: if you select this target level, the management server receives a log message equal to or less than this level. <p>Click the "Apply" button to apply the settings to the system.</p>
⑥	Radius Configuration	<p>This menu is used when the network administrator needs to authorize user connections using Radius server.</p> <ul style="list-style-type: none"> • Client: sets the Radius authentication (Disable / Enable). • Server IP: sets the Radius server IP Address. • Timeout: sets the Timeout value in seconds for the authentication process. • Server Secret: sets the Pass-Phase. This should be matched between server and ACU. <p>Click the "Apply" button to apply the settings to the system.</p>



NOTE

NOTE

When clicking the "Apply" button after editing the system settings, this pop-up message will appear. If you want to automatically save and reboot the system, select the checkbox and click the "Confirm" button.

APTUS NX

All configuration changes made will be saved in the ACU and effective upon reboot.



Automatically Save&Reboot upon apply.

Cancel

Confirm

Modem/BUC Setting

Ship

Antenna

Satellite

Network

Modem/BUC 1

SNMP

Backup & Restore

Mediator

Modem/BUC Setting

2 Modem

Select Modem: IDIRECT OPENAMIP

Modem Port: ETHERNET

Modem Protocol: Open AMIP

GPS Out Sentence: GLL

Use Tx Mute: NO YES

Use Modem Lock: NO YES

Cancel Apply

2 Modem

Select Modem: USER SETTING

Modem Port: RS 232

Modem Protocol: IO Console

GPS Out Sentence: GLL

Use Tx Mute: NO YES

Use Modem Lock: NO YES

Tx Mute: LOW HIGH

Modem Lock: LOW HIGH

Cancel Apply

3 Modem Port Configuration

IP Address (ACU): 10.110.5.194

Subnet Mask: 255.255.255.240

Gateway: 10.110.5.193

DNS: 168.126.63.1

NAT Routing: Disable Enable

TCP Modem Protocol Port: 4001

UDP Modem Protocol Port: 49184

Cancel Apply

4 Modem Connection

Modem IP: 10.110.5.193

Port: 23

ID: admin

Password: Auto Connection

Cancel Connect

Last Update Date: 2018.10.22 5h:36m:46s

Connect: LOGGEDIN

RX SNR: 14.1

5 Beam Selector

Beam List	ID	Description
	85	ktsat-K8-RMVSAT(not in map)
	81	ktsat-K5-RMVSAT-Maritime Beam(not in map)
	57	ktsat-K6-RMVSAT/CMVSAT(not in map)
	27	ktsat-K5-RMVSAT(not in map) Current

Apply Lock Reboot Refresh

6 BUC Status

Refresh

BUC Type: 8W

BUC S/W Version: 4

Tx Status: Off

PLL Lock: Fail

Temperature(C): 28°C

Checksum: Normal

Tx Forward Power: 0.1 W (20.83 dBm)

7 BUC Setting

Tx Status: Off On

Cancel Apply

Compensation Margin (dB): 0

Cancel Apply

8 Newtec Modem Monitor

dBm: 0

Es/NO: 0

Ntc_s Request Delay Time (ms): 1000

Cancel Apply

No.	Item	Description
①	Modem/BUC Setting	Sets the modem and BUC interface.
②	Modem	<p>Sets the interface between the ACU and the satellite modem.</p> <ul style="list-style-type: none"> • Select Modem: selects your modem type from the "Select Modem" drop-down list for loading pre-configuration which type of modem is used. The settings related to the modem interface will be set automatically once the modem type is selected. When you select "USER SETTING" the rest settings can be changed separately. • Modem Port: selects a proper data communication port of the ACU to interface with the satellite modem. • Modem Protocol: selects a proper communication protocol of the ACU to interface with the modem. • GPS Out Sentence: selects the GPS out sentence type. • Use Tx Mute: selects whether or not to use the "Tx Mute" function from the modem. • Use Modem Lock: selects whether or not to use "Modem Lock" function from the modem. • Tx Mute: <i>this function can be edited when "User Setting" option is selected in the "Select Modem" menu.</i> It selects the TX Mute option. The TX Mute is a transmit inhibit output from the ACU to disable/mute the modem transmit through a 5 V (HIGH) or 0 V (LOW) current whenever the antenna is blocked, searching, or pointed 0.5 degrees off from peak satellite position. • Modem Lock: <i>this function can be edited when "User Setting" option is selected in the "Select Modem" menu.</i> It selects the Modem Lock option. The Modem Lock provides a logic input through a 5V (HIGH) or 0 V (LOW) current to the ACU to identify when the system is on the correct satellite. <p>Click the "Apply" button to apply the settings to the system.</p>
③	Modem Port Configuration	<p>This function is available after performing the "iARM Save & Reboot" on page 79.</p> <p>Sets the ACU's internal IP address, routing, and ports.</p> <ul style="list-style-type: none"> • IP Address: sets the network IP address is assigned to. <p>CAUTION: when using Dual Antenna System, the "IP Address" of the "Modem Port Configuration" for the Primary ACU and the Secondary ACU must be specified differently. If you specified the same IP address, the system is not connected to a modem and can not use a dual antenna system function.</p> <ul style="list-style-type: none"> • Subnet Mask: sets the subnet mask is assigned to. • Gateway: sets the gateway is assigned to. • DNS: sets the current default DNS address is assigned to. • NAT Routing: sets the NAT routing (Enable / Disable). • TCP Modem Protocol Port: sets the TCP port number for modem protocols using TCP as transport. • UDP Modem Protocol Port: sets the UDP port number for modem protocols using UDP as transport. <p>Click the "Apply" button to apply the settings to the system.</p>

No.	Item	Description
④	Modem Connection	<p>Sets the information for connecting with the modem.</p> <ul style="list-style-type: none"> • Modem IP: sets the modem IP address. • Port: sets the connection Port. • ID: sets the connection ID. • Password: sets the connection Password. • Auto Connect: the enabling auto connect and rebooting the ACU will save connection data and will auto connect once ACU is powered on next time. • Last Update Date: displays the last update date and time. • Connect: displays last updated data and time of the modem data. • RX SNR: displays the RX SNR data.
⑤	Beam Selector	<p><i>This menu can be edited when "iDirect Open AMIP Modem" option is selected in the "Select Modem" menu.</i></p> <p>Selects the target satellite that you want to track.</p> <ul style="list-style-type: none"> • Beam List: choose the target satellite in the list. • Apply: click the "Apply" button to apply the selected beam to the system, it will switch to the beam desired. • Lock: within condition given for test or commissioning, if the user wishes to stay on a selected beam, the user can lock the beam by clicking the "Lock" button. This will lead modem stays with the user-selected beam. • Refresh: if you do not want to lock the beam, click the "Reboot" button. • Refresh: click the "Refresh" button to load the latest satellite list.
⑥	BUC Status	<p><i>This function is activated depending on the BUC type.</i></p> <p>Displays current BUC status information (BUC Type, BUC S/W Version, Tx Status, PLL Lock, Temperature, Checksum and Tx Power Level).</p> <ul style="list-style-type: none"> • To Refresh BUC information: click the "To Refresh BUC information" button to update the BUC status information.
⑦	BUC Setting	<p><i>This function is activated depending on the BUC type.</i></p> <p>Sets the BUC setting options.</p> <ul style="list-style-type: none"> • Tx Status: selects whether or not to use the Tx connection (ON or OFF). • Attenuator (dB): sets attenuation value. <p>Click the "Apply" button to apply the settings to the system.</p>
⑧	Newtec Modem Monitor	<p><i>This menu can be edited when "Newtec AMIP" option is selected in the "Select Modem" menu.</i></p> <p>Sets the Newtec Modem options.</p> <ul style="list-style-type: none"> • dBm: displays the signal level from the Newtec Modem. • Es/NO: displays the Es/NO value from the Newtec Modem. • Ntc_s Request Delay Time (ms): sets the period which the system receives the signal level (dBm) and Es/NO value from the Newtec Modem. <p>Click the "Apply" button to apply the settings to the system. Then perform the "iARM Save & Reboot" on page 79.</p>

SNMP Setting

No.	Item	Description
①	SNMP Setting	Sets SNMP configuration.
②	SNMP Agent Configuration	<p>Sets the SNMP configuration.</p> <ul style="list-style-type: none"> • SNMP V1/V2 Status: sets SNMP mode. • V1/V2 Community Name: sets SNMP V2 community name. • V3 Authentication Type: sets SNMP V3 authentication mode. • V3 Authentication Encoding: sets SNMP V3 authentication encoding. • V3 Username: sets the V3 username of the SNMP Agent. • V3 Password: sets the V3 password of the SNMP Agent. The password must be at least eight character string. • V3 Private Encoding: sets SNMP V3 Private Encoding. • V3 Private Password: sets the V3 password of the SNMP Agent. The Password is must be at least eight character string. • TRAP IP/Port: sets the V3 password of the SNMP Agent. The Password must be at least eight character string. • TRAP Parameter: sets the SNMP trap specific parameter. <p>Click the "Apply" button to apply the settings to the system. Then perform the "iARM Save & Reboot" on page 79.</p>


Backup & Restore Setting

The screenshot shows the 'Backup & Restore' configuration page. It is organized into two main sections: 'Antenna Backup & Restore' and 'iARM Backup & Restore'.
 - **Antenna Backup & Restore:** Includes 'Antenna Backup' with radio buttons for 'ACU' and 'PC' (PC is selected), and a 'Backup' button. Below it is 'Antenna Restore' with radio buttons for 'ACU' and 'PC' (PC is selected), a 'Browse' button for file selection, and a 'Restore' button.
 - **iARM Backup & Restore:** Includes 'iARM Backup' with radio buttons for 'Flash' and 'PC' (PC is selected), and a 'Backup' button. Below it is 'iARM Restore' showing 'Last Backup Time/Date to ACU: 2018-08-14 07:07:25', radio buttons for 'Flash' and 'PC' (PC is selected), a 'Browse' button, and a 'Restore' button.
 - **Navigation:** A sidebar on the left lists system components: Ship, Antenna, Satellite, Network, Modem/BUC, SNMP, Backup & Restore (highlighted with a '1'), and Mediator. The 'Backup & Restore' section is further divided into 'Antenna Backup & Restore' (highlighted with a '2') and 'iARM Backup & Restore' (highlighted with a '3').


No.	Item	Description
①	Backup & Restore Setting	Backs up & Restores the antenna setting files and the iARM files.
②	Antenna Backup & Restore	<ul style="list-style-type: none"> Antenna Backup: Backs up antenna setting files to ACU or PC. Click the "Backup" button to apply the settings to the system. Antenna Restore: Enter "Setup Mode" to modify settings. Restores the antenna setting files by using the setting files saved from ACU or PC. Click the "Restore" button to apply the settings to the system.
③	iARM Backup & Restore	<ul style="list-style-type: none"> iARM Backup: Backs up iARM files to Flash (internal ACU) or PC. Click the "Backup" button to apply the settings to the system. iARM Restore: Restores the iARM files by using the setting files saved from Flash (internal ACU) or PC. Click the "Restore" button to apply the settings to the system then the iARM will automatically reboot.

Mediator Setting (Optional: For Dual Antenna System)

This function is available when using Dual Antenna System.

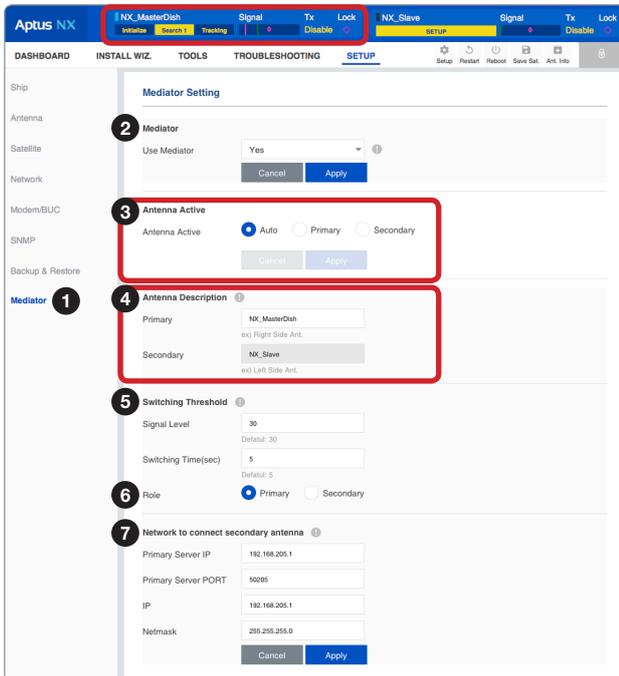

Primary Antenna's AptusNX View

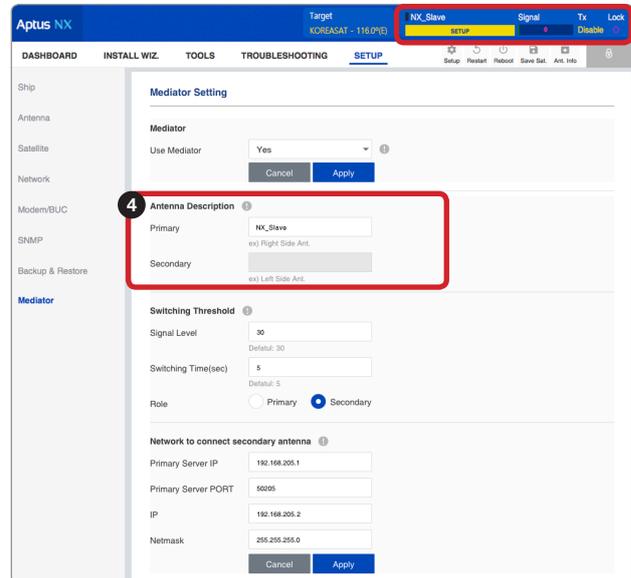

Secondary Antenna's AptusNX View

No.	Item	Description
①	Mediator Setting	The Intellian's new ACU has embedded Dual Antenna Mediator function, which utilizes to switch between two Intellian VSAT antenna systems simultaneously. When one antenna is blocked by obstacles or has suddenly lost service, another antenna will immediately provide the fail-safe operation to maintain the highest levels of system performance and reliability.
②	Mediator	Sets whether or not to use the dual antenna mediator function. <ul style="list-style-type: none"> • Yes: enable the mediator function to use the Dual Antenna System. The submenu is shown for detailed function settings. • No: disable the mediator function. Click the "Apply" button to apply the settings to the system. Then perform the "iARM Save & Reboot" on page 79.
③	Antenna Active	This function is available in the Primary Antenna's AptusNX when both Primary Role's ACU and Secondary Role's ACU are connected to the system. Sets the method for selecting the active antenna. The active antenna (either primary or secondary antenna) is communicating (Tx/Rx) with a satellite. <ul style="list-style-type: none"> • Auto: this method is recommended. Automatically switch-over to the primary or secondary antenna which is no blockages and no errors. • Primary: manually switch-over to the primary antenna which is connected to the modem and the gyrocompass. • Secondary: manually switch-over to the secondary antenna. Click the "Apply" button to apply the settings to the system.

No.	Item	Description
④	Antenna Description	<p>This menu is differently shown in the Primary Antenna's AptusNX and the Secondary Antenna's AptusNX.</p> <p>To clearly distinguish the primary antenna and the secondary antenna, enter a description to each antenna.</p> <ul style="list-style-type: none"> • Primary: you can enter the description in the primary antenna's AptusNX (Editable). This menu is not shown in the secondary antenna's AptusNX. • Secondary: you can enter the description in secondary antenna's AptusNX (Editable). This menu is only verified in the primary antenna's AptusNX (Read-only). <p>Click the "Apply" button to apply the settings to the system. Then perform the "iARM Save & Reboot" on page 79.</p>
⑤	Switching Threshold	<p>When two antennas are in Tracking mode and have no blockage, the allowable value will apply for the automatic switching.</p> <ul style="list-style-type: none"> • Signal Level: if the signal level is less than the set value, the active antenna is automatically switched (Default: 30). • Switching Time (sec): if the difference value of signal between the active antenna and inactive antenna is more than the set value which is set in the "Signal Level" menu and maintained the difference value for a set time, the active antenna is automatically switched. Set the switching time value (Default: 5). <p>Click the "Apply" button to apply the settings to the system. Then perform the "iARM Save & Reboot" on page 79.</p>
⑥	Role	<p>Assigns the antenna's role of the primary antenna or secondary antenna.</p> <ul style="list-style-type: none"> • Primary: when running the master ACU which connected to the modem and the gyrocompass, select the primary role. The master ACU is assigned and operated as the primary antenna, which will communicate with the target satellite. • Secondary: when running the slave ACU, select the secondary role. The secondary ACU is assigned and operated as the secondary antenna, which will be on standby and ready to assume primary antenna role to provide better service in tracking failure and low signal level status. <p>Click the "Apply" button to apply the settings to the system. Then perform the "iARM Save & Reboot" on page 79.</p>
⑦	Network to connect secondary antenna	<p>Sets the primary antenna's network information to transmit to the secondary antenna.</p> <ul style="list-style-type: none"> • Primary Server IP: enters the server IP address (Default: 192.168.205.1). • Primary Server PORT: sets a server port number for the primary antenna (master) and the secondary antenna, which must be the same number (Default: 50205). • IP: when the antenna role is primary, enter the same IP address with the "Primary Server IP". When the antenna role is secondary, enter the different IP address with the "Primary Server IP" but it must be assigned to the same network class as the primary (Default: 192.168.205.1). • Netmask: the primary and secondary netmasks must be the same (Default: 255.255.255.0). <p>Click the "Apply" button to apply the settings to the system. Then perform the "iARM Save & Reboot" on page 79.</p>



CAUTION

CAUTION

When using Dual Antenna System, the "IP Address" of the "Modem Port Configuration" for the Primary ACU and the Secondary ACU must be specified differently. Refer to the "Modem/BUC Setting" on page 95. If you specified the same IP address, the system is not connected to a modem and can not use a dual antenna system function.

Specification

Technical Specification

Antenna System		
Antenna Radome Height		1229 mm (48.38")
Antenna Radome Diameter		Ø1131mm (44.52")
Antenna Reflector Diameter		Ø850 mm (33.46")
Antenna Unit Weight (With Radome)		96 kg (211.6 lbs)
Platform		3-axis: Azimuth, Elevation, Cross-level
Positioning		3-axis Velocity Mode Servo Control: Azimuth, Elevation, Cross-Level
Azimuth Range		Unlimited
Elevation Range		-20° to +115°
Cross-level Range		Up to ± 37°
Stabilization Accuracy		0.2° peak mispointing @ max ship motion condition
Motor Brake System		Dynamic braking
Ship's motion	Roll	± 25° at 6 second
	Pitch	± 15° at 6 second
	Yaw	± 8° at 6 second
	Turning rate	Up to 12°/sec & 5°/sec ²
RX	Frequency	10.7 ~ 12.75 GHz
	Gain	38.9 dBi @ 11.7GHz (without radome)
Tx	Frequency	13.75 ~ 14.5 GHz
	Gain	40.7 dBi @ 14.25GHz (without radome)
G/T over Rx Range at elevation angle > 30 deg.		> 18.3 dB/K @ 12.75GHz (with radome)
Polarization		Linear Polarization (Co & Cross-pol)
BUC		NJRC 8W (standard), 16W/25W (optional)
LNB		Intellian PLL LNB
ACU to ADU Cable (Antenna Cable)		Single 50-ohm coax cable for Rx, Tx, FSK, Reference and Power from ACU to ADU
Input power		48VDC (max 300W) through Rx/Tx RF Cable

Antenna Control Unit (ACU)	
ACU Size	431mm x 350mm x 44.3mm
ACU Weight	5.2Kg
Display	256x64 Graphic OLED
Key	Two Push Keys
LED Indicator	Three LEDs for Power, Tracking and Error
USB Port	2ea (front panel), 1ea (rear panel, for Wi-Fi dongle)
Ship's Gyrocompass Interface	NMEA 2000, NMEA 0183 (GYRO)
GPS	NMEA Out
Serial Interface	RS-232C (57600bps 8, N, 1)
Mediator Interface	Embedded in ACU, Primary / Secondary control on AptusNX
Modem Interface	Ethernet port, RS-232C/422C, I/O Console
Modem Protocol	iDirect, Comtech, SatLink, Hughes, GILAT, Newtec, IPSTAR
Ethernet port	RJ45, TCP/IP connection
Input power	100 ~ 240 VAC, 50~60Hz, 3A

Environmental Specification

Test	Intellian Standard	
Temperature (ADE)	Operational	IEC-60945 (-25°C to +55°C/Power On)
	Survival	IEC-60945 (-40°C to +80°C / Powered On and a non-functional state)
	Storage	IEC-60945 (-40°C to +85°C/Power off)
Temperature (ACU)	Operational	-15°C to +55°C (IEC-60945)
	Survival	-25°C to +70°C (IEC-60945)
	Storage	-40°C to +85°C (IEC-60945)
Wind	56 m/sec (125 mph)	
Humidity	IEC-60068-2-30 Upper test Temp.: +40°C (-3), Humidity 98% Lower test Temp.: +15°C (+3), Humidity 71% ~ 78%	
Vibration	Operational	IEC-60945
	Survival	IEC-60721-3-6 Class 6M3 DNV Standard No. 2.4, Class C
Shock	Operational	IEC-60068-2-27 Method Ea 20g, 7 ms
	Survival (Transient)	IEC-60721-3-6 Class 6M3 type II 30g, 6 ms
	Survival (Bump)	IEC-60068-2-29 Method Eb 25g, 6 ms
Salt mist	Saline solution : 5 ±1 % NaCl Storage period: 7 Days (IEC-60945)	
Waterproofing	IPX6 (IEC-60529)	
Solar	IEC 60945-Annex B. Operational +32°C air temperature with the addition of 670 Watt/m ² solar radiation	

Warranty

Warranty Policy

This product is warranted by Intellian Technologies Inc., to be free from defects in materials and workmanship for a period of THREE (3) YEARS on parts and TWO (2) YEARS on labor performed at Intellian Technologies, Inc. service center from the purchased date of the product.

Intellian Technologies, Inc. warranty does not apply to product that has been damaged and subjected to accident, abuse, misuse, non-authorized modification, incorrect and/or non-authorized service, or to a product on which the serial number has been altered, mutilated or removed.

It is required to present a copy of the purchase receipt issued by Intellian Technologies, Inc. that indicates the date of purchase for after-sales service under the warranty period. In case of failure to present the purchase receipt, the warranty period will begin 30 days after the manufacturing production date of the product purchased.

Any product which is proven to be defective in materials or workmanship, Intellian Technologies, Inc. will (at its sole option) repair or replace during the warranty period in accordance with this warranty. All products returned to Intellian Technologies, Inc. under the warranty period must be accompanied by a return material authorization (RMA) number issued by the dealer/distributor from Intellian Technologies, Inc. and a copy of the purchase receipt as a proof of purchased date, prior to shipment. Alternatively, you may bring the product to an authorized Intellian Technologies, Inc. dealer/distributor for repair.


Appendix A

Using Dual Antenna System (Optional)

The Intellian's new ACU has embedded Dual Antenna Mediator function, which utilizes to switch between two Intellian VSAT antenna systems simultaneously. When one antenna is blocked by obstacles or has suddenly lost service, another antenna will immediately provide the fail-safe operation to maintain the highest levels of system performance and reliability. It ensures always-on broadband service by reducing the out of service time.

To use the Dual Antenna System, make sure that the antenna system components are properly installed. Refer to the "Dual Antenna System Configuration (Optional)" on page 34 for more details.

Access the AptusNX (IP Address: 192.168.2.1) to manage and control the Dual Antenna System. You can check the status of Dual Antenna System via AptusNX. The information for two antennas (Primary and Secondary Antenna) is displayed on the Top Menu and the three panels (Dual Antenna Status, Primary Antenna and Secondary Antenna) is displayed on the dashboard screen.

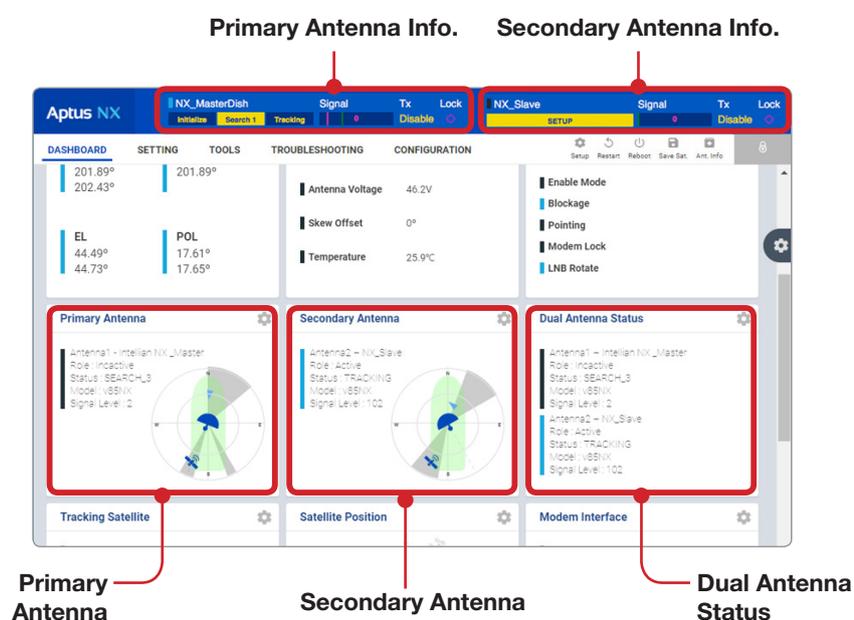

To control and manage the Dual Antenna System, go to the "SETUP" → "Mediator" menu. Refer to the "Mediator Setting (For Dual Antenna System)" on page 100 for more details. Also using the "Shortcut" button on right side of the panel at the "DASHBOARD" menu, you can easily access the setting page.

